




# OPERATORS MANUAL MARINE DIESEL GENERATORS

20.0 BEDA 60 Hz    16.0 BEDA 50 Hz  
25.0 BED 60 Hz    20.0 BED 50 Hz  
32.0 BEDA 60 Hz    25.0 BEDA 50 Hz

Single and Three Phase

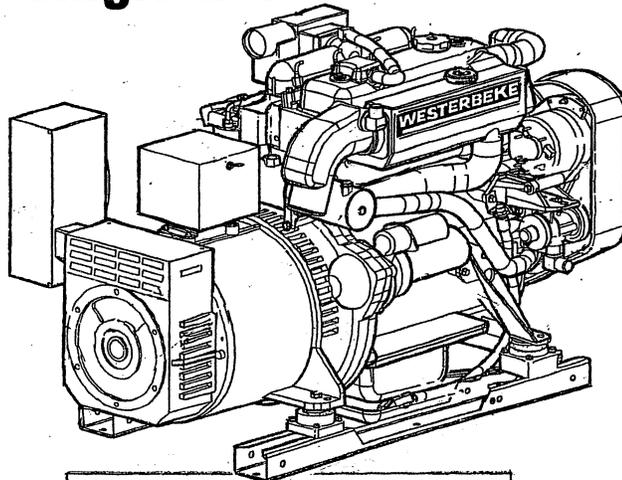

PUBLICATION. NO.039685  
REVISION 5  
AUGUST 2017



WESTERBEKE CORPORATION • 150 JOHN HANCOCK ROAD  
MYLES STANDISH INDUSTRIAL PARK • TAUNTON MA 02780  
WEBSITE: [WWW.WESTERBEKE.COM](http://WWW.WESTERBEKE.COM)

 Member National Marine Manufacturers Association

**CALIFORNIA  
PROPOSITION 65 WARNING**

**Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.**

** WARNING:**

***Exhaust gasses contain Carbon Monoxide, an odorless and colorless gas. Carbon Monoxide is poisonous and can cause unconsciousness and death. Symptoms of Carbon Monoxide exposure can include:***

- ***Dizziness***
- ***Nausea***
- ***Headache***
- ***Weakness and Sleepiness***
- ***Throbbing in Temples***
- ***Muscular Twitching***
- ***Vomiting***
- ***Inability to Think Coherently***

***IF YOU OR ANYONE ELSE EXPERIENCE ANY OF THESE SYMPTOMS, GET OUT INTO THE FRESH AIR IMMEDIATELY. If symptoms persist, seek medical attention. Shut down the unit and do not restart until it has been inspected and repaired.***

# SAFETY INSTRUCTIONS

## INTRODUCTION

*Read this safety manual carefully. Most accidents are caused by failure to follow fundamental rules and precautions. Know when dangerous conditions exist and take the necessary precautions to protect yourself, your personnel, and your machinery.*

*The following safety instructions are in compliance with the American Boat and Yacht Council (ABYC) standards.*

## PREVENT ELECTRIC SHOCK

**⚠ WARNING: Do not touch AC electrical connections while engine is running, or when connected to shore power. Lethal voltage is present at these connections!**

- Do not operate this machinery without electrical enclosures and covers in place.
- Shut off electrical power before accessing electrical equipment.
- Use insulated mats whenever working on electrical equipment.
- Make sure your clothing and skin are dry, not damp (particularly shoes) when handling electrical equipment.
- Remove wristwatch and all jewelry when working on electrical equipment.

## PREVENT BURNS — HOT ENGINE

**⚠ WARNING: Do not touch hot engine parts or exhaust system components. A running engine gets very hot!**

- Monitor engine antifreeze coolant level at the plastic coolant recovery tank and periodically at the filler cap location on the water jacketed exhaust manifold, but only when the engine is COLD.

**⚠ WARNING: Steam can cause injury or death!**

- In case of an engine overheat, allow the engine to cool before touching the engine or checking the coolant.

## PREVENT BURNS — FIRE

**⚠ WARNING: Fire can cause injury or death!**

- Prevent flash fires. Do not smoke or permit flames or sparks to occur near the carburetor, fuel line, filter, fuel pump, or other potential sources of spilled fuel or fuel vapors. Use a suitable container to catch all fuel when removing the fuel line, carburetor, or fuel filters.
- Do not operate with the air cleaner/silencer removed. Backfire can cause severe injury or death.
- Do not smoke or permit flames or sparks to occur near the fuel system. Keep the compartment and the engine/generator clean and free of debris to minimize the chances of fire. Wipe up all spilled fuel and engine oil.
- Be aware — diesel fuel will burn.

## PREVENT BURNS — EXPLOSION

**⚠ WARNING: Explosions from fuel vapors can cause injury or death!**

- Follow re-fueling safety instructions. Keep the vessel's hatches closed when fueling. Open and ventilate cabin after fueling. Check below for fumes/vapor before running the blower. Run the blower for four minutes before starting your engine.
- All fuel vapors are highly explosive. Use extreme care when handling and storing fuels. Store fuel in a well-ventilated area away from spark-producing equipment and out of the reach of children.
- Do not fill the fuel tank(s) while the engine is running.
- Shut off the fuel service valve at the engine when servicing the fuel system. Take care in catching any fuel that might spill. DO NOT allow any smoking, open flames, or other sources of fire near the fuel system or engine when servicing. Ensure proper ventilation exists when servicing the fuel system.
- Do not alter or modify the fuel system.
- Be sure all fuel supplies have a positive shutoff valve.
- Be certain fuel line fittings are adequately tightened and free of leaks.
- Make sure a fire extinguisher is installed nearby and is properly maintained. Be familiar with its proper use. Extinguishers rated ABC by the NFPA are appropriate for all applications encountered in this environment.

# SAFETY INSTRUCTIONS

## ACCIDENTAL STARTING

**⚠ WARNING: Accidental starting can cause injury or death!**

- Turn OFF the DC breaker on the control panel or turn the unit's battery selector switch to OFF before servicing the engine.
- Make certain all personnel are clear of the engine before starting.
- Make certain all covers, guards, and hatches are re-installed before starting the engine.

## BATTERY EXPLOSION

**⚠ WARNING: Battery explosion can cause injury or death!**

- Do not smoke or allow an open flame near the battery being serviced. Lead acid batteries emit hydrogen, a highly explosive gas, which can be ignited by electrical arcing or by lit tobacco products. Shut off all electrical equipment in the vicinity to prevent electrical arcing during servicing.
- Never connect the negative (-) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together. Sparks could ignite battery gases or fuel vapors. Ventilate any compartment containing batteries to prevent accumulation of explosive gases. To avoid sparks, do not disturb the battery charger connections while the battery is being charged.
- Avoid contacting the terminals with tools, etc., to prevent burns or sparks that could cause an explosion. Remove wristwatch, rings, and any other jewelry before handling the battery.
- Always turn the battery charger off before disconnecting the battery connections. Remove the negative lead first and reconnect it last when servicing the battery.

## BATTERY ACID

**⚠ WARNING: Sulfuric acid in batteries can cause severe injury or death!**

- When servicing the battery or checking the electrolyte level, wear rubber gloves, a rubber apron, and eye protection. Batteries contain sulfuric acid which is destructive. If it comes in contact with your skin, wash it off at once with water. Acid may splash on the skin or into the eyes inadvertently when removing electrolyte caps.

## TOXIC EXHAUST GASES

**⚠ WARNING: Carbon monoxide (CO) is a deadly gas!**

- Ensure that the exhaust system is adequate to expel gases discharged from the engine. Check the exhaust system regularly for leaks and make sure the exhaust manifold/water-injected elbow is securely attached.
- Be sure the unit and its surroundings are well ventilated. Run blowers when running the generator set or engine.
- Do not run the generator set or engine unless the boat is equipped with a functioning marine carbon monoxide detector that complies with ABYC A-24. Consult your boat builder or dealer for installation of approved detectors.
- For additional information, refer to ABYC TH-22 (educational information on Carbon Monoxide).

**⚠ WARNING: Carbon monoxide (CO) is an invisible odorless gas. Inhalation produces flu-like symptoms, nausea or death!**

- Do not use copper tubing in diesel exhaust systems. Diesel fumes can rapidly destroy copper tubing in exhaust systems. Exhaust sulfur causes rapid deterioration of copper tubing resulting in exhaust/water leakage.
- Do not install exhaust outlet where exhaust can be drawn through portholes, vents, or air conditioners. If the engine exhaust discharge outlet is near the waterline, water could enter the exhaust discharge outlet and close or restrict the flow of exhaust. Avoid overloading the craft.
- Although diesel engine exhaust gases are not as toxic as exhaust fumes from gasoline engines, carbon monoxide gas is present in diesel exhaust fumes. Some of the symptoms or signs of carbon monoxide inhalation or poisoning are:

Vomiting	Inability to think coherently
Dizziness	Throbbing in temples
Headache	Muscular twitching
Nausea	Weakness and sleepiness

## AVOID MOVING PARTS

**⚠ WARNING: Rotating parts can cause injury or death!**

- Do not service the engine while it is running. If a situation arises in which it is absolutely necessary to make operating adjustments, use extreme care to avoid touching moving parts and hot exhaust system components.

# SAFETY INSTRUCTIONS

- Do not wear loose clothing or jewelry when servicing equipment; avoid wearing loose jackets, shirts, sleeves, rings, necklaces or bracelets that could be caught in moving parts.
- Make sure all attaching hardware is properly tightened. Keep protective shields and guards in their respective places at all times.
- Do not check fluid levels or the drive belt's tension while the engine is operating.
- Stay clear of the drive shaft and the transmission coupling when the engine is running; hair and clothing can easily be caught in these rotating parts.

## HAZARDOUS NOISE

 **WARNING: High noise levels can cause hearing loss!**

- Never operate an engine without its muffler installed.
- Do not run an engine with the air intake (silencer) removed.

 **WARNING: Do not work on machinery when you are mentally or physically incapacitated by fatigue!**

## OPERATORS MANUAL

Many of the preceding safety tips and warnings are repeated in your Operators Manual along with other cautions and notes to highlight critical information. Read your manual carefully, maintain your equipment, and follow all safety procedures.

## ENGINE AND GENERATOR INSTALLATIONS

Preparations to install an engine should begin with a thorough examination of the American Boat and Yacht Council's (ABYC) standards. These standards are a combination of sources including the USCG and the NFPA.

Sections of the ABYC standards of particular interest are:

- H-32 Ventilation for boats using diesel fuel
- H-33 Diesel Fuel Systems
- P-1 Installation of Exhaust Systems for Propulsion and Auxilliary Engines
- P-4 Marine Inboard Engines and Transmissions
- E-11 AC & DC Electrical Systems on Boats
- TA Batteries and Battery Chargers

All installations must comply with the Federal Code of Regulations (FCR).

## ABYC, NFPA AND USCG PUBLICATIONS FOR INSTALLING MARINE ENGINES AND GENERATORS

Read the following ABYC, NFPA and USCG publications for safety codes and standards. Follow their recommendations when installing your UNIVERSAL engine

ABYC (American Boat and Yacht Council)  
"Safety Standards for Small Craft"

Order From:

ABYC  
613 Third Dstreet, Suite 10  
Annapolis, MD 21403  
(410) 990-4460  
www.abycinc.org

NFPA (National Fire Protection Association)  
"Fire Protection Standard for Motor Craft"

Order From:

NFPA  
1 Batterymarch Park  
P.O. Box 9101  
Quincy, MA 02269-9101

USCG (United States Coast Guard)  
"CFR 33 AND CFR46"  
Code of Federal Regulations

Order From:

U.S. Government Printing Office  
Washington, D.C. 20404

# INSTALLATION

When installing WESTERBEKE engines and generators it is important that strict attention be paid to the following information:

## CODES AND REGULATIONS

Strict federal regulations, ABYC guidelines, and safety codes must be complied with when installing engines and generators in a marine environment.

## SIPHON-BREAK


For installations where the exhaust manifold/water injected exhaust elbow is close to or will be below the vessel's waterline, provisions must be made to install a siphon-break in the raw water supply hose to the exhaust elbow. This hose must be looped a minimum of 20" above the vessel's waterline. *Failure to use a siphon-break when the exhaust manifold injection port is at or below the load waterline will result in raw water damage to the engine and possible flooding of the boat.*

If you have any doubt about the position of the water-injected exhaust elbow relative to the vessel's waterline under the vessel's various operating conditions, *install a siphon-break.*

**NOTE:** *A siphon-break requires periodic inspection and cleaning to ensure proper operation. Failure to properly maintain a siphon-break can result in catastrophic engine damage. Consult the siphon-break manufacturer for proper maintenance.*

## EXHAUST SYSTEM

The exhaust system's hose **MUST** be certified for marine use. Corrugated Marine Exhaust Hose is recommended. The use of this type of hose allows for extreme bends and turns without the need of additional fitting and clamps to accomplish these bends and turns. In this regard, a single length of corrugated exhaust hose can be used. The system **MUST** be designed to prevent the entry of water into the exhaust system under any sea conditions and at any angle of vessels heel.



AVAILABLE FROM  
YOUR WESTERBEKE  
DEALER

SIPHON-BREAK WITH STAINLESS  
LOOP

**A detailed Marine Installation Manual covering gasoline and diesel, engines and generators, is supplied with each unit. A pdf is available to download from our website at [www.westerbeke.com](http://www.westerbeke.com).**

# TABLE OF CONTENTS

<b>Introduction</b> .....	2	Fuel Filters .....	17
Warranty Procedures .....	2	Changing the Fuel Filters.....	17
Customer Identification Card .....	2	Feed Pump Strainer (32 KW) .....	17
Product Software .....	2	Bleeding the Fuel System .....	18
Notes, Cautions and Warnings .....	2	Fuel Pressure Gauge.....	18
Serial Number Location .....	3	Fuel Additives .....	18
Understanding the Diesel Engine.....	3	Spares .....	18
Ordering Parts .....	3	<b>Engine Oil Change</b> .....	19
Spares and Accessories .....	3	Engine Oil Change .....	19
<b>Control Panels</b> .....	4	Oil Pressure .....	19
Main Panel .....	4	<b>Remote Oil Filter</b> .....	20
Remote Panel .....	4	Installation .....	20
<b>Diesel Fuel, Engine Oil and Engine Coolant</b> .....	5	<b>DC Electrical System</b> .....	21
Diesel Fuel .....	5	Engine 12 Volt DC Control Circuit.....	21
Care Of The Fuel Supply .....	5	Battery Specification .....	21
Engine Oil .....	5	Battery Care .....	21
Oil Pressure .....	5	Glow Plugs.....	21
Engine Coolant.....	5	<b>DC Electrical System/Alternator</b> .....	22
Coolant Recovery Tank.....	5	Troubleshooting.....	22
<b>Preparations for Initial Start-Up</b> .....	6	Testing the Alternator .....	22
Prestart Inspection .....	6	<b>DC Electrical System Wiring Diagram</b> .....	24
Generator Voltage.....	6	<b>DC Electrical System Wiring Schematic</b> .....	25
<b>Starting/Stopping Procedure</b> .....	7	<b>Remote Start/Stop Panel</b> .....	25
The Starting System .....	7	<b>Electronic Governor</b> .....	26
Remote Starting Procedure .....	7	<b>Troubleshooting the Electronic Governor</b> .....	27
Starting Under Cold Conditions.....	8	<b>Engine Adjustments</b> .....	28
Stopping Procedure .....	8	Valve Clearance Adjustment .....	28
Remote Stopping Procedure.....	8	Drive Belt Adjustment .....	28
Safety Shut down Switches.....	8	Torquing Cylinder Head Bolts .....	29
High Exhaust Temperature Switch .....	8	Engine Compression .....	29
High Water Temperature Switch.....	8	Testing the Fuel Injectors .....	29
Low Oil Pressure Switch .....	8	Inspecting the Spray Pattern .....	30
Engine Circuit Breaker .....	8	<b>Engine Troubleshooting</b> .....	31
<b>Generator Break-In Procedure</b> .....	9	Troubleshooting Water Temp. and Oil Gauges.....	32
Description .....	9	<b>Generator Information</b> .....	33
After Start-up .....	9	Use of Electric Motors .....	33
Check List .....	9	<b>The BE Generator</b> .....	34
Generator Adjustments.....	9	Internal Wiring Schematics.....	35
<b>The Daily Routine</b> .....	10	<b>Generator AC Voltage Connections</b> .....	36
Check List .....	10	BE Three Phase (Six Wire) .....	37
Start the Generator .....	10	BE Three Phase (Twelve Wire).....	37
<b>Maintenance Schedule</b> .....	11	<b>Voltage Regulator Adjustments</b> .....	38
<b>Engine Cooling Circuit</b> .....	13	BE Troubleshooting .....	39
Description .....	13	<b>Shore Power Transfer Switch</b> .....	40
Fresh Water Circuit .....	14	<b>Lay-Up and Recommissioning</b> .....	41
Coolant Recovery Tank.....	14	<b>Specifications 20 KW BEDA Generator</b> .....	43
Changing Coolant.....	14	<b>Specifications 25 KW BED Generator</b> .....	45
To Refill the Coolant.....	14	<b>Specifications 32 KW BEDA Generator</b> .....	47
Thermostat.....	14	<b>Photo Identification 20 KW</b> .....	49
To Replace The Thermostat .....	14	<b>Photo Identification 25 KW</b> .....	50
Raw Water Cooling Circuit .....	14	<b>Photo Identification 32 KW</b> .....	51
Raw Water Pump .....	14	<b>Torque Specifications</b> .....	52
Changing the Raw Water Pump Impeller .....	14	<b>Standard Hardware Torques</b> .....	53
Heat Exchanger .....	14	<b>Metric Conversions</b> .....	54
Zinc Anode.....	14	<b>Suggested Spare Parts</b> .....	55
Heat Exchanger Service.....	14		
<b>Fuel System</b> .....	16		
Diesel Fuel .....	16		
Fuel Water Separator .....	16		
Fuel Lift Pumps.....	16		
Fuel Injection Pump .....	16		

# INTRODUCTION

This WESTERBEKE Diesel Generator is a product of WESTERBEKE's long years of experience and advanced technology. We take great pride in the superior durability and dependable performance of our engines and generators. Thank you for selecting WESTERBEKE.

In order to get the full use and benefit from your generator it is important that you operate and maintain it correctly. This manual is designed to help you do this. Please read this manual carefully and observe all the safety precautions throughout. Should your generator require servicing, contact your nearest WESTERBEKE dealer for assistance.

This is your operators manual. A parts catalog is also provided and a technical manual is available from your WESTERBEKE dealer. If you are planning to install this equipment contact your WESTERBEKE dealer for WESTERBEKE'S installation manual.

## WARRANTY PROCEDURES

Your WESTERBEKE Warranty is included in a separate folder. If, after 60 days of submitting the Warranty Registry form you have not received a customer identification card registering your warranty, please contact the factory in writing with model information, including the unit's serial number and commission date.

## Customer Identification Card



Customer Identification

MR. GENERATOR OWNER

MAIN STREET

HOMETOWN, USA

Model 32 BEDA      Ser. #U0000-D702

Expires 4/4/98

The WESTERBEKE serial number is an alphanumeric number that can assist in determining the date of manufacture of your WESTERBEKE engine or generator. The manufacturer's date code is placed at the end of the engine serial number and consists of a character followed by three numbers. The character indicates the decade. (A = 1960s, B = 1970s, C = 1980s, D = 1990s, the first number represents the year in the decade and the second and third numbers the month of manufacture.

## PRODUCT SOFTWARE

Product software, (tech data, parts lists, manuals, brochures and catalogs), provided from sources other than WESTERBEKE are not within WESTERBEKE's control.

*WESTERBEKE CANNOT BE RESPONSIBLE FOR THE CONTENT OF SUCH SOFTWARE, MAKES NO WARRANTIES OR REPRESENTATIONS WITH RESPECT THERETO, INCLUDING ACCURACY, TIMELINESS OR COMPLETENESS THEREOF AND WILL IN NO EVENT BE LIABLE FOR ANY TYPE OF DAMAGE OR INJURY INCURRED IN CONNECTION WITH OR ARISING OUT OF THE FURNISHING OR USE OF SUCH SOFTWARE.*

WESTERBEKE customers should also keep in mind the time span between printings of WESTERBEKE product software and the unavoidable existence of earlier WESTERBEKE manuals. In summation, product software provided with WESTERBEKE products, whether from WESTERBEKE or other suppliers, must not and cannot be relied upon exclusively as the definitive authority on the respective product. It not only makes good sense but is imperative that appropriate representatives of WESTERBEKE or the supplier in question be consulted to determine the accuracy and currentness of the product software being consulted by the customer.

## NOTES, CAUTIONS AND WARNINGS

As this manual takes you through the operating procedures, maintenance schedules, and troubleshooting of your marine engine, critical information will be highlighted by NOTES, CAUTIONS, and WARNINGS. An explanation follows:

**NOTE:** *An operating procedure essential to note.*

**CAUTION:** *Procedures, which if not strictly observed, can result in the damage or destruction of your engine.*

**WARNING:** *Procedures, which if not properly followed, can result in personal injury or loss of life.*

# INTRODUCTION

## SERIAL NUMBER LOCATION


The engine and generator serial numbers and model numbers are located on a decal on the generator housing. Take the time to enter the information on the blank decal provided below as this will provide a quick reference when seeking technical information and/or ordering repair parts.

SPECIFICATION	50 HZ.	60 HZ.
MODEL .....		
RPM .....		
KW .....		
KVA .....		
VOLTS .....		
AMPS .....		
ENG. HP .....		
ENG. SER. NO.		
GEN. SER. NO.		
PF/PHASE .....	/	
WIRES .....		
RATING .....		
INSUL. CLASS .....		
TEMP. RISE .....		
BATTERY .....		
C.I.D. ....		

The engine serial number can also be found stamped into the engine block just above the injection pump. The generator serial number is stamped into the generator housing on the flat surface on the left side of the generator.



An identification plate on the engine manifold also displays the engine model and serial number.

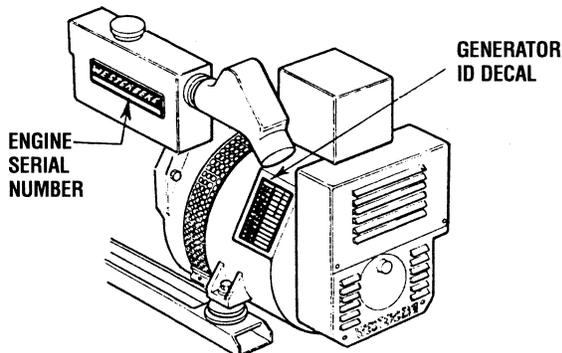

**NOTE:** A carbon monoxide warning decal has been provided by WESTERBEKE. Affix this decal in a visible position in the engine room.

## UNDERSTANDING THE DIESEL ENGINE

The diesel engine closely resembles the gasoline engine, since the mechanism is essentially the same. The cylinders are arranged above a closed crankcase; the crankshaft is of the same general type as that of a gasoline engine; and the diesel engine has the same types of valves, camshaft, pistons, connecting rods and lubricating system.

Therefore, to a great extent, a diesel engine requires the same preventive maintenance as a gasoline engine. The most important factors are proper ventilation and proper maintenance of the fuel, lubricating and cooling systems. Replacement of fuel and lubricating filter elements at the time periods specified is a must, and frequent checking for contamination (that is, water, sediment, etc.) in the fuel system is also essential. Another important factor is the use of the same brand of high detergent diesel lubrication oil designed specifically for diesel engines.

The diesel engine does differ from the gasoline engine, however, in its method of handling and firing of fuel. The carburetor and ignition systems are done away with and in their place is a single component – the fuel injection pump – which performs the function of both.

## ORDERING PARTS

Whenever replacement parts are needed, always provide the generator model number, engine serial number, and generator serial number as they appear on the silver and black name plate located on the generator end. You must provide us with this information so we may properly identify your generator set. In addition, include a complete part description and part number for each part needed (see the separately furnished Parts List). Also insist upon WESTERBEKE packaged parts because *will fit* or generic parts are frequently not made to the same specifications as original equipment.

## SPARES AND ACCESSORIES

Certain spares will be needed to support and maintain your WESTERBEKE generator. Your local WESTERBEKE dealer will assist you in preparing an inventory of spare parts. See the *SPARE PARTS* page in this manual. For Engine and Generator Accessories, see the *ACCESSORIES* brochure.

# CONTROL PANELS

## MAIN PANEL

This manually-controlled WESTERBEKE diesel generator is equipped with toggle switches on the engine's control panel and, optionally, at a remote panel. All three switches are momentary contact type and serve the following functions:


- 1. PREHEAT:** The PREHEAT toggle switch is a double-pole, single-throw switch. The switch serves two purposes: pre-heating the engine for easy starting and defeating or bypassing the engine's protective oil pressure switch. The defeat function activates the fuel solenoid, instrument power, alternator excitation, electronic governor and provides power to the START switch.
- 2. START:** The START toggle switch is a double-pole, single-throw switch. The switch, when activated, energizes the starter solenoid for starting the engine. *This switch will not operate electrically unless the PREHEAT switch is depressed and held at the same time.*
- 3. STOP:** The STOP toggle switch is a single-pole, single-throw, normally closed switch. This switch provides power to the fuel solenoid, and the instrument cluster, after the oil pressure switch has closed upon engine starting. Opening of this switch opens the power circuit to the fuel solenoid, thereby stopping the engine flow to the injection pump and stopping the engine.

**NOTE:** When the engine is shut down, the water temperature gauge and the oil pressure gauge will continue to register the last temperature and oil pressure readings displayed. They will return to zero once electrical power is restored.

**4. EMERGENCY STOP:** The EMERGENCY stop switch at the rear of the control box is normally closed. When depressed, it will open the DC circuit to the control panel and shut the engine down. As the switch is not toggled it can be used when performing maintenance.


## REMOTE START/STOP PANEL

For remote operation of the generator system, the same three switches are used. The PREHEAT and START switches are connected in parallel with the gauge panel's switches and serve the same functions as in the gauge panel. The STOP switch is in series with the gauge panel's STOP switch and serves the same function.

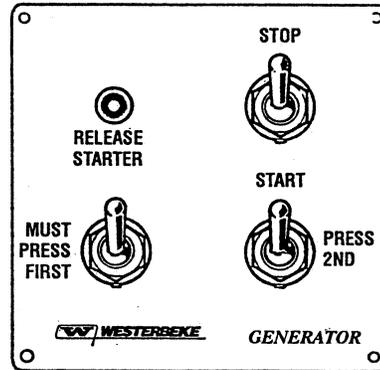

REMOTE PANEL (OPTIONAL)

**WATER TEMPERATURE GAUGE:** ENGINE COOLANT TEMPERATURE. SHOULD INDICATE 175° TO 195°F (80° TO 91°C).

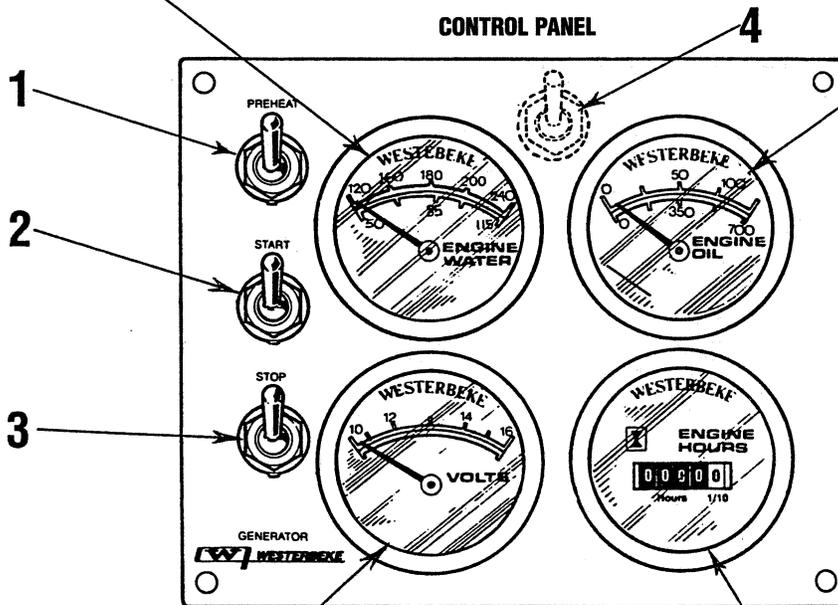

**OIL PRESSURE:** ENGINE LUBRICATION OIL PRESSURE — THE NEEDLE WILL FLUCTUATE DEPENDING ON LOAD, BUT SHOULD INDICATE 50 TO 57 PSI (3.5 TO 4.5 KG/CM).

**DC VOLTMETER:** INDICATES THE AMOUNT THE BATTERY IS BEING CHARGED. SHOULD SHOW 13V TO 14V.

**HOURLY METER:** REGISTERS ELAPSED TIME, AND SHOULD BE USED AS A GUIDE FOR THE MAINTENANCE SCHEDULE.

# DIESEL FUEL, ENGINE OIL AND ENGINE COOLANT

## DIESEL FUEL

Use a diesel fuel that meets the requirements of No. 2-D SAE J 313 and has a Cetane rating of #45 or higher grade of diesel fuel according to ASTM D975

### Care Of The Fuel Supply

Use only clean diesel fuel! The clearance of the components in your engines fuel injection pump is very critical; invisible dirt particles which might pass through the primary and secondary filters can damage these finely machined parts. It is important to buy clean fuel, and keep it clean. The best fuel can be rendered unsatisfactory by careless handling or improper storage facilities. To ensure that the fuel going into the tank for your engine's daily use is clean and pure, the following practice is advisable:

Purchase a well-known brand of fuel. The use of additives to combat BACTERIAL growth in the fuel tank is recommended such as Bio-Bor and an additive such as *Diesel Kleen + Cetane Boost* to help restore lubricity back into the diesel fuel when an Ultra Low Sulfur diesel is being used.

Install and regularly service a good, visual-type fuel filter/water separator between the fuel tank and the engine. The Raycor 500 MA or 230 RMAM are good examples of such filters. A 10 micron filter element is recommended.

## ENGINE OIL

Use a heavy duty diesel oil with an API classification of CF, CG-4, CH-4 or CI-4. Change the engine oil and filter after an initial 50 hours of break-in operation. Then follow the oil and filter change intervals as specified in the **MAINTENANCE SCHEDULE** in this manual. Westerbeke Corporation does not approve or disapprove the use of synthetic oils. If synthetic oils are used, engine break-in must be performed using conventional oil. Oil change intervals must be as listed in the **MAINTENANCE SCHEDULE** section of this manual and not be extended if synthetic oils are used.

**NOTE:** *The information above supersedes all previous statements regarding synthetic oil.*

## SAE OIL VISCOSITY

For all temperature ranges: SAE 15W-40 or SAE 10W-40.

## ENGINE COOLANT

WESTERBEKE recommends a mixture of 50% antifreeze and 50% distilled water. Distilled water is free from the chemicals that can corrode internal engine surfaces.

The antifreeze performs double duty. It allows the engine to run at proper temperatures by transferring heat away from the engine to the coolant, and lubricates and protects the cooling circuit from rust and corrosion. Look for a good quality antifreeze that contains Supplemental Cooling Additives (SCAs) that keep the antifreeze chemically balanced, crucial to long term protection.

The distilled water and antifreeze should be premixed before being poured into the cooling circuit.

**NOTE:** *Look for the new environmentally-friendly long lasting antifreeze that is now available.*

## PURCHASING ANTIFREEZE


Select a brand of antifreeze specified for diesel engines. Antifreeze specified for diesel engines contains a special additive to protect against cavitation erosion of the engine's cylinder walls. Prestone and Zerex are two nationally known brands that offer antifreeze specifically for use in diesel engines. Select the pre-mixed variety so that the correct mixture will always be added to the cooling system when needed. Change the antifreeze mixture according to the **MAINTENANCE SCHEDULE** in this manual.

## MAINTENANCE

Change the engine coolant every five years regardless of the number of operating hours as the chemical additives that protect and lubricate the engine have a limited life.

## COOLANT RECOVERY TANK

The coolant recovery tank allows for the expansion and contraction of the engines coolant during engine operation without introducing air into the system. This recovery tank is provided with fresh water cooled models and with the fresh water coolant conversion kit and must be installed before operating the engine.

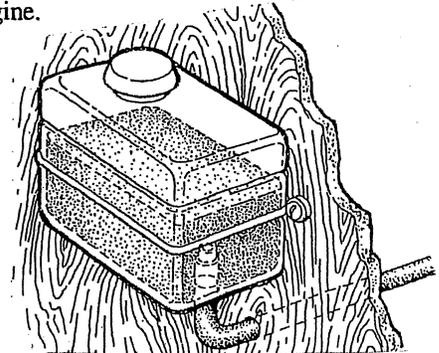

**NOTE:** *This tank, with its short run of plastic hose, is best located at or above the level of the engine's manifold, but it can be located below the level of the engine's manifold if the particular installation makes this necessary.*

# PREPARATIONS FOR INITIAL START-UP

## PRESTART INSPECTION

This section of the manual provides the operator with preparation, initial starting, break-in, starting (warm or cold) and stopping procedures. Follow the procedures as presented for the conditions indicated and your WESTERBEKE generator set will give reliable performance and long service life.

Before starting your generator set for the first time or after a prolonged layoff, check the following items:

- Check the engine oil level. Add oil to maintain the level at the high mark on the dipstick.
- Check the fuel supply and examine the fuel filter/separator bowls for contaminants.
- Check the DC electrical system. Inspect wire connections and battery cable connections. Make certain the (+) battery cable is connected to the starter solenoid and the negative (-) cable is connected to the engine ground stud (this location is tagged).
- Check the coolant level in both the plastic recovery tank and at the manifold.
- Visually examine the unit. Look for loose or missing parts, disconnected wires, unattached hoses, and check threaded connections.
- Check load leads for correct connection as specified in the wiring diagrams.
- Examine air inlet and outlet for air flow obstructions.
- Be sure no other generator or utility power is connected to load lines.
- Be sure that in power systems with a neutral line that the neutral is properly grounded (or ungrounded) as the system requires, and that the generator neutral is properly connected to the load neutral. In single phase and some 3-phase systems an incomplete or open neutral can supply the wrong line-to-neutral voltage on unbalanced loads.
- Make sure the mounting installation is secure.
- Make sure that the generator is properly grounded.


**CAUTION:** When starting the generator, it is recommended that all AC loads, especially large motors, be switched OFF until the engine has come up to speed and, in cold climates, starts to warm up. This precaution will prevent damage caused by unanticipated operation of the AC machinery and will prevent a cold engine from stalling.

## GENERATOR VOLTAGE

The speed of the generator engine is adjusted at the factory, however, it is advisable to verify.

To supply 60 hertz, the speed should be 1800 rpm at no-load, and should not fall below 1800 rpm by more than .005 percent .3 Hz at full-load.

To supply 50 hertz, the speed should be 1500 rpm at full-load. Generator voltage should build to its rated value within 5 seconds after rated speed is attained. Record or observe the voltage of the generator at no-load and at full-load (hot). The voltages are easily adjusted to optimum values no-load and full-load (refer to *VOLTAGE ADJUSTMENT* in this manual). If possible, apply actual service load or test load of the same power factor as the load to be used in service. If the voltage cannot be adjusted to suitable values and a fault seems evident, contact your authorized WESTERBEKE service dealer.

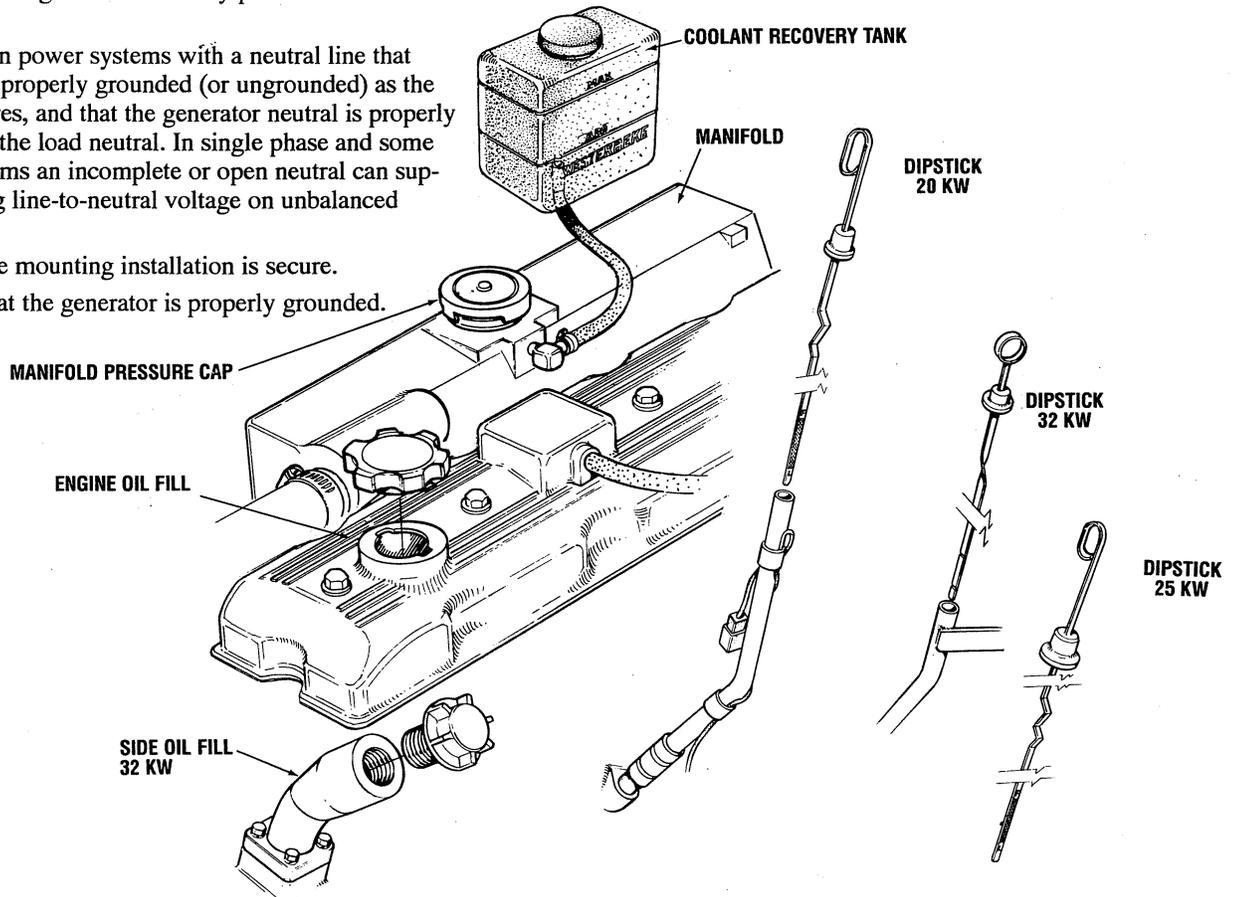


# STARTING/STOPPING PROCEDURE

## THE STARTING SYSTEM

Westerbeke diesel generators use electric starters assisted by glow plugs for both normal and cold weather starting. The illustration below shows a cross-sectional view of one cylinder. The glow plug is located in the combustion chamber so that its tip is in the injector nozzle's spray path. When the glow plug is energized by the PREHEAT button, the plug glows red at the tip and assists in igniting the fuel. The result is a rapid start with less wear on the starter.

This system is common to WESTERBEKE diesels. The start circuitry is designed so that the PREHEAT button must be depressed for the time specified in the preheat chart. Then, while keeping the PREHEAT button engaged, the START button is depressed to crank the engine.

**NOTE:** The START switch will not energize unless the PREHEAT switch is depressed. Depressing the PREHEAT switch activates the glow plugs in the cylinder head so use the PREHEAT intermittently to avoid overheating the glow plugs.

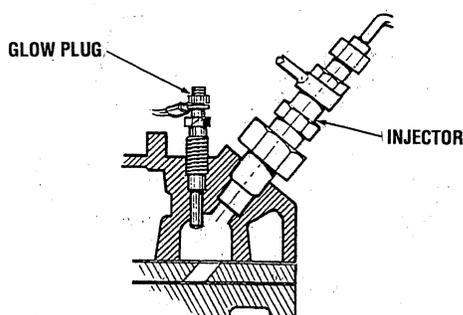

An air intake heater is used in place of glow plugs on the 32 KW generator. The preheat sequence described is the same.


**PREHEAT:** Depress the PREHEAT switch. The voltmeter and panel lights, gauges and meters will be activated. The PREHEAT switch should be depressed in accordance with the following chart:

Temperature/Preheat

Atmospheric Temperature	Preheating Time
+41°F(+5°C) or higher	Approx. 10 seconds
+41°F(+5°C) to 23°F (-5°C)	Approx. 15 seconds
+23°F(-5°C) or lower	Approx. 20 seconds
Limit of continuous use	30 seconds before cranking

**START:** While still depressing the PREHEAT switch, depress the START switch. This will engage the starter solenoid. Upon engine starting, release the START switch. Do not release the PREHEAT switch until the oil pressure reaches 15 psi. Then as long as the high water temperature and low oil pressure protective circuits do not activate, the engine will remain energized and continue to run.

VOLTAGE DROP

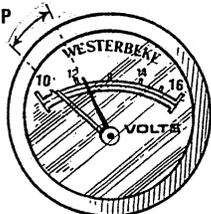

**NOTE:** When starting: A voltage drop will occur when the preheat switch is depressed.

Should the engine not start when the START switch is depressed for 10 to 20 seconds, release both switches and wait 30 seconds; repeat the procedure above and preheat longer. *Never run the starter for more than 30 seconds.*

**CAUTION:** Prolonged cranking intervals without the engine starting can result in the engine exhaust system filling with raw water. This may happen because the pump is pumping raw water through the raw water cooling system during cranking. This raw water can enter the engine's cylinders by way of the exhaust manifold once the exhaust system fills. Prevent this from happening by closing the raw water supply through-hull shut-off, draining the exhaust muffler, and correcting the cause of the excessive engine cranking. Engine damage resulting from raw water entry is not a warrantable issue; the owner/operator should keep this in mind.

## Remote Starting Procedure

The remote start panel is the same as the engine-mounted start panel except that it has a green LED light and no gauges. When starting at a remote location, the green LED lights when the generator is running at approximately 600 rpm. This indicates when the START switch can be released since the starting of the generator may not be audible.

- A. When the PREHEAT switch is depressed at the remote start/stop panel the LED light will illuminate. When the START switch is depressed and the starter cranks the engine this LED light will dim. When the engine starts the LED light will brighten signaling to release the START switch. Continue to hold the PREHEAT depressed for a few seconds to allow oil pressure to build up which closes the oil pressure safety switch that is in the series path for 12V B+ to the fuel run solenoid. The green LED will remain brightly illuminated while the engine is running.
- B. After the generator is started and the START switch is released, the generator's starter will not crank unless the PREHEAT switch is operated first because this switch supplies voltage to the START switch.

Once the engine starts, check the engine's instruments for proper oil pressure and battery charging voltage. Apply a light load to the generator and allow the engine's operating temperature to come up to 140-150° (60-66° C) before applying heavy loads.

**NOTE:** Some unstable running may occur in a cold engine. Depressing the PREHEAT switch for 10-15 second intervals will help stabilize the engine rpm until the operating temperature reaches 140 - 150° F and a load is applied to the engine.

## STARTING UNDER COLD CONDITIONS

Make sure the lubricating oil conforms with the ratings for the prevailing temperature. Check the table in the ENGINE OIL section in this manual.

# STARTING/STOPPING PROCEDURE

## STARTING UNDER COLD CONDITIONS

Make sure the lubricating oil conforms with the ratings for the prevailing temperature. Check the table in the *ENGINE OIL* section in this manual.

The battery should be fully charged to minimize voltage drop.

Use a sufficient amount of preheat to aid in starting. See the *Temperature/Preheat* chart on the previous page.

## STOPPING PROCEDURE

1. Remove the AC electrical load from the generator and allow the generator to run for three to five minutes to stabilize its operating temperatures.
2. Depress the STOP switch and hold it until the generator is completely stopped.
3. Now release the STOP switch.

## Remote Stopping Procedure

To stop the generator, depress the STOP switch which opens the normally closed B+ path for voltage to the engine's run circuit. The STOP switch must be held open until the generator comes to a complete stop.


**NOTE:** The generator is stopped when the electric solenoid mounted on the injection pump is de-energized shutting off the flow of fuel (Models 20 KW and 25 KW). The 32 KW Generator is shutdown by an electric fuel solenoid that is attached to a lever on the fuel injection pump.

## SAFETY SHUTDOWN SWITCHES

The engine is protected by three automatic shutdown switches. Should shutdown occur, *do not attempt to restart without finding and correcting the cause. Refer to the heading "Engine Stops" in the TROUBLESHOOTING section of this manual.* The following is a description of these automatic shutdown switches:


### High Exhaust Temperature Switch

An exhaust temperature switch is located on the exhaust elbow. Normally closed, this switch will open and interrupt the DC voltage to the fuel solenoid on the injection pump (shutting OFF the engine) should the switch's sensor indicate an excessive exhaust temperature (an inadequate supply of raw water causes high exhaust temperatures). This switch opens at 260-270°F (127-132°C). This switch resets at approximately 225°F (107°C).

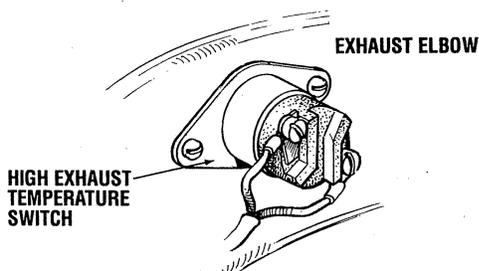



### High Water Temperature Switch

A high water temperature switch is located on the thermostat housing. Normally closed, this switch, should the fresh water coolant's operating temperature reach approximately 210°F (99°C), will open and interrupt the DC voltage to the fuel solenoid on the injection pump, thereby shutting off the engine. This switch resets at 195°F (107°C).

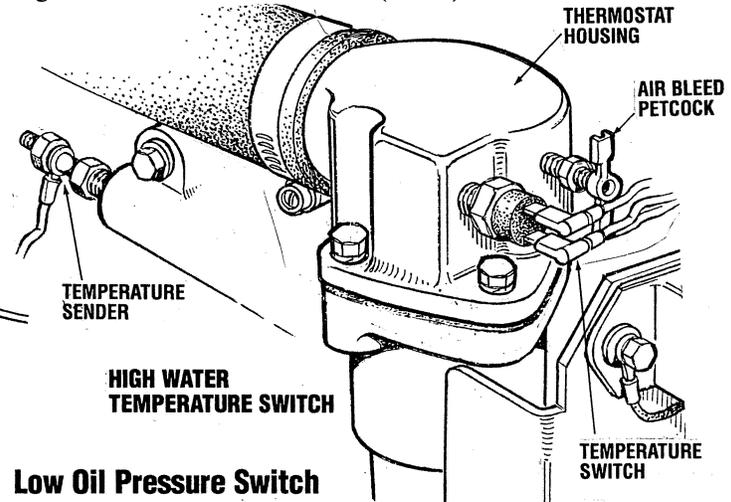

### Low Oil Pressure Switch

A low oil pressure shutdown switch is located off the engine's oil gallery. Normally open in a static state, this switch's sensor monitors the engine's oil pressure. Should the engine's oil pressure fall to 5-10 psi, this switch will open interrupting the DC voltage to the fuel solenoid on the injection pump, thereby shutting off the engine.

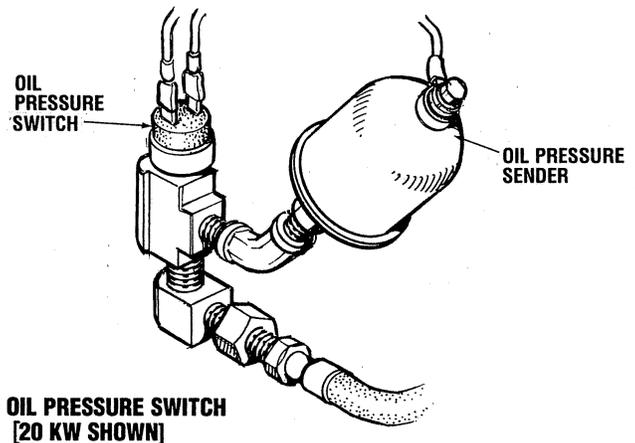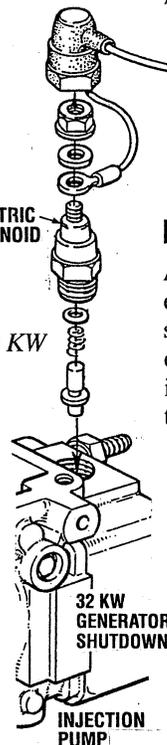

LOW OIL PRESSURE SWITCH [20 KW SHOWN]

### Engine Circuit Breaker

The generator's engine is protected by an engine mounted manual reset circuit breaker (20 amps DC). Excessive current draw or electrical overload anywhere in the instrument panel wiring or engine wiring will cause the breaker to trip. In this event most generators will shut down because the opened breaker disconnects the fuel supply. If this should occur, check and repair the source of the problem. After repairing the fault, reset the breaker and restart the generator.

# GENERATOR BREAK-IN PROCEDURE

## DESCRIPTION

Although your engine has experienced a minimum of one hour of test operations at the factory to make sure accurate assembly procedures were followed and that the engine operated properly, a break-in time is required. The service life of your engine is dependent upon how the engine is operated and serviced during its initial hours of use.

Breaking-in a new engine basically involves seating the piston rings to the cylinder walls. Excessive oil consumption and smoky operation indicate that the cylinder walls are scored, which is caused by overloading the generator during the break-in period.

Your new engine requires approximately 50 hours of initial conditioning operation to break in each moving part in order to maximize the performance and service life of the engine. Perform this conditioning carefully, keeping in mind the following:

Start the engine according to the *STARTING PROCEDURE* section. Run the engine while checking that all systems (raw water pump, oil pressure, battery charging) are functioning.

## AFTER START-UP

Once the generator has been started, check for proper operation and then encourage a fast warm-up. Run the generator between 20% and 60% of full-load for the first 10 hours.

**CAUTION:** Do not attempt to break-in your generator by running without a load.

After the first 10 hours of the generator's operation, the load can be increased to the full-load rated output, then periodically vary the load.

Avoid overload at all times. An overload is signaled by smoky exhaust with reduced output voltage and frequency. Monitor the current being drawn from the generator and keep it within the generator's rating. Since the generator operates at 1800 rpm to produce 60 hertz (or at 1500 rpm to produce 50 Hertz), control of the generator's break-in is governed by the current drawn from the generator.

## CHECK THE FOLLOWING

- Monitor the control panel gauges.
- Check for leaks of fuel and engine oil.
- Check for abnormal noise such as knocking, friction, vibration and blow-back sounds.
- Confirm exhaust smoke:
  - When the engine is cold – White Smoke.
  - When the engine is warm – almost Smokeless.
  - When the engine is overloaded – some Black Smoke.

To protect against unintentional overloading of the generator, the generator's output leads should be routed through a circuit breaker that is rated at the rated output of the generator.

**NOTE:** Be aware of motor starting loads and the high current draw required for starting motors. This starting amperage draw can be 3 to 5 times normal running amperage. See *GENERATOR INFORMATION* in this manual.

## GENERATOR ADJUSTMENTS

Once the generator has been placed in operation, there may be adjustments required for engine speed (hertz) during the engine's break-in period (first 50 hours) or after this period. A no-load voltage adjustment may also be required in conjunction with the engine's speed adjustment. See *GENERATOR INFORMATION* in this manual.

# THE DAILY OPERATION

## CHECK LIST

Follow this check list each day before starting your generator.

- Record the hourmeter reading in your log (engine hours relate to the maintenance schedule.)
- Visually inspect the generator for fuel, oil, or water leaks.
- Check the oil level (dipstick).
- Check the coolant level in the coolant recovery tank.
- Check your diesel fuel supply.
- Look for clean fuel in the fuel/separator transparent bowl.
- Check for loose wires at the alternator.
- Check the starting batteries (weekly).
- Check drive belts for wear and proper tension (weekly).

## START THE GENERATOR

(See *STARTING PROCEDURES* on previous pages).

Allow the engine to warm up for 5 to 10 minutes to reach an operating temperature of 140° to 150°F (60°-66°C) before applying AC loads. Apply loads systematically allowing the generator to adjust to each load before applying the next.

Check the gauges for proper oil pressure, operating temperature, and DC voltage.

**NOTE:** *Some unstable running may occur in a cold engine. This condition should lessen as normal operating temperature is reached and loads are applied.*

**⚠ CAUTION:** *Do not operate the generator for long periods of time without a load being placed on the*

## STOPPING THE GENERATOR

Remove the major AC loads from the generator one at a time. Allow the generator to run for a few minutes to stabilize the operating temperature and depress the stop switch. (See *STOPPING PROCEDURES* on previous pages.)

# MAINTENANCE SCHEDULE

**⚠ WARNING:** *Never attempt to perform any service while the engine is running. Wear the proper safety equipment such as goggles and gloves, and use the correct tools for each job. Disconnect the battery terminals when servicing any of the engine's DC electrical equipment.*

**NOTE:** *Many of the following maintenance jobs are simple but others are more difficult and may require the expert knowledge of a service mechanic.*

SCHEDULED MAINTENANCE	CHECK EACH DAY	HOURS OF OPERATION							EXPLANATION OF SCHEDULED MAINTENANCE
		50	100	250	500	750	1000	1250	
Fuel Supply	<input type="checkbox"/>								Diesel No. 2 rating of 45 cetane or higher.
Fuel/Water Separator	<input type="checkbox"/>								Check for water and dirt in fuel (drain/replace filter if necessary).
Engine Oil Level	<input type="checkbox"/>								Oil level should indicate between MAX. and LOW on dipstick.
Coolant Level	<input type="checkbox"/>								Check at recovery tank; if empty, check at manifold. Add coolant if needed.
Drive Belts	<input type="checkbox"/> weekly								Inspect for proper tension (3/8" to 1/2" deflection) and adjust if needed. Check belt edges for wear.
Visual Inspection of Engine	<input type="checkbox"/>	<b>NOTE:</b> <i>Please keep engine surface clean. Dirt and oil will inhibit the engine's ability to remain cool.</i>							Check for fuel, oil and water leaks. Inspect wiring and electrical connections. Keep bolts & nuts tight. Check for loose belt tension.
Fuel Filter		<input type="checkbox"/>		<input type="checkbox"/>	Initial change at 50 hrs, then change every 250 hrs.				
Starting Batteries (and House Batteries)	<input type="checkbox"/> weekly								Every 50 operating hours check electrolyte levels and make sure connections are very tight. Clean off excessive corrosion.
Engine Oil (and filter)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Initial engine oil & filter change at 50 hrs., then change both every <b>100</b> hours.
Generator		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check that AC connections are clean and secure with no chafing. See <i>GENERATOR SECTION</i> for additional information.
Heat Exchanger Zinc Anode		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Inspect zinc anode, replace if needed, clear the heat exchanger end of zinc anode debris.
Fuel/Water Separator			<input type="checkbox"/>	Change every 200 hours.					
Electronic Governor Control (if applicable)		<input type="checkbox"/>				<input type="checkbox"/>			Check and or adjust the no-load speed in the panel, required (hertz) and the regulator board adjustment as needed. <b>NOTE:</b> <i>These adjustment are not a warrantable adjustment during or after the unit's break-in.</i>
Exhaust System		<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>	Initial check at 50 hrs., then every 250 hrs. Inspect for leaks. Check anti-siphon valve operation. Check the exhaust elbow for carbon and/or corrosion buildup on inside passages; clean and replace as necessary. Check that all connections are tight.
Engine Hoses			<input type="checkbox"/>	Hose should be hard & tight. Replace if soft or spongy. Check and tighten all hose clamps.					

# MAINTENANCE SCHEDULE

**NOTE:** Use the engine hour meter gauge to log your engine hours or record your engine hours by running time.

SCHEDULED MAINTENANCE	CHECK EACH DAY	HOURS OF OPERATION							EXPLANATION OF SCHEDULED MAINTENANCE
		50	100	250	500	750	1000	1250	
Raw Water Pump				<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>	Remove the pump cover and inspect the impeller, gasket, cam and cover for wear. Check the bearings and seals (the shaft can turn, but not wobble). Lubricate when reassembling.
Coolant System					<input type="checkbox"/>		<input type="checkbox"/>		Drain, flush, and refill cooling system with appropriate antifreeze mix.
Electric Fuel Lift Pump Filter (if applicable)		<input type="checkbox"/>		<input type="checkbox"/>	Initial filter change at 50 hours, then change filter every 250 hours.				
DC Alternator				<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>	Check DC charge from alternator. Check mounting bracket; tighten electrical connections.
Feed Pump Strainer (if applicable)				<input type="checkbox"/>	Clean every 250 operating hours.				
*Fuel Injectors						<input type="checkbox"/>			Check and adjust injection opening pressure and spray condition (see <i>ENGINE ADJUSTMENTS</i> ).
*Starter Motor					<input type="checkbox"/>			<input type="checkbox"/>	Check solenoid and motor for corrosion. Remove and lubricate. Clean and lubricate the starter motor pinion drive.
*Preheat Circuit					<input type="checkbox"/>			<input type="checkbox"/>	Check operation of preheat solenoid. Remove and clean glow plugs; check resistance (4-6 ohms). Reinstall with anti-seize compound on threads.
*Engine Cylinder Compression					<input type="checkbox"/>			<input type="checkbox"/>	Check compression pressure and timing (see <i>ENGINE ADJUSTMENTS</i> ).
*Torque Cylinder Head Hold-down bolts		<input type="checkbox"/>			<input type="checkbox"/>		<input type="checkbox"/>		At first 50 hours, then every 500 hours (see <i>ENGINE ADJUSTMENTS</i> ).
*Adjust the Valve Clearances		<input type="checkbox"/>			<input type="checkbox"/>		<input type="checkbox"/>		Adjust Valve Clearances (see <i>ENGINE ADJUSTMENTS</i> ).
*Heat Exchanger							<input type="checkbox"/>		Remove, have professionally cleaned and pressure tested.

\*WESTERBEKE recommends this service be performed by an authorized mechanic.

# ENGINE COOLING CIRCUIT

## DESCRIPTION

Westerbeke marine diesel generators are designed and equipped for fresh water cooling. Heat produced in the engine by combustion and friction is transferred to fresh water coolant which circulates throughout the engine. This circulating fresh water coolant cools the engine block and its internal moving parts. The heat is transferred externally from the fresh water coolant to raw water by means of a heat exchanger, similar in function to an automotive radiator. Raw water flows through the tubes of the heat exchanger while fresh water coolant flows around the tubes; engine heat transferred to the fresh water coolant is conducted through the tube walls to the raw water which is then pumped into the exhaust system where finally it is discharged overboard. In other words, the engine is cooled by fresh water coolant, this coolant is cooled by raw water, and the raw water carries the transferred heat overboard through the exhaust system. The fresh water coolant and raw water circuits are independent of each other. Using only fresh water coolant within the engine allows the cooling water passages to stay clean and free from harmful deposits.

## Fresh Water Circuit

**NOTE:** Refer to ENGINE COOLANT section for the recommended antifreeze and water mixture to be used as the fresh water coolant.

Fresh water coolant is pumped through the engine by a circulating pump, absorbing heat from the engine. The coolant then passes through the thermostat into the manifold, to the heat exchanger where it is cooled and returned to the engine block via the suction side of the circulating pump.

When the engine is started cold, external coolant flow is prevented by the closed thermostat (although some coolant flow is bypassed around the thermostat to prevent the exhaust manifold from overheating). As the engine warms up, the thermostat gradually opens, allowing full flow of the engine's coolant to flow unrestricted to the external portion of the cooling system.

## Coolant Recovery Tank

A coolant recovery tank allows for engine coolant expansion and contraction during engine operation, without any significant loss of coolant and without introducing air into the cooling system. This tank should be located at or above the engine manifold level and should be easily accessible.

## CHANGING COOLANT


The engine's coolant must be changed according to the *MAINTENANCE SCHEDULE*. If the coolant is allowed to become contaminated, it can lead to overheating problems.

**CAUTION:** Proper cooling system maintenance is critical; a substantial number of engine failures can be traced back to cooling system corrosion.

Drain the engine coolant by loosening the drain plug on the engine block and opening the manifold pressure cap. Flush the system with fresh water, then start the refill process.

**NOTE:** The drain plug on the heat exchanger can also be used to drain engine coolant.

**WARNING:** Beware of the hot engine coolant. Wear protective gloves.

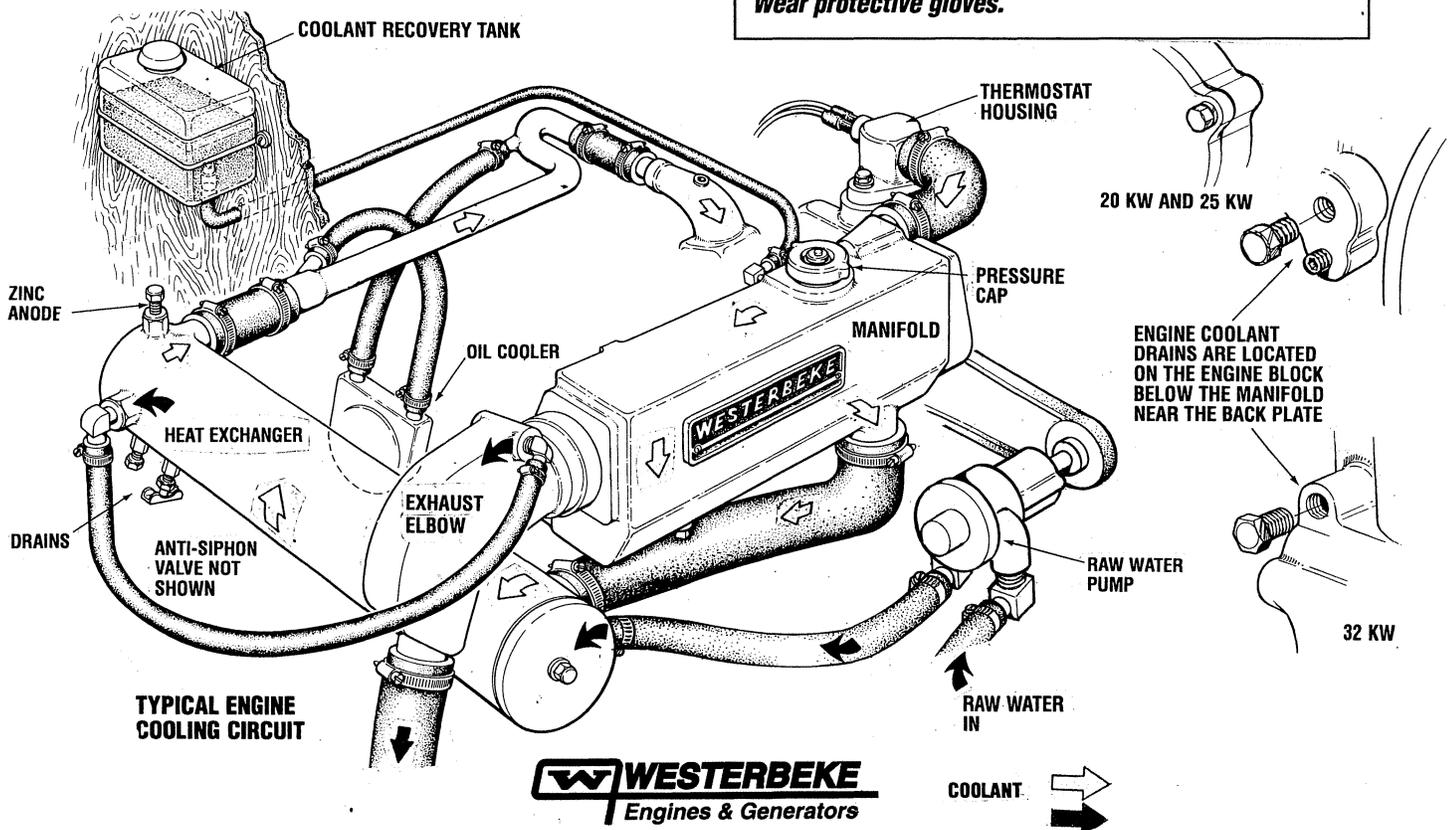

# ENGINE COOLING CIRCUIT

## Refilling the Coolant


After replacing the manifold drain plug, run the engine at idle and slowly pour clean, premixed coolant into the manifold.

**NOTE:** When a steady flow of coolant appears at the heat exchanger drain plug opening, close the drain plug and fill the system until the manifold remains full.

Monitor the coolant in the manifold and add as needed. Fill the manifold to the filler neck and install the manifold pressure cap.

Remove the cap on the coolant recovery tank and fill with coolant mix to halfway between LOW and MAX and replace the cap. Run the engine and observe the coolant expansion flow into the recovery tank.

After checking for leaks, stop the engine and allow it to cool. Coolant should draw back into the cooling system as the engine cools down. Add coolant to the recovery tank if needed. Clean up any spilled coolant.

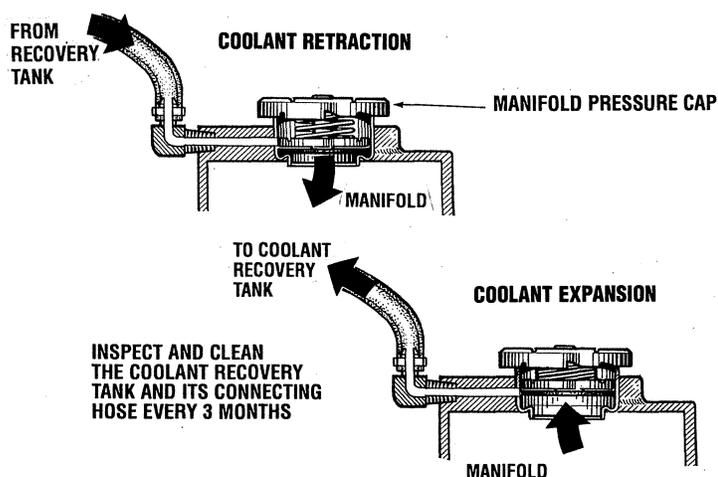


**NOTE:** Periodically check the condition of the manifold pressure cap. Ensure that the upper and lower rubber seals are in good condition and check that the vacuum valve opens and closes tightly. Carry a spare cap.

## THERMOSTAT

A thermostat, located near the manifold at the front of the engine, controls the coolant temperature, as it continuously flows through the closed cooling circuit. When the engine is first started the closed thermostat prevents coolant from flowing (some coolant is by-passed through a hole in the thermostat to prevent the exhaust manifold from overheating); as the engine warms up the thermostat gradually opens. The thermostat is accessible and can be checked, cleaned, or replaced easily. Carry a spare thermostat and gasket.

## Replacing the Thermostat

Remove the cap screws and disassemble the thermostat housing as shown. When installing the new thermostat and gasket apply a thin coat of sealant on both sides of the gasket before pressing it into place. Do not over-tighten the cap screws. Run the engine and check for normal temperatures and that there are no leaks at the thermostat housing.

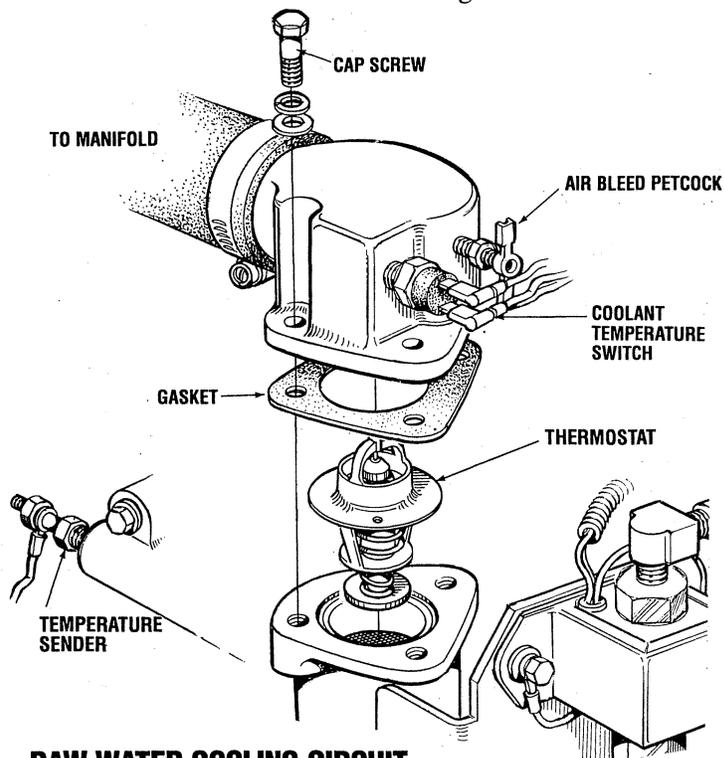

## RAW WATER COOLING CIRCUIT

The raw water flow is created by a positive displacement impeller pump. This pump draws water directly from the ocean, lake, or river through a hose to the water strainer. The raw water passes from the strainer through the heat exchanger (through the heat exchanger tubes) where it cools the engine circulating fresh water coolant. The raw water is then discharged into the water injected exhaust elbow, mixing with and cooling the exhaust gasses. This mixture of exhaust gas and raw water is discharged overboard.

## Raw Water Pump


The raw water pump is a self-priming, rotary pump with a non-ferrous housing and a neoprene impeller. The impeller has flexible vanes which wipe against a curved cam plate within the impeller housing, producing the pumping action. On no account should this pump be run dry, as water acts as a lubricant for the impeller. There should always be a spare impeller and impeller cover gasket aboard (an impeller kit). Raw water pump impeller failures occur when lubricant (raw water) is not present during engine operation. Such failures are not warrantable, and operators are cautioned to make sure raw water flow is present at start-up.

**NOTE:** Should a failure occur with the pump's internal parts (seals and bearings) it may be more cost efficient to purchase a new pump and rebuild the original pump as a spare.

# ENGINE COOLING CIRCUIT

## Changing the Raw Water Pump Impeller



Close the raw water intake valve. Remove the pump cover and, with the aid of two small screwdrivers, carefully pry the impeller out of the pump. Install the new impeller and gasket. Move the blades to conform to the curved cam plate and push the impeller into the pump's housing. When assembling, apply a thin coating of lubricant to the impeller and gasket. Open the raw water intake valve.

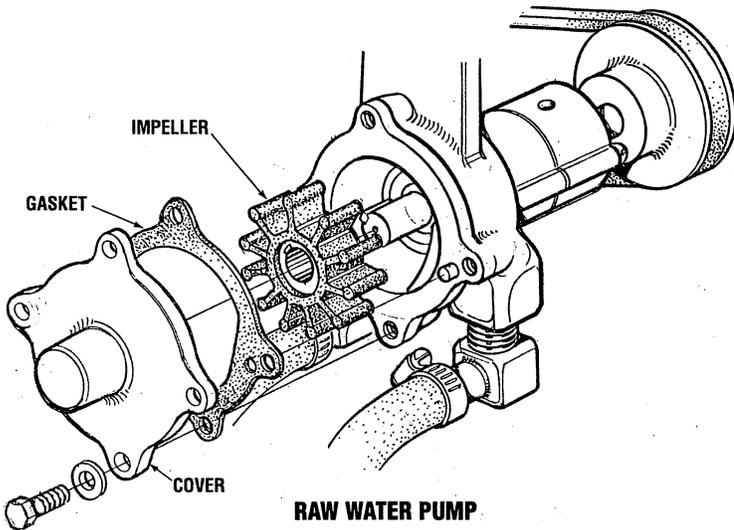

**CAUTION:** If any of the vanes have broken off the impeller, they must be found to prevent blockage in the cooling circuit. They can often be found in the heat exchanger.

## HEAT EXCHANGER

The heat exchanger is a copper cylinder which encloses a number of small copper tubes. Raw water is pumped through the small copper tubes and the freshwater coolant from the engine is circulated around the copper tubes. The raw water removes heat from the freshwater coolant.

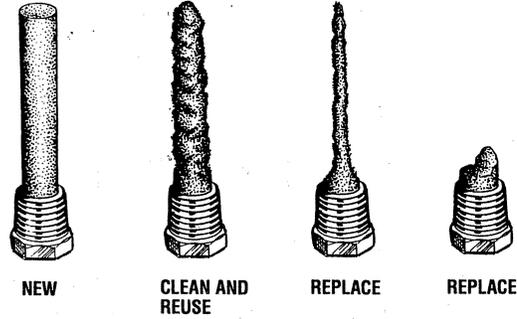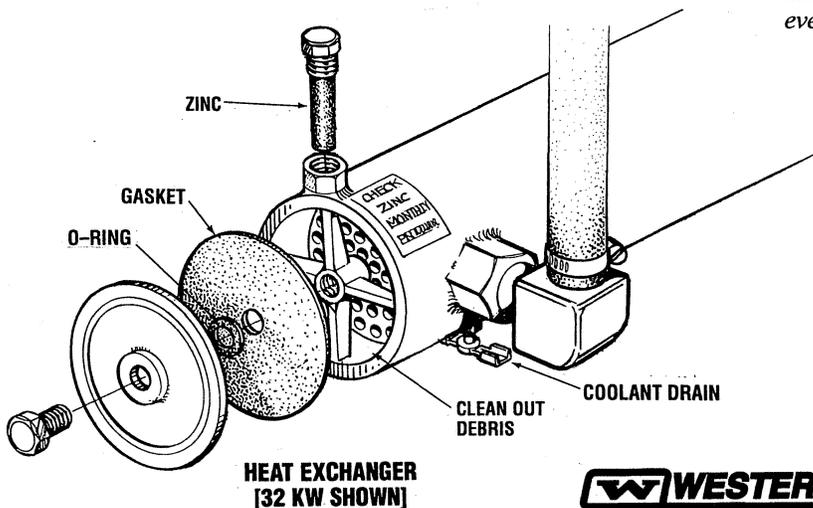

## Zinc Anode

A zinc anode, or pencil, is located in the raw water cooling circuit within the heat exchanger. The purpose of the zinc anode is to sacrifice itself to electrolysis action taking place in the raw water cooling circuit, thereby reducing the effects of electrolysis on other components of the system. The condition of the zinc anode should be checked monthly and the anode cleaned or replaced as required. Spare anodes should be carried on board.

**NOTE:** Electrolysis action is the result of each particular installation and vessel location; not that of the generator.

If the zinc pencil needs replacement, hold the hex boss into which the zinc pencil is threaded with a wrench while loosening the anode with another wrench. This prevents the hex boss from possibly tearing off the exchanger shell. After removing the zinc, note the condition of it. If the zinc is in poor condition, there are probably a lot of zinc flakes within the exchanger. Remove the end of the heat exchanger and clean the inside of all zinc debris. Always have a spare heat exchanger end gasket in case the present one becomes damaged when removing the end cover. Replace the gasket (refer to your engine model's heat exchanger end gasket part number), o-ring, cover, and install a new zinc anode.

## Heat Exchanger Service

After approximately 1000 hours of operation, remove, clean and pressure test the engine's heat exchanger. (A local automotive radiator shop should be able to clean and test the heat exchanger.)

**NOTE:** Operating in silty and/or tropical waters may require that a heat exchanger cleaning be performed more often than every 1000 hours.

# FUEL SYSTEM

## DIESEL FUEL

Use No. 2 diesel fuel with a cetane rating of 45 or higher. Do not use kerosene or home heating fuel.


## FUEL/WATER SEPARATOR

A primary fuel filter of the water separating type must be installed between the fuel tank and the engine to remove water and other contaminants from the fuel before they can be carried to the fuel system on the engine.

Most installers include a filter/water separator with the installation package as they are aware of the problems that contaminants in the fuel can cause.

A typical fuel filter/water separator is illustrated below. This is the Raycor Model 500 MA. Keep in mind that if a water separator type filter is not installed between the fuel supply tank and engine-mounted fuel system, any water in the fuel will affect the fuel pump, engine filter, and injection equipment. The owner/operator is responsible for making certain the fuel reaching the engine's injection equipment is free of impurities. This process is accomplished by installing and maintaining a proper filtration/separation system.


OWNER INSTALLED  
FUEL WATER/SEPARATOR  
FILTER

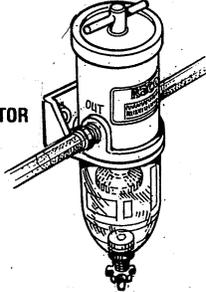

## FUEL LIFT PUMPS

Periodically check the fuel connections to and out of the pump and make sure that no leakage is present and that the fittings are tight and secure. The DC ground connection at one of the pump's mounting bolts should be clean and well secured by the mounting bolt to ensure proper pump operation.

**WARNING:** Fuel leakage at the fuel pump or its connections is a fire hazard and should be corrected. Make sure proper ventilation exists whenever servicing fuel system components.

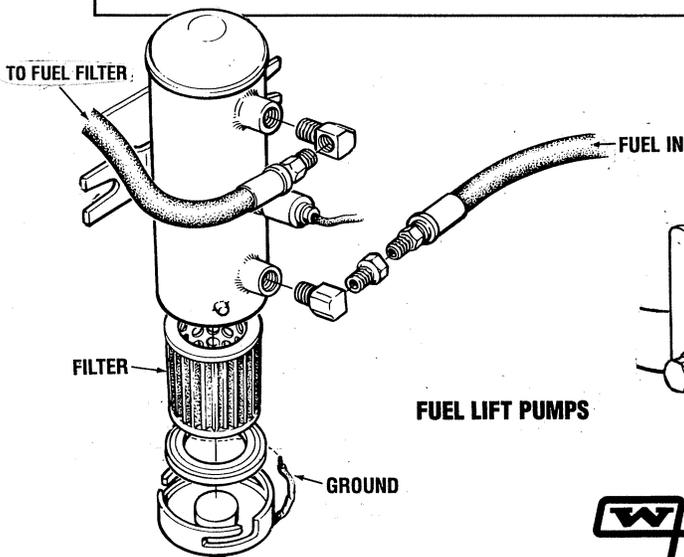


## FUEL INJECTION PUMP

The fuel injection pump is the most important component of the diesel engine and, therefore, calls for the utmost caution in handling. The fuel injection pump has been thoroughly bench-tested and should not be tampered with.


Speed (hertz) and timing are the only adjustments the servicing dealer can perform on the injection pump. See the *ENGINE ADJUSTMENT* section in this manual. Other types of adjustments or repairs must be performed by a qualified injection service shop.

**NOTE:** When servicing the injection pump, the service shop must be advised that the pump is being used in a generator application.

**NOTE:** The injection pumps should only be serviced by an authorized fuel injection service facility.

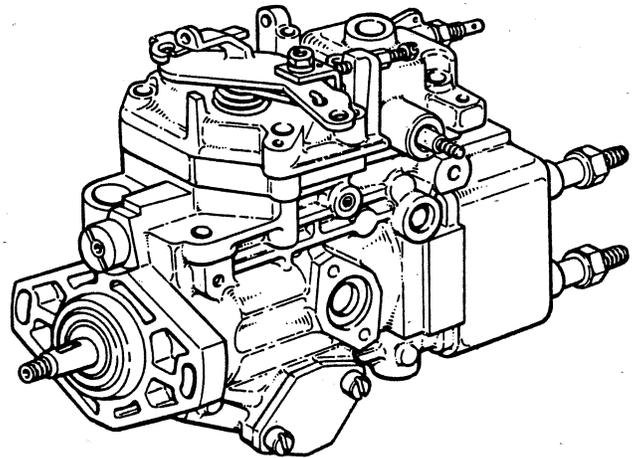

TYPICAL FUEL INJECTION PUMP  
[25 KW SHOWN]

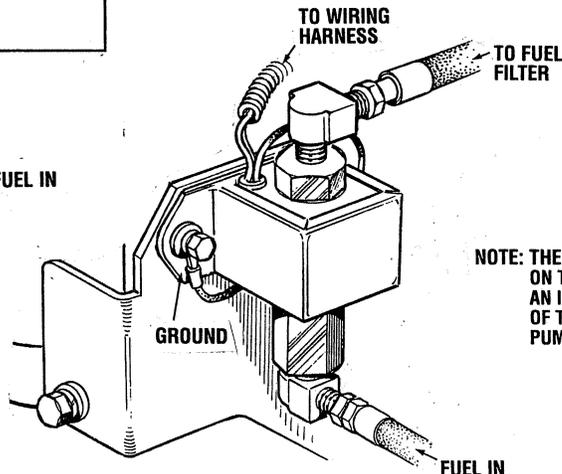

**NOTE:** THE FUEL LIFT PUMP  
ON THE 32 KW IS  
AN INTEGRAL PART  
OF THE FUEL INJECTION  
PUMP.

# FUEL SYSTEM

## FUEL FILTERS

The fuel injection pump and the fuel injectors are precisely manufactured and they must receive clean diesel fuel, free from water and dirt. To ensure this flow of clean fuel, the fuel must pass through at least two fuel filters, a fuel water separator and the engine's spin-on fuel filter. Visually inspect, clean, and change these filters according to the maintenance schedule in this manual.


**⚠ WARNING:** Shut off the fuel valve at the tank when servicing the fuel system. Take care in catching any fuel that may spill. DO NOT allow any smoking, open flames or other sources of fire near the fuel system when servicing. Ensure proper ventilation exists when servicing the fuel system.

## Changing the Fuel Filter/20.0 KW and 25 KW

1. Shut the fuel supply off.
2. Loosen the fuel filter turning counterclockwise with a filter wrench.


**NOTE:** The cartridge contains fuel. Take care not to spill it during disassembly. Perform the PRIMING THE FUEL SYSTEM after replacing the spin-on filter.

3. Wipe clean the sealing face on the housing bracket with a rag, so the new filter will seat properly.
4. Lightly oil the sealing o-ring on the new filter. To reinstall, turn the filter assembly clockwise carefully until the o-ring contacts the sealing surface of the housing bracket. Turn 2/3 further with the filter wrench.
5. Turn on the fuel and start the engine. The normal preheat function should quickly prime the system and the engine should start. If the engine should fail to start immediately, follow the *Priming* instructions in this section.

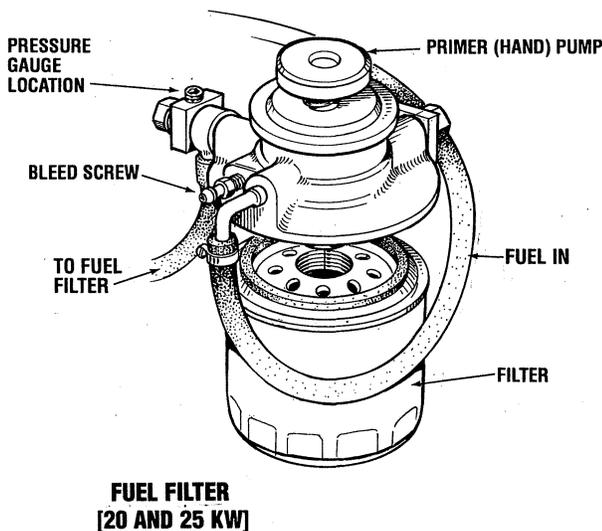


## Changing the Fuel Filter/32.0 KW

1. Shut off the fuel supply.
2. Open the bleed screw on top of the filter. Place a container under the fuel filter and open the drain on the bottom of the bowl and drain the fuel.
3. Close the drain and unscrew the bolt that secures the bowl. The bowl and filter will drop down.
4. Clean the base. Install a new sealing ring in the base making certain that it lies squarely on the base recess.
5. Replace the upper sealing ring and the "o" ring in the filter head. Install the new filter element and re-install the retaining bolt.
6. Bleed the air from the filter assembly.

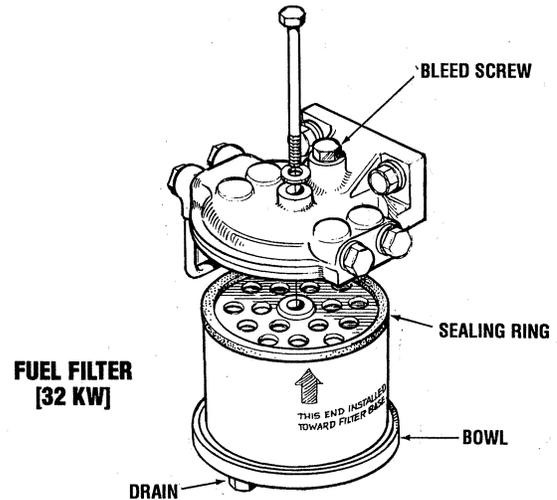

## FUEL FEED PUMP STRAINER/32 KW

An additional fuel filter is located in the feed pump. This filter (strainer) is removed for cleaning by releasing the banjo bolt at the bottom. This strainer should be cleaned every 250 operating hours. Use compressed air and/or clean with kerosene.

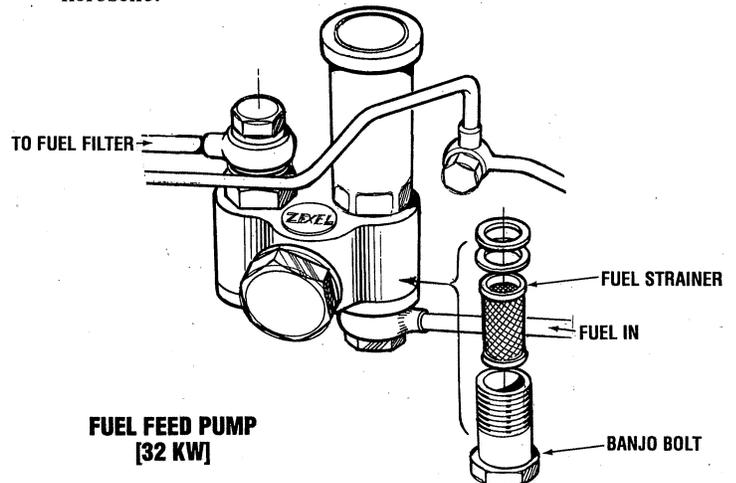

# FUEL SYSTEM

## BLEEDING (PRIMING) THE FUEL SYSTEM/20.0 KW AND 25.0 KW

There is one bleed point in the on-engine fuel system to open for the removal of air. On the 20.0 KW and 25 KW this bleed screw is located on the housing for the spin-on fuel filter mounted on the engine. This screw should be opened one or two turns to remove air from the upper housing area of the fuel filter. Energizing the preheat switch for 10-20 seconds or by using the palm of your hand to slowly depress and release the primer pump on the top of the filter housing either method will force air out through the bleed point. Once all air is expelled, tighten the bleed screw. Depress the preheat switch 10-20 seconds or slowly pumping the primer on the fuel filter housing to force any air in the system between the filter housing and the injection pump out of the system and back to the fuel tank through the return.

**NOTE:** When using the preheat function to bleed air from the filter assembly keep in mind that the preheat elements (glow plugs) are being energized. Take care not to overheat them.

## BLEEDING (PRIMING) THE FUEL SYSTEM/32.0 KW

To bleed the fuel system on the 32.0 KW Generators open the bleed screw on top of the fuel filter and then locate the fuel feed pump (see illustration).

Unscrew the knob on the fuel feed pump and the cylinder will pop up. Slowly work this priming pump by pulling the knob fully upward and pushing it down to achieve a full pumping stroke. Pump until free of air bubbles from the open bleed screw, then close the bleed screw.

Disconnect the fuel line return hose. Place towels under the hose and slowly pump the fuel feed pump again. When clear fuel, free of air, is discharging from the line-stop pumping.

Reconnect the return line and work the pump a few more strokes. Then push the cylinder in and secure it.

Start the engine and check/correct any leaks.

Should unstable running occur open the nut that secures the high pressure line to the injector to expel air in the line.

Loosen 1/2 to a full turn place a cloth over the line and wrench to catch the spurting fuel. When free of air retighten the nut and proceed to the next injector line until the engine runs smoothly.

## FUEL PRESSURE GAUGE





The 20 KW and 25.0 KW generators have a connector for an in-line gauge at the secondary fuel filter. This gauge will indicate the fuel inlet pressure. A positive fuel supply should read 2.5 to 3.5 psi. Pressure below 1.5 psi will result in poor engine performance. Low pressure indicates unclean fuel from the fuel water separator filter. A fuel pressure gauge can be purchased thru your local marine store.

## FUEL ADDITIVES

If fungus or bacteria is causing fuel problems you should have an authorized dealer correct these problems. Then use a diesel fuel biocide to sterilize the fuel (follow the manufacturers instructions).

## SPARES

While the likelihood of having to service the system at sea is slim, the possibility does exist. Therefore, we recommend that banjo washers, injector seat washers, and a fuel filter be carried on board at all times. Purchase needed spares from your local WESTERBEKE dealer or distributor. If a leak should develop at a banjo washer that cannot be corrected by a simple tightening of the fitting, replace the sealing washer with a replacement found in the hardware kit for your model.

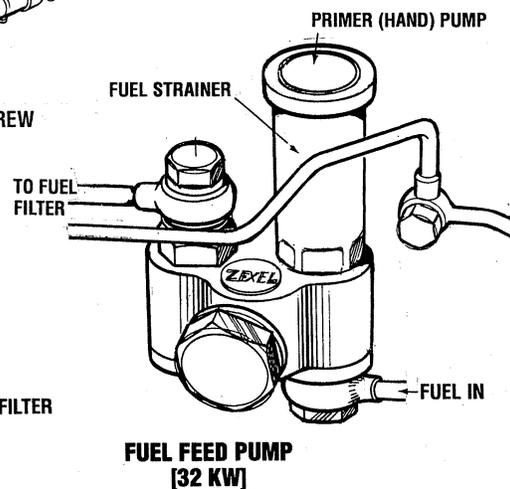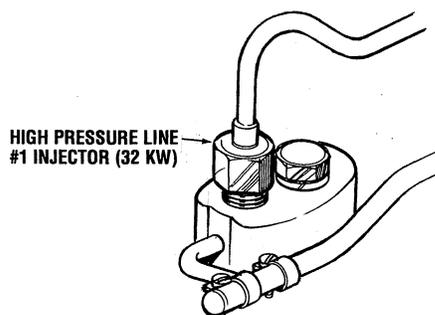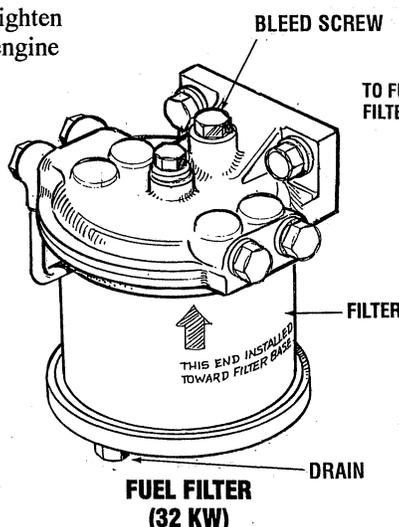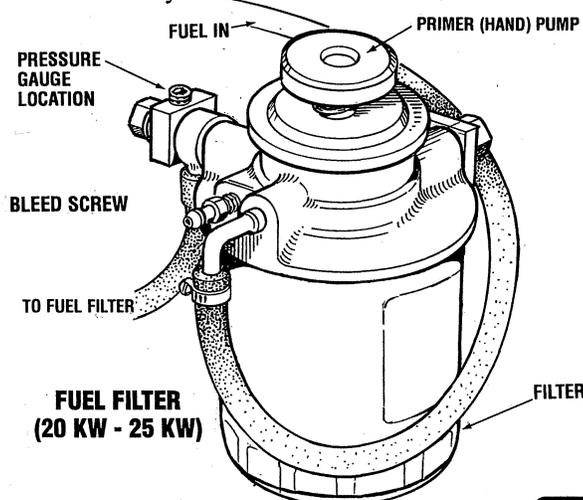


# ENGINE OIL CHANGE

## Engine Oil Change

1. **Draining the Oil Sump.** Discharge the used oil through the sump drain hose (attached to the front of the engine) while the engine is warm. Drain the used oil completely, replace the hose in its bracket, and replace the end cap securely.

**NOTE:** Thread size for the lube oil drain hose capped end is 1/4 NPT.

Always observe the used oil as it is removed. A yellow/gray emulsion indicates the presence of water in the oil. Although this condition is rare, it does require prompt attention to prevent serious damage. Call a competent mechanic should water be present in the oil. Raw water present in the oil can be the result of a fault in the exhaust system attached to the engine and/or a siphoning of raw water through the raw water cooling circuit into the exhaust, filling the engine. This problem is often caused by the poor location, or the lack of, an anti-siphon valve.

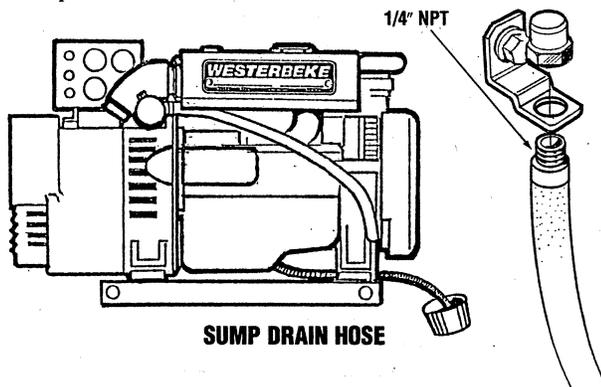


2. **Replacement of the Oil Filter.** When removing the used oil filter, you may find it helpful and cleaner to punch a hole in the upper and lower portion of the old filter to drain the oil from it into a container before removing it. This helps to lessen spillage. A small automotive filter wrench should be helpful in removing the old oil filter.

**NOTE:** Do not punch this hole without first loosening the filter to make certain it can be removed!

Place some paper towels and a plastic bag around the filter when unscrewing it to catch any oil left in the filter. (Oil or any other fluid on the engine reduces the engine's cooling ability. Please keep your engine clean.) Inspect the old oil filter as it is removed to make sure that the rubber sealing gasket comes off with the old oil filter. If this rubber sealing gasket remains sealed against the engine block, gently remove it.

When installing the new oil filter element, wipe the filter gasket's sealing surface on the engine block free of oil and apply a thin coat of clean engine oil to the rubber gasket on the new oil filter. Screw the filter onto the threaded oil filter nipple, and then tighten the filter firmly by hand.

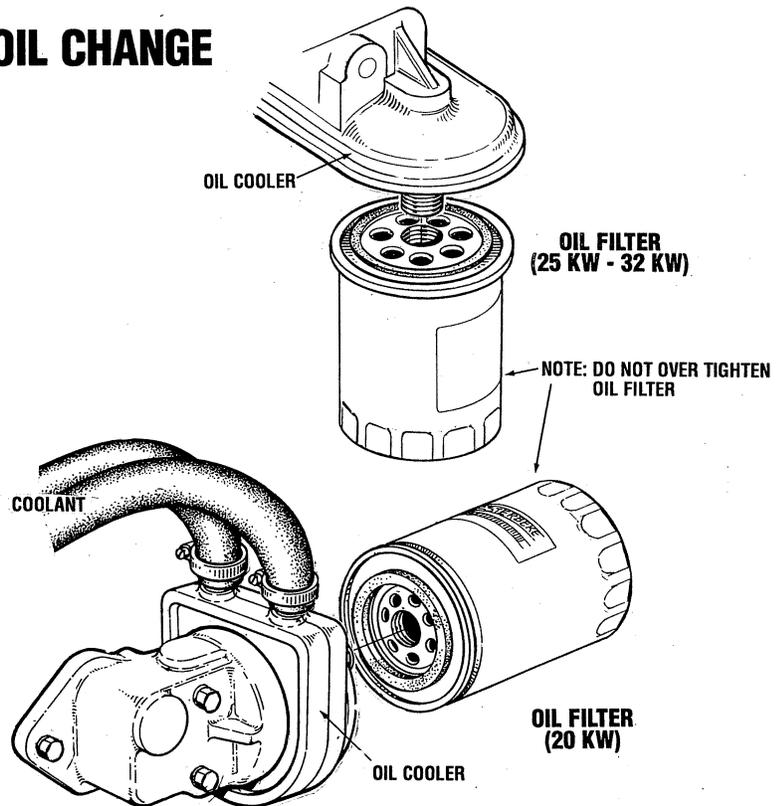

3. **Filling the Oil Sump.** Add new oil through the oil filler cap on the top of the engine or through the side oil fill. After refilling, run the generator for a few moments while checking the engine's oil pressure. Make sure there is no leakage around the new oil filter or from the oil drain system, and stop the generator. Then check the quantity of oil with the lube oil dipstick. Fill to, but not over the high mark on the dipstick, should the engine require additional oil. Immediately after an oil filter change and oil fill, run the engine to make sure the oil pressure is normal and that there are no oil leaks around the new oil filter.

**NOTE:** Generic filters are not recommended, as the material standards or diameters of important items on generic parts might be entirely different from genuine parts.

**WARNING:** Used engine oil contains harmful contaminants. Avoid prolonged skin contact. Clean skin and nails thoroughly using soap and water. Launder or discard clothing or rags containing used oil. Discard used oil properly.

## Oil Pressure

The engine's oil pressure, during operation, is indicated by the oil pressure gauge on the instrument panel. During normal operation, the oil pressure will range between 50 and 60 psi.

**NOTE:** A newly started, cold engine can have an oil pressure reading upwards of 60 psi. A warmed engine can have an oil pressure reading as low as 35 psi. These readings will vary depending upon the temperature of the engine and the load placed on the generator.

# REMOTE OIL FILTER (OPTIONAL)

## INSTALLATION


This popular accessory is used to relocate the engine's oil filter from the engine to a more convenient location such as an engine room bulkhead.

**NOTE:** Refer to the *ENGINE OIL CHANGE* page in this manual for instructions on removing the oil filter.

To install, simply remove the engine oil filter and thread on WESTERBEKE's remote oil filter kit as shown. Always install this kit with the oil filter facing down as illustrated.

Contact your WESTERBEKE dealer for more information.

**NOTE:** Westerbeke is not responsible for engine failure due to incorrect installation of the Remote Oil Filter.

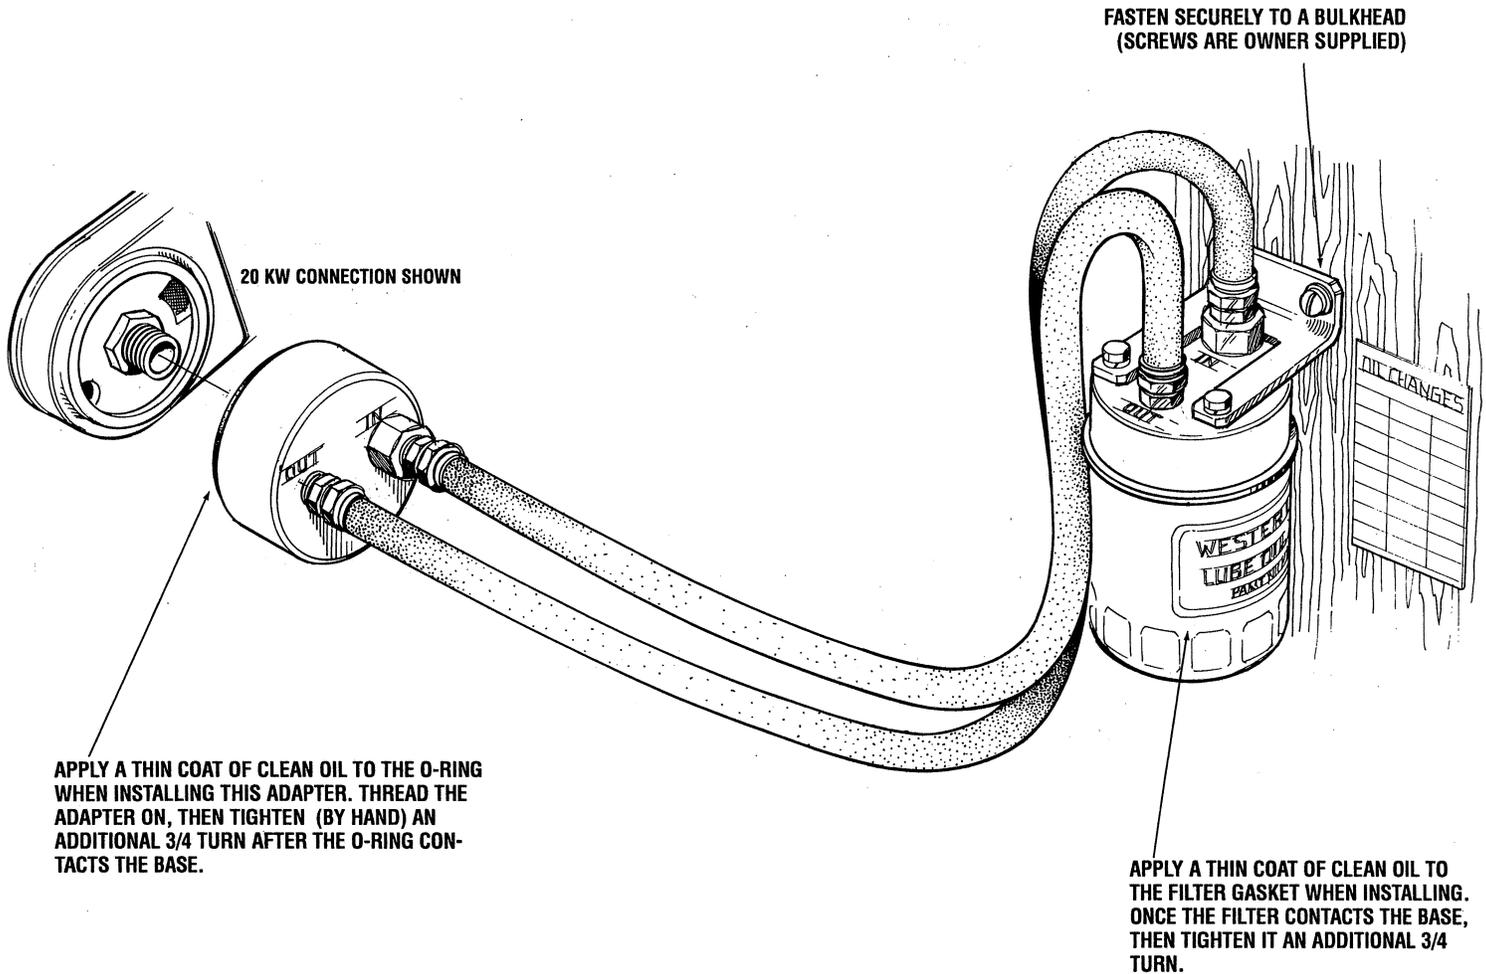

# DC ELECTRICAL SYSTEM

## ENGINE 12-VOLT DC CONTROL CIRCUIT

The engine has a 12 volt DC electrical control circuit that is shown on the wiring diagrams that follow. Refer to these diagrams when troubleshooting or when servicing the DC electrical system on the engine.

**CAUTION:** *To avoid damage to the battery charging circuit, never shut off the engine battery switch while the engine is running. Shut off the engine battery switch, however, to avoid electrical shorts when working on the engine's electrical circuit.*

## Battery Specification

The minimum recommended capacity of the battery used in the engine's 12-volt DC control circuit is 400-600 Cold Cranking Amps (CCA).

## Battery Care

Review the manufacturer's recommendations and then establish a systematic maintenance schedule for your engine's starting batteries and house batteries.

- Monitor your voltmeter for proper charging during engine operation.
- Check the electrolyte level and specific gravity with a hydrometer.
- Use only distilled water to bring electrolytes to a proper level.
- Make certain that battery cable connections are clean and tight to the battery posts (and to your engine).
- Keep your batteries clean and free of corrosion.

**WARNING:** *Sulfuric acid in lead batteries can cause severe burns on skin and damage clothing. Wear protective gear.*

## GLOW PLUGS

The glow plug is a small heater installed in each pre-combustion chamber. They run off the engine starting battery and become red hot when activated.


The glow plugs are wired through the preheat solenoid. When PREHEAT is pressed at the control panel this solenoid should "click" on and the glow plug should begin to get hot.

Glow plugs can be checked by unscrewing and holding them against a good ground (engine block) and turning them on. The tip should glow red hot. You can also use an ammeter to test the power drain (8 to 9 amps per plug), or an ohmmeter to test resistance (1.1 to 1.2 ohms).

**WARNING:** *These glow plugs will become very hot to the touch. Be careful not to burn your fingers when testing the plugs.*

Re-install the plugs in the engine and test them again. The plugs should get very hot (at the terminal end) within 20 to 25 seconds. If the plugs don't heat up quickly, check for a short circuit. When reinstalling the glow plugs, use anti-seize compound on the threads.

**CAUTION:** *Do not keep glow plug on for more than 30 seconds.*

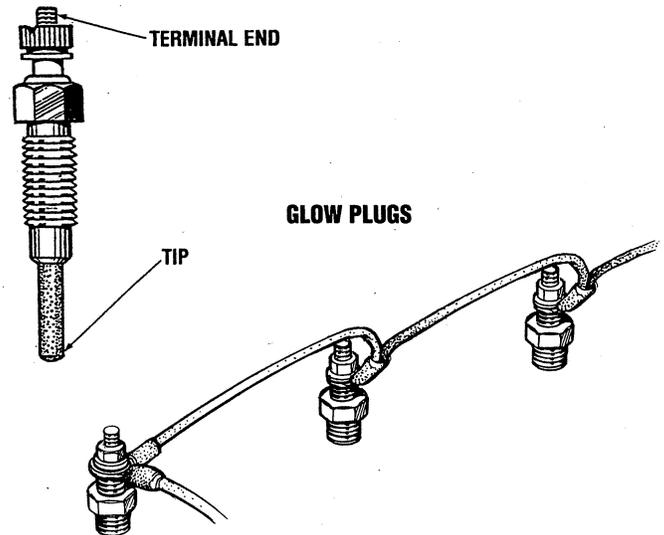

## AIR INTAKE HEATER


Glow plugs are not used on the 32 KW generator. The pre-heat solenoid activates a heater element in the engine's air intake that quickly heats the air as it is drawn into the combustion chamber. There is no maintenance required except an occasional cleaning of the element and its electrical connectors.

If the element fails to heat up when the preheat sequence is activated and the solenoid "clicks" on, replace the heater.

# DC ELECTRICAL SYSTEM/ALTERNATOR

## DESCRIPTION

The charging system consists of an alternator with a voltage regulator, an engine DC wiring harness, a mounted DC circuit breaker, and a battery with connecting cables. Because of the use of integrated circuits (IC's) the electronic voltage regulator is very compact and is mounted internally or on the back of the alternator.

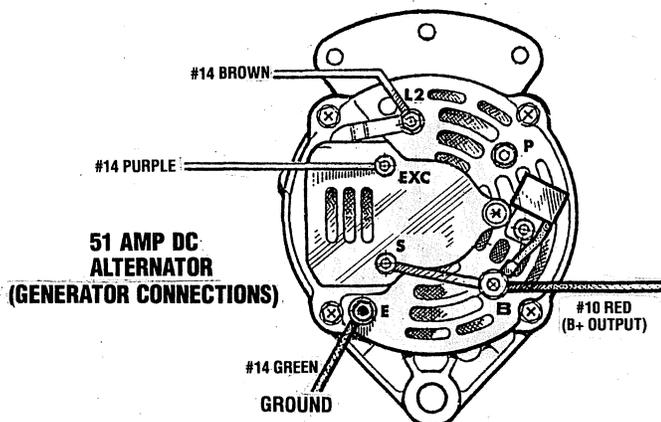

## TROUBLESHOOTING

**WARNING:** A failed alternator can become very hot. Do not touch until the alternator has cooled down.

This troubleshooting section is to determine if a problem exists with the charging circuit or with the alternator. If it is determined that the alternator or voltage regulator is bad, it is best to have a qualified technician check it out.

The alternator charging circuit charges the starting battery and the service battery. An isolator with a diode, a solenoid, or a battery selector switch is usually mounted in the circuit to isolate the batteries, so the starting battery is not discharged along with the service battery. If the alternator is charging the starting battery but not the service battery, the problem is in the service battery charging circuit and not with the alternator.

## Testing the Alternator


**WARNING:** Before starting the engine make certain that everyone is clear of moving parts! Keep away from sheaves and belts during test procedures.

**NOTE:** Multimeters and DC Circuits

DC and AC circuits are often mixed together in marine applications. Always disconnect shore power cords, isolate DC and AC converters and shutdown generators before performing DC testing. No AC tests should be made without proper knowledge of AC circuits.

1. Start the Engine
2. After a few minutes of running measure the starting battery voltage at the battery terminals using a multi-meter set on DC volts.

The voltage should be increasing toward 14 volts. If it is, **your alternator is working.**

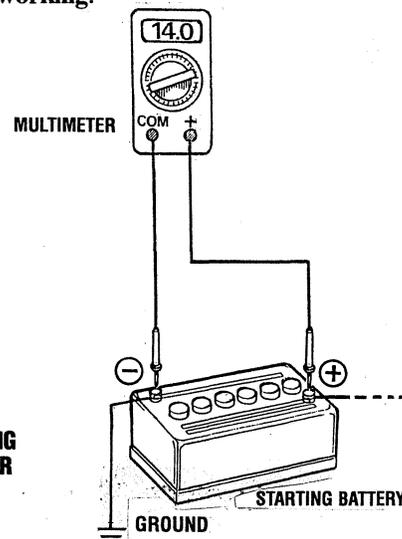

4. If the starting battery voltage remains around 12 volts after the engine is started and run for a few minutes, a problem exists with the alternator or the charging circuit.


**A. Turn off the engine.** Inspect all wiring and connections. Insure that the battery terminals and the engine ground connections are tight and clean.

**CAUTION:** To avoid damage to the battery charging circuit, never shut off the engine battery switch when the engine is running!

**B.** If a battery selector switch is in the charging circuit, insure that it is on the correct setting.


**C.** Turn on the ignition switch, but do not start the engine.

**D.** Check the battery voltage. If your battery is in good condition the reading should be 12 to 13 volts.

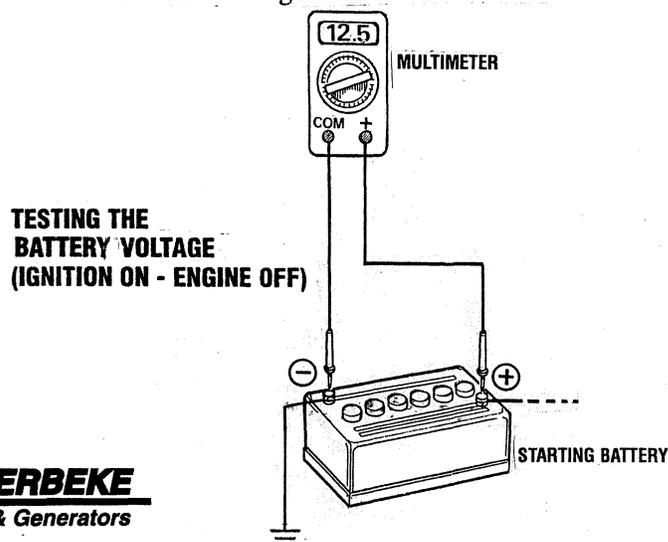

# DC ELECTRICAL SYSTEM/ALTERNATOR

E. Now check the voltage between the alternator output terminal (B+) and ground. If the circuit is good, the voltage at the alternator should be the same as the battery, or if an isolator is in the circuit the alternator voltage will be zero. If not, a problem exists in the circuit between the alternator and the battery. Check all connections - look for an opening in the charging circuit.

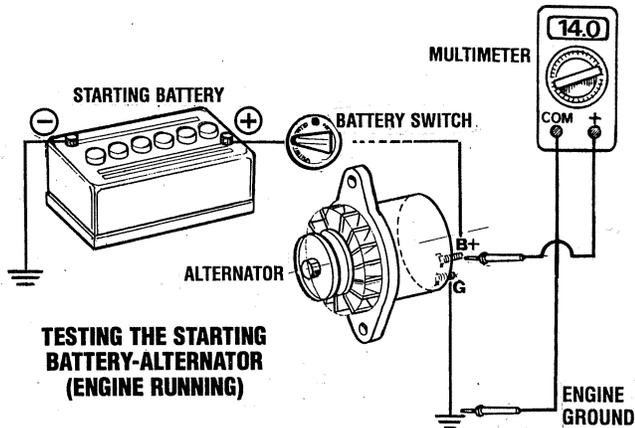

F. **Start the engine again.** Check the voltage between the alternator output and ground.


The voltage reading for a properly operating alternator should be between 13.5 and 14.5 volts. If your alternator is over- or undercharging, have it repaired at a reliable service shop.

**NOTE:** Before removing the alternator for repair, use your voltmeter to ensure that 12 volts DC excitation is present at the EXC terminal if the previous test showed only battery voltage at the B output terminal.

If 12 volts is not present at the EXC terminal trace the wiring, look for breaks and poor connections.


## Alternator is Working

4. Check the voltage of the service battery. This battery should have a voltage between 13 and 14 volts when the engine is running. If not, there is a problem in the service battery charging circuit. Trouble-shoot the service battery charging circuit by checking the wiring and connections, the solenoid, isolator, battery switch and the battery itself.


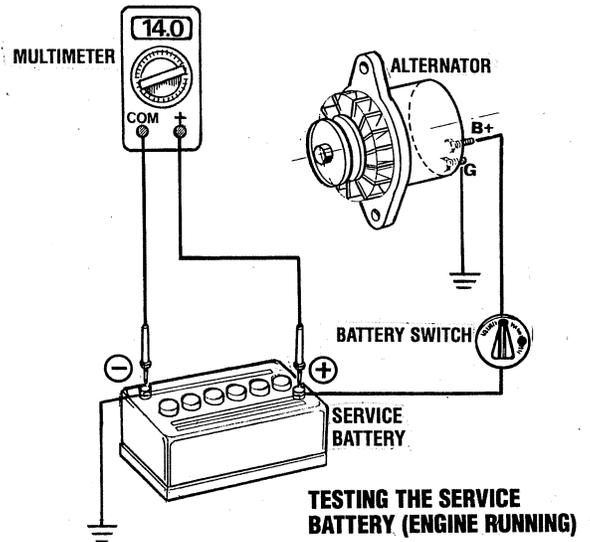


**CAUTION:** When performing tests on the alternator charging circuit do not use a high voltage tester (ie Megger). You can damage the alternator diodes.

# DC ELECTRICAL SYSTEM WIRING DIAGRAM #044736 (OVERSPEED BOARD)

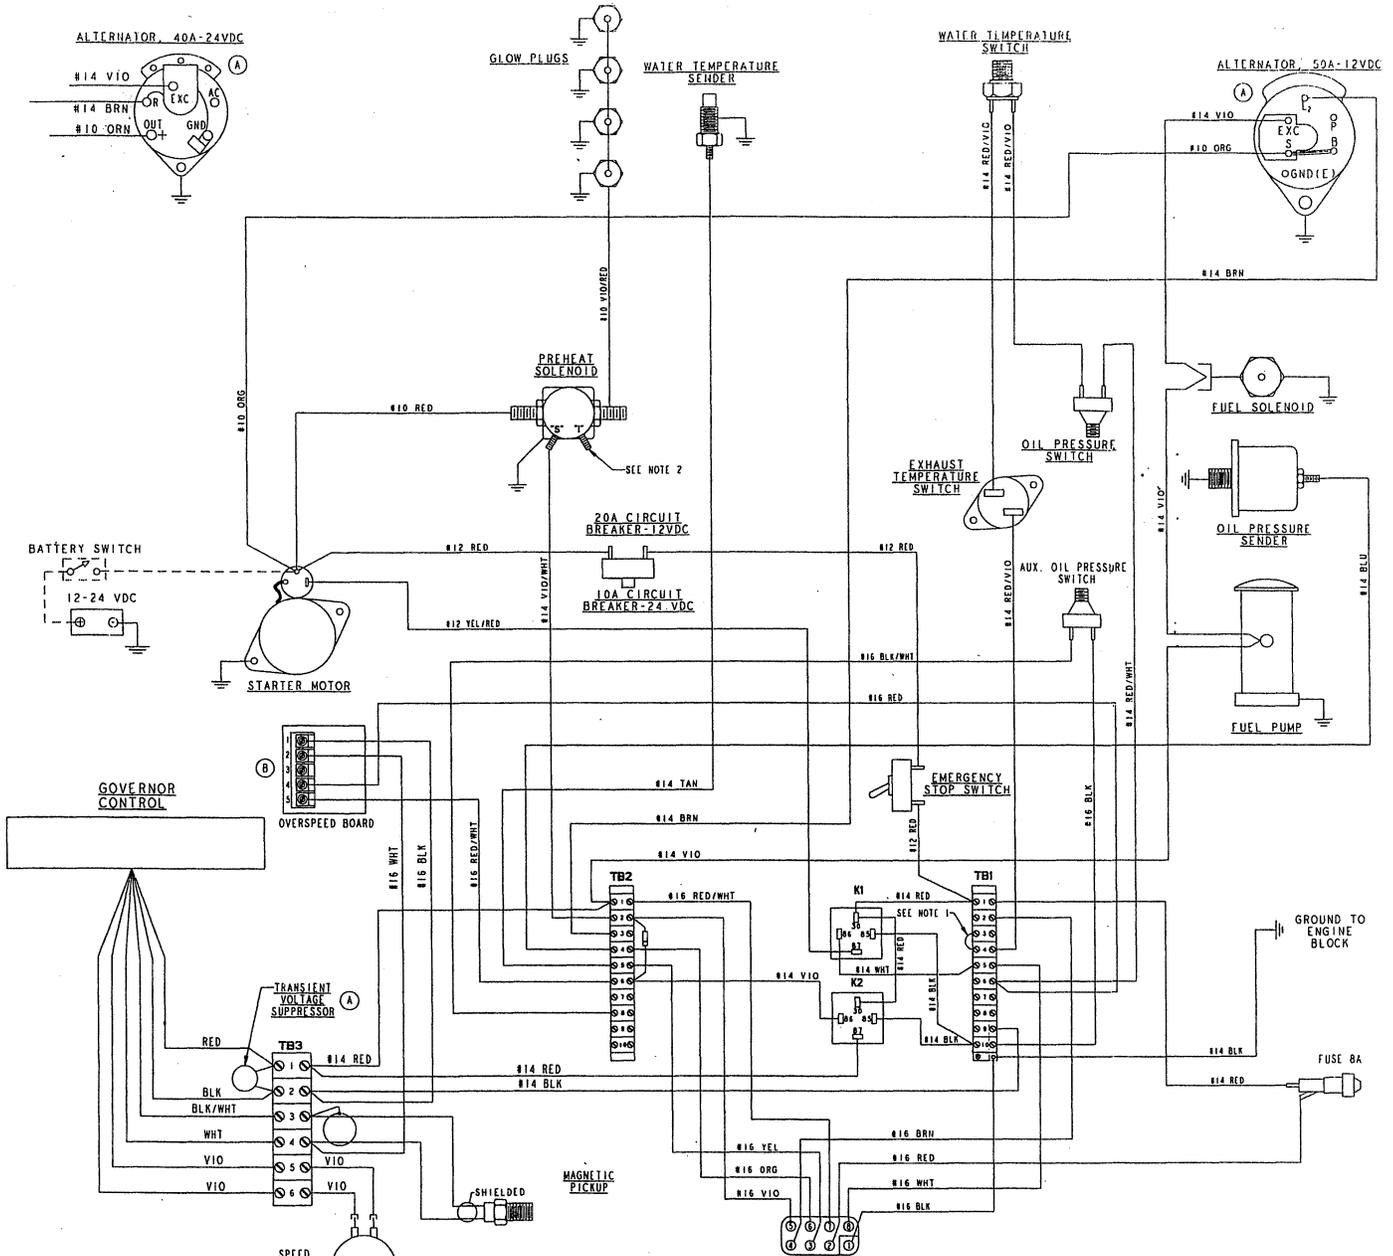


- NOTE:
1. REMOVE JUMPER WHEN CONNECTING A SECOND REMOTE PANEL.
  2. GROUND \*1\* TERMINAL OF PREHEAT SOLENOID ON 24V SYSTEM ONLY

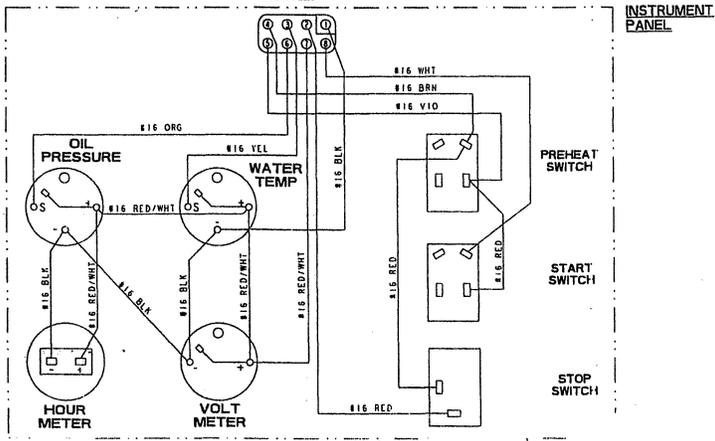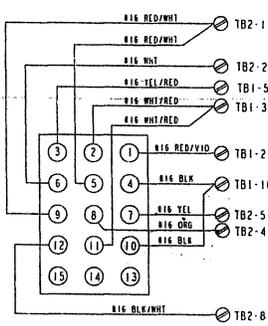


# DC ELECTRICAL SYSTEM WIRING SCHEMATIC #044736 (OVERSPEED BOARD)

**Note: Overspeed Board**  
When troubleshooting this board.  
To by-pass for test purposes **ONLY**.  
Move connection #4 onto #5.

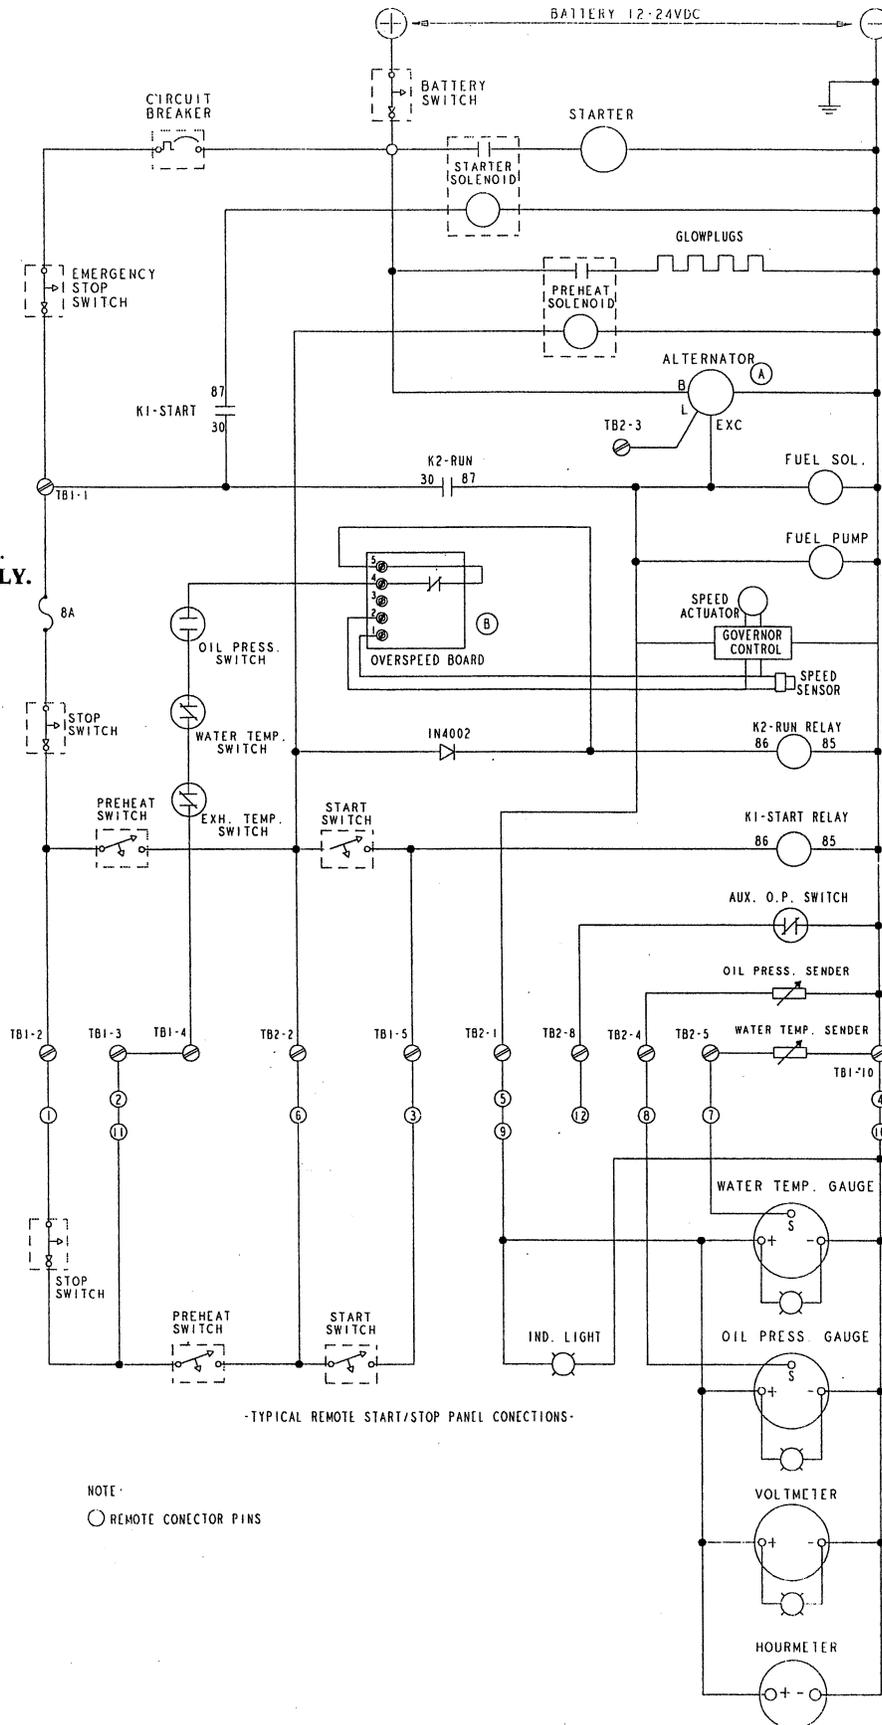


# DC ELECTRICAL SYSTEM WIRING DIAGRAM #039422

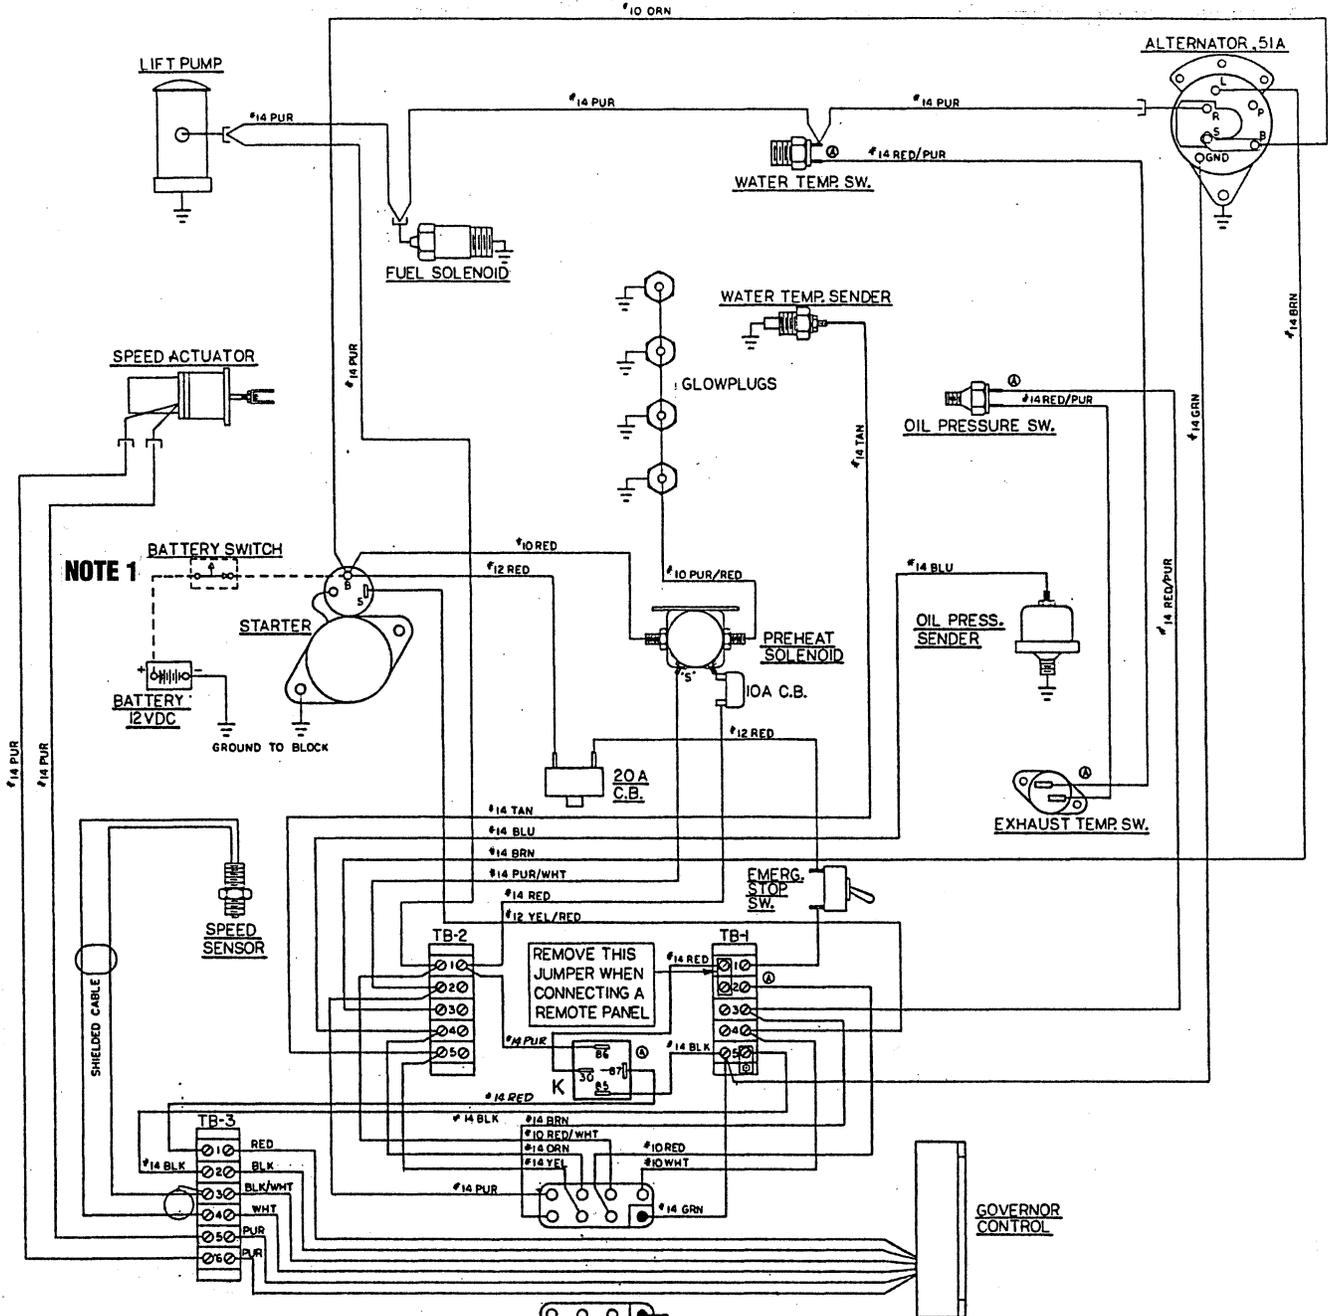


**NOTE 1**

**NOTE 1:** An on-off switch should be installed in this circuit to disconnect the starter from the battery in an emergency and when leaving the boat. Twelve volt diesel engine starters typically draw 200 to 300 amps when cranking. A switch with a continuous rating of 175 amps at 12 VDC will normally serve this function, but a switch must never be used to "make" the starter circuit.

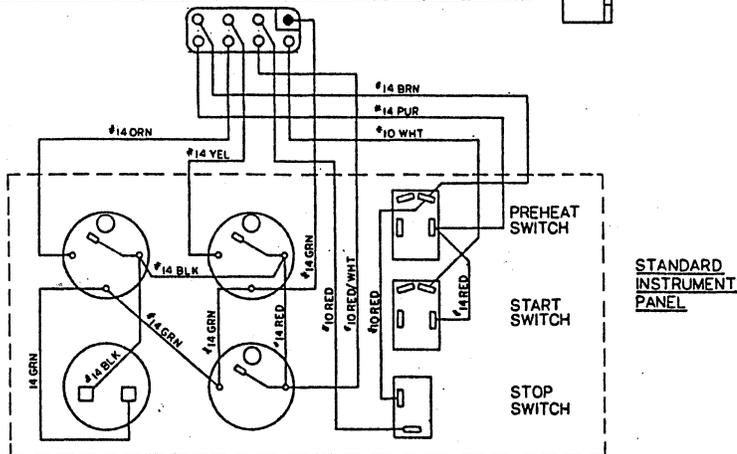


# DC ELECTRICAL SYSTEM WIRING DIAGRAM #044105 (TWO RELAYS)

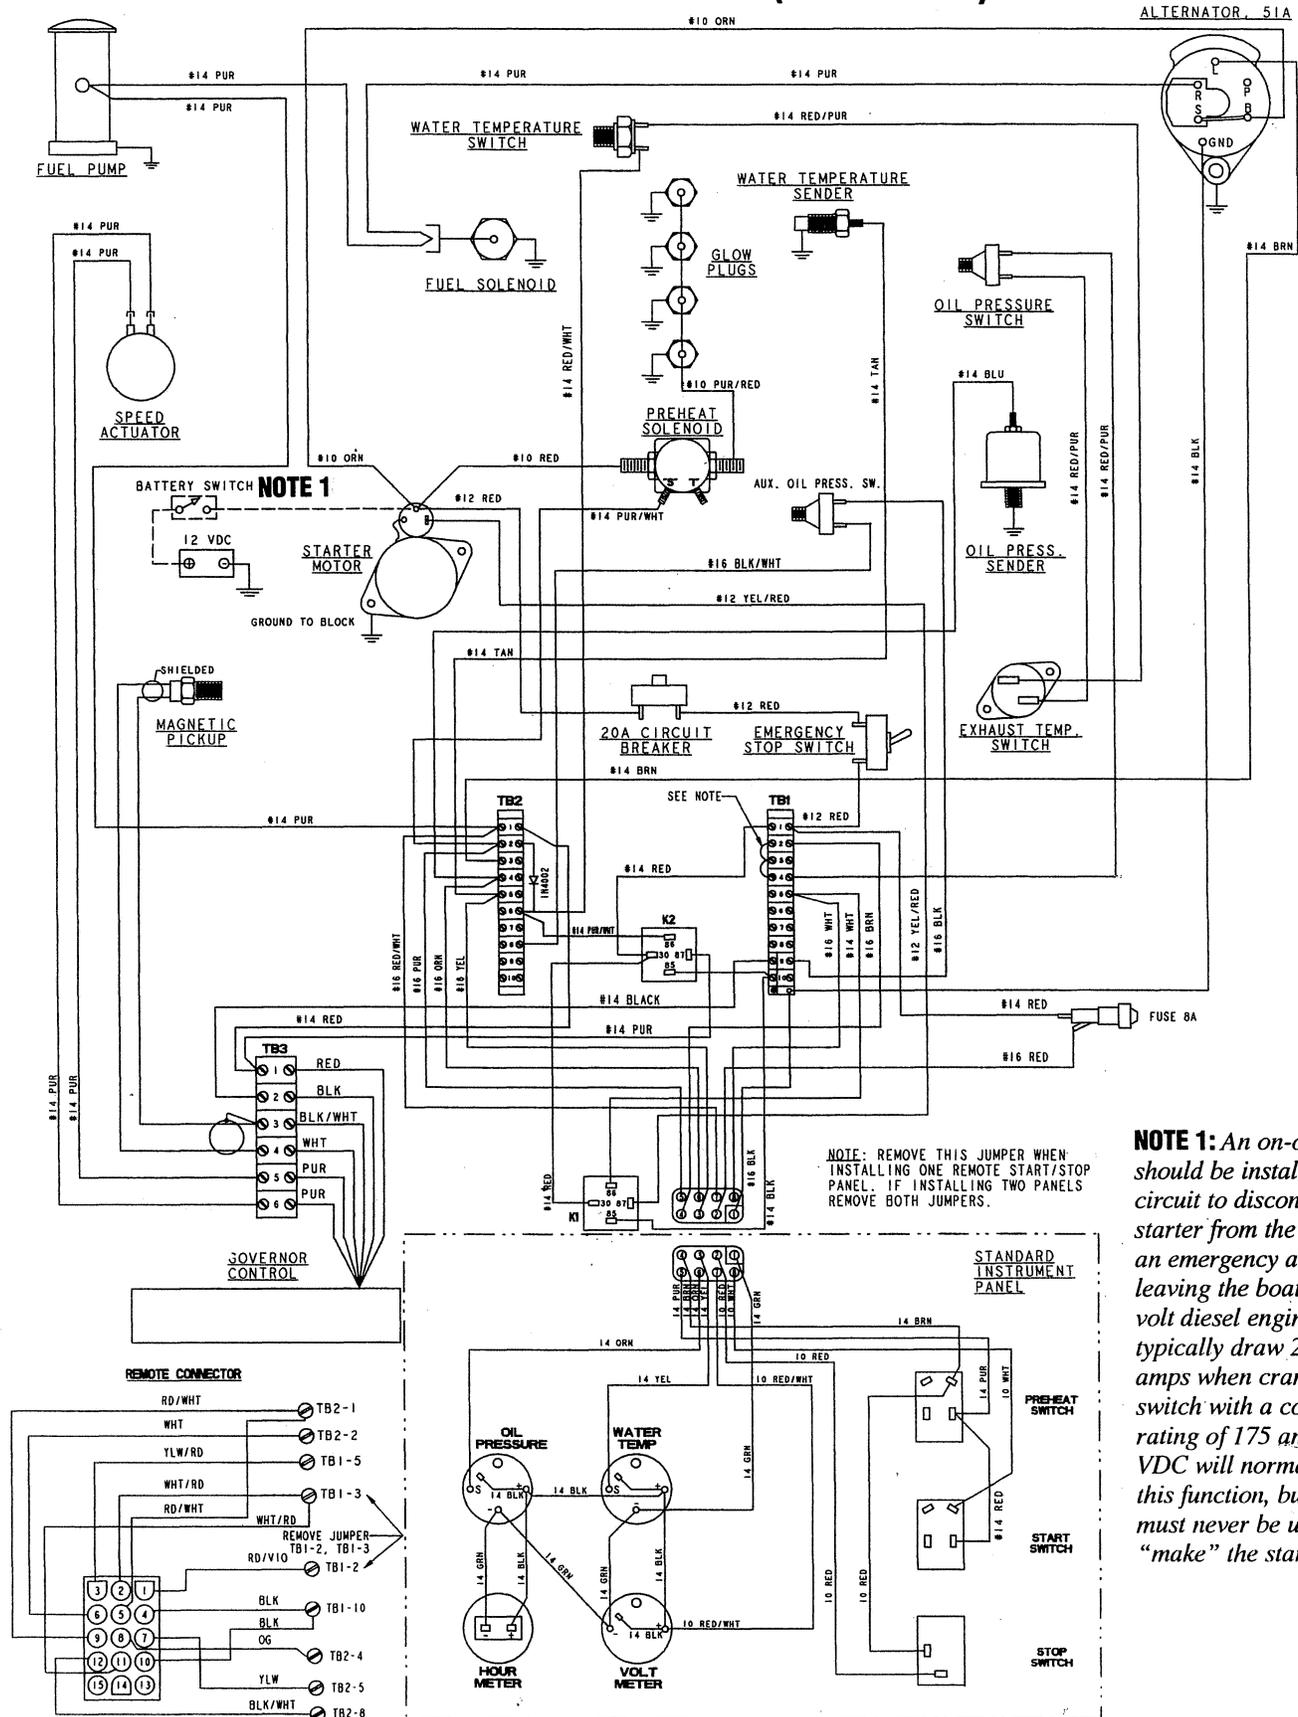


**NOTE 1:** An on-off switch should be installed in this circuit to disconnect the starter from the battery in an emergency and when leaving the boat. Twelve volt diesel engine starters typically draw 200 to 300 amps when cranking. A switch with a continuous rating of 175 amps at 12 VDC will normally serve this function, but a switch must never be used to "make" the starter circuit.

# DC ELECTRICAL SYSTEM – 32 BEDA WIRING DIAGRAM #040425 (TWO RELAYS)

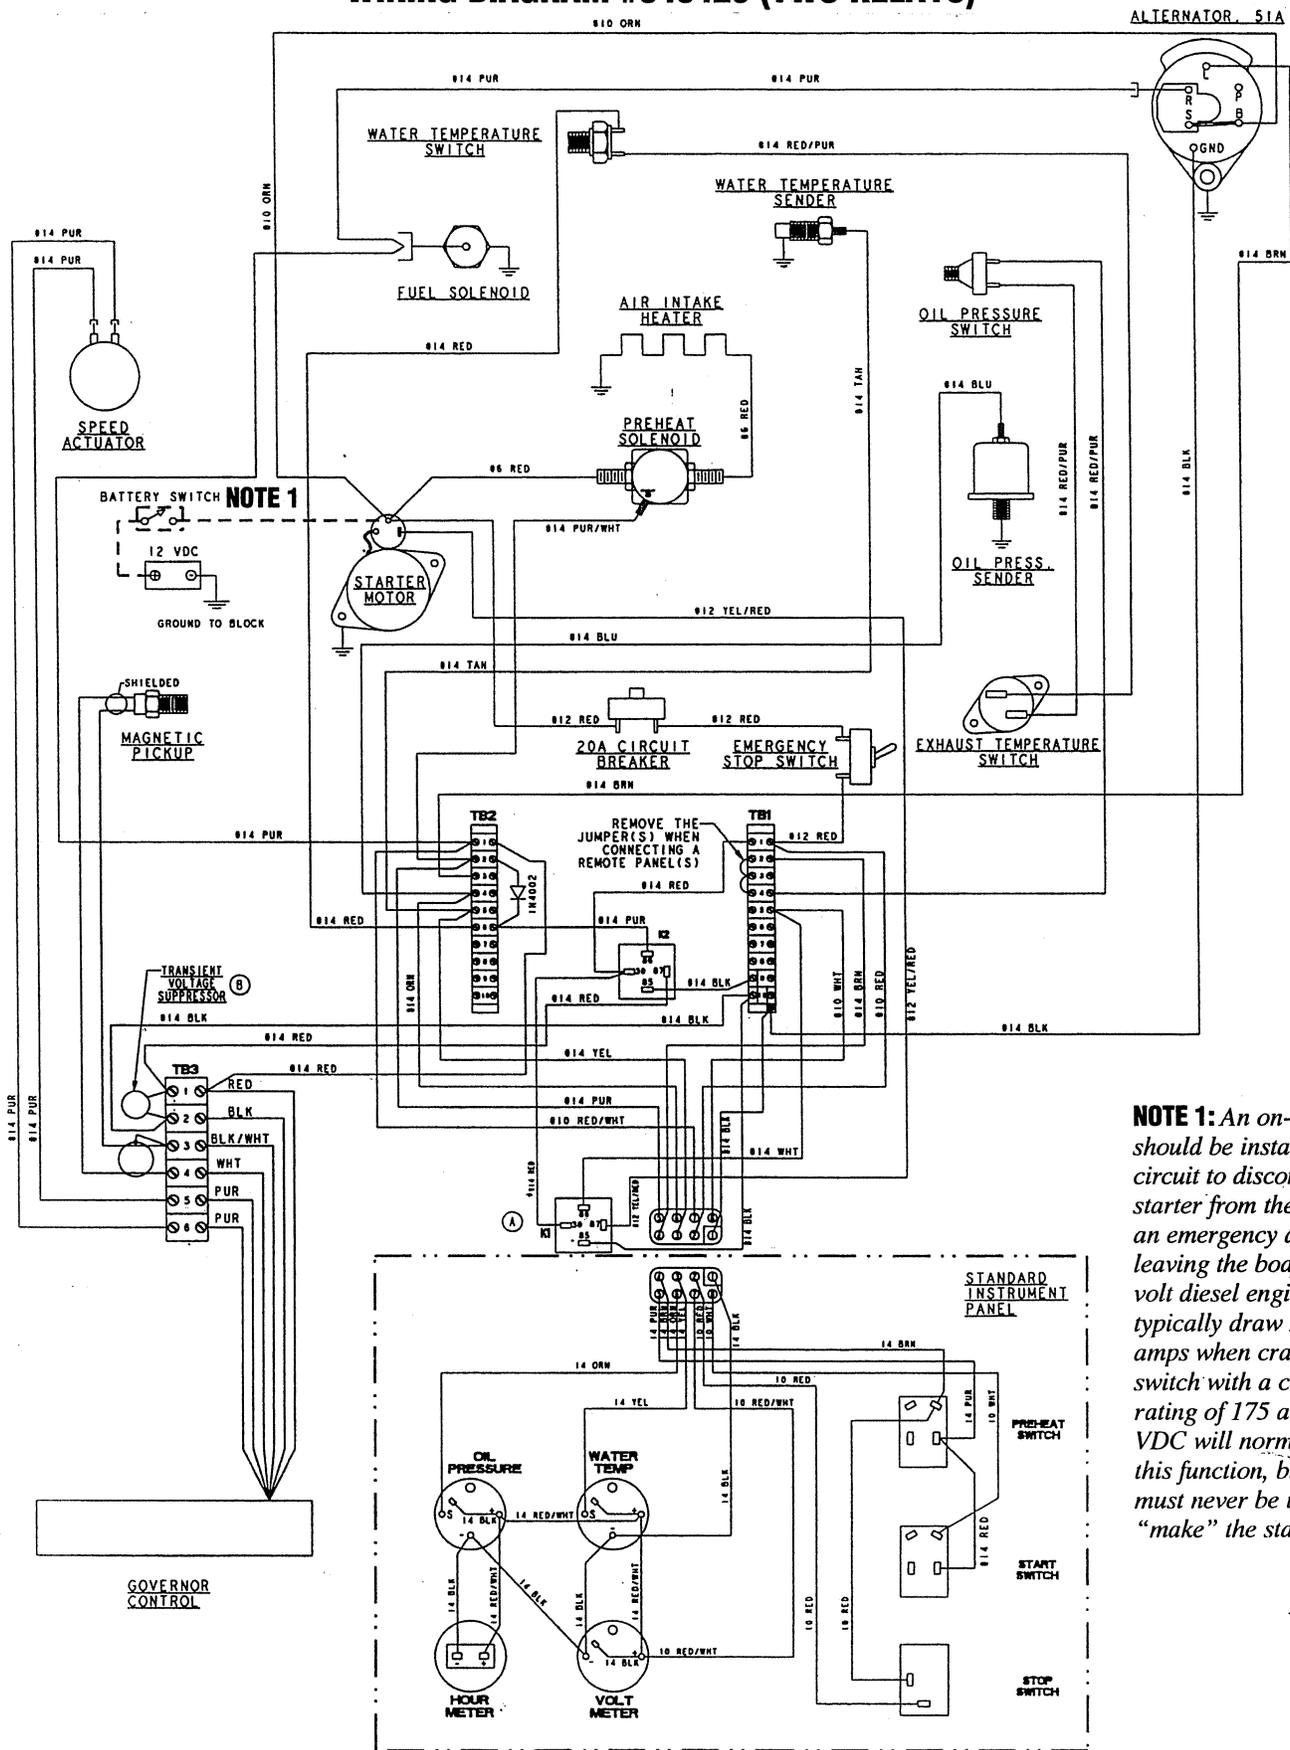


**NOTE 1:** An on-off switch should be installed in this circuit to disconnect the starter from the battery in an emergency and when leaving the boat. Twelve volt diesel engine starters typically draw 200 to 300 amps when cranking. A switch with a continuous rating of 175 amps at 12 VDC will normally serve this function, but a switch must never be used to "make" the starter circuit.


# DC ELECTRICAL SYSTEM WIRING SCHEMATIC #039422

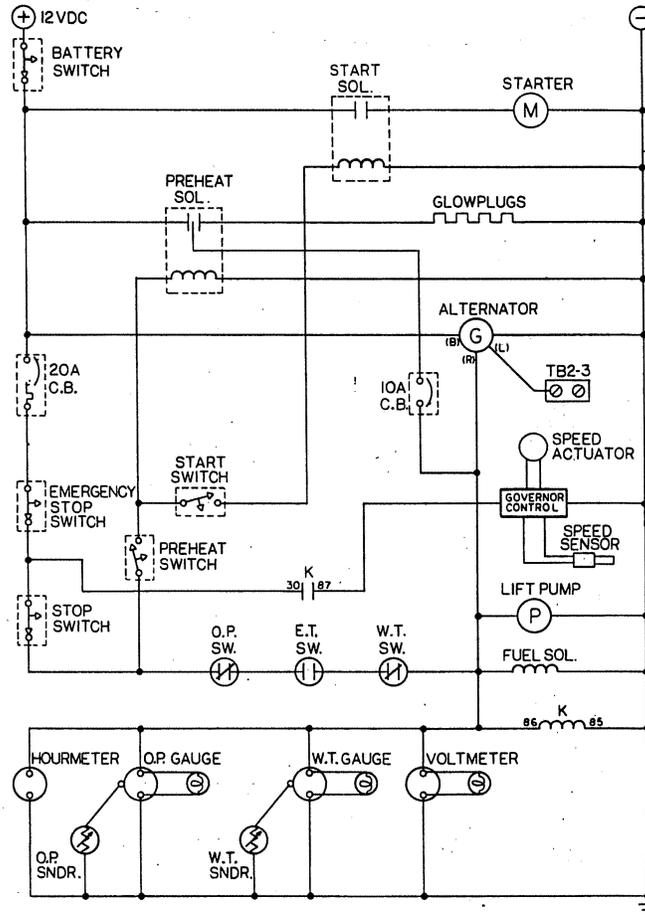


## REMOTE START/STOP PANEL

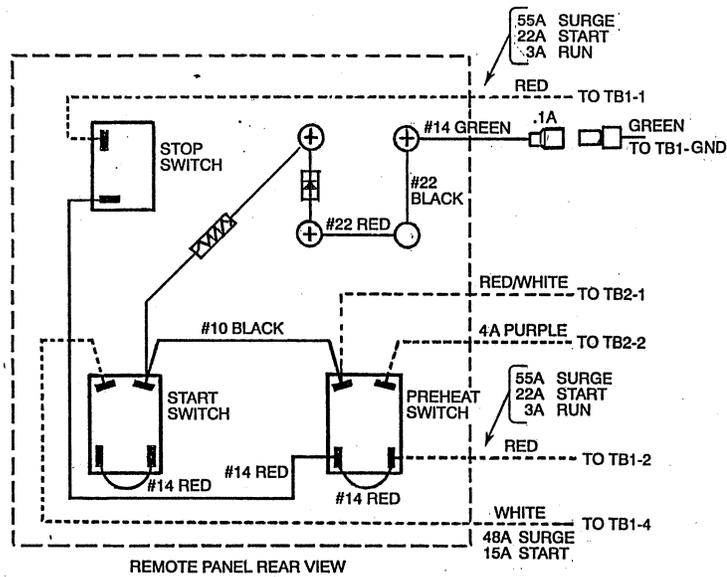

# DC ELECTRICAL SYSTEM WIRING SCHEMATIC #044105 (TWO RELAYS)

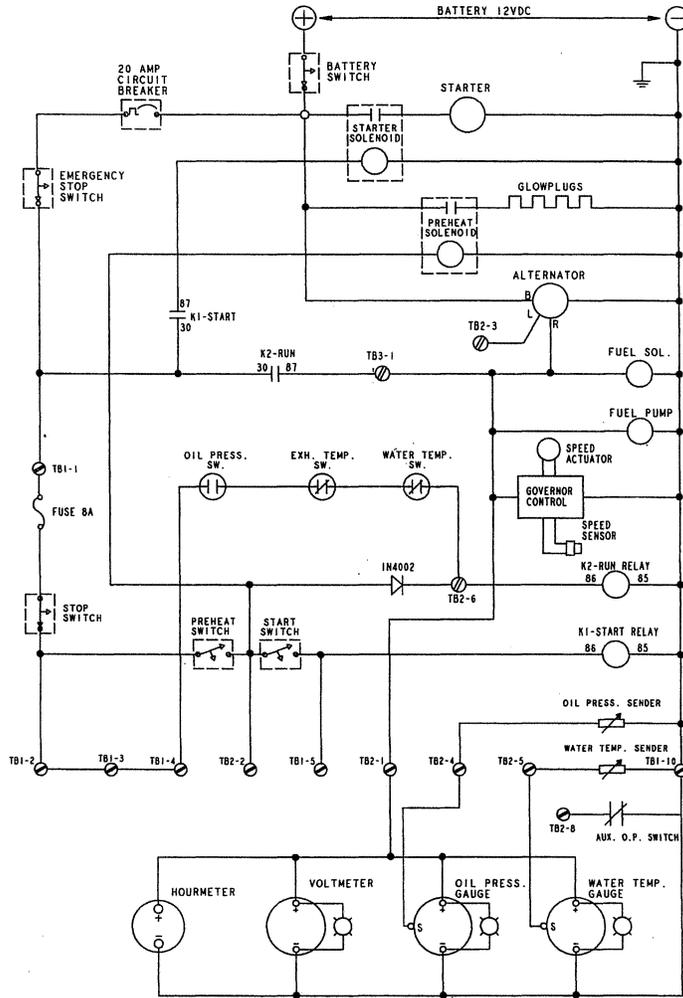


## REMOTE START/STOP WIRING #038220

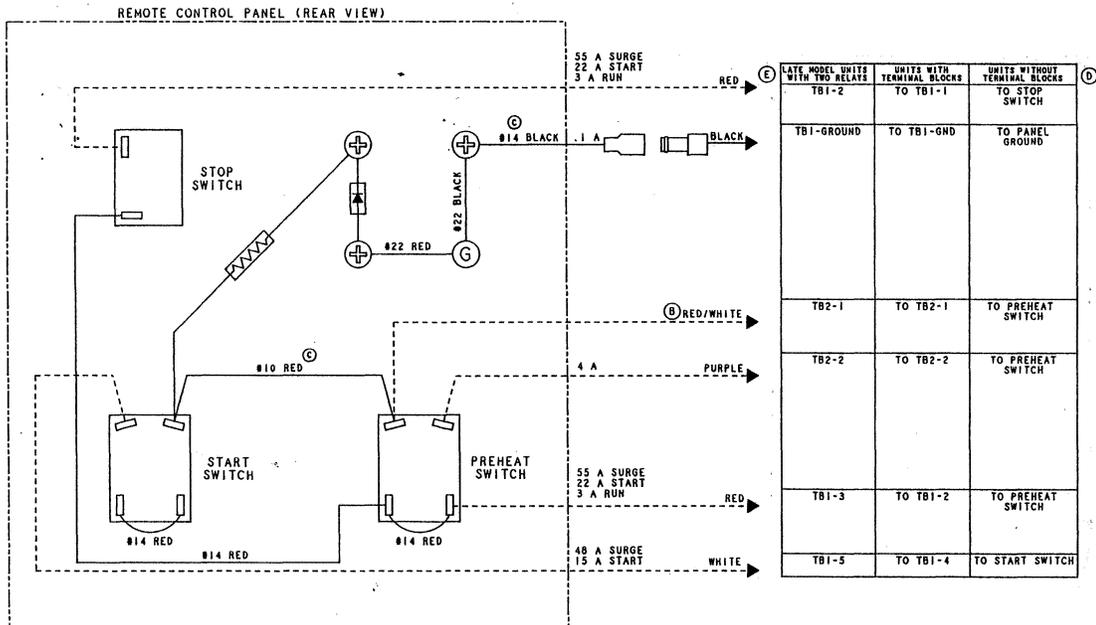


P.N. 24943

# DC ELECTRICAL SYSTEM – 32 BEDA WIRING SCHEMATIC #040425 (TWO RELAYS)

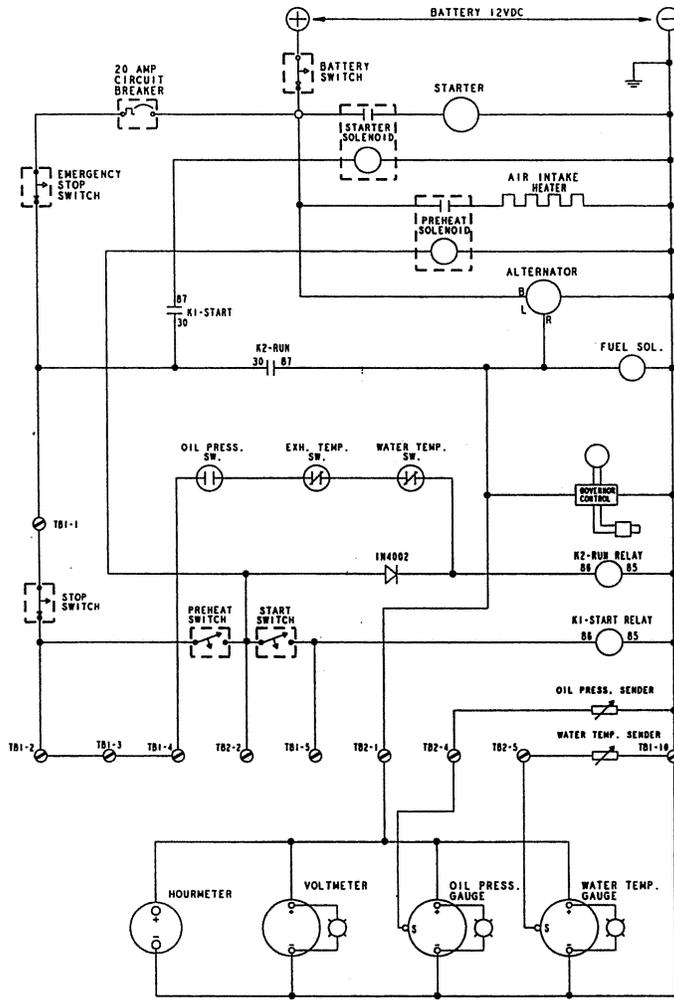


## REMOTE START/STOP WIRING #038220

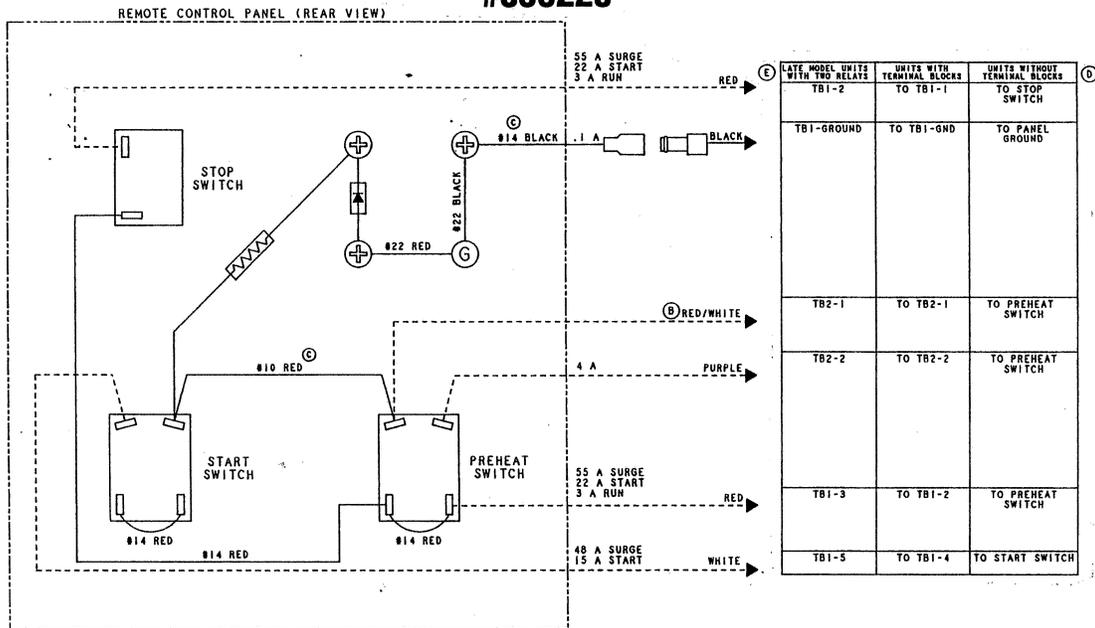



P.N. 24943




# DC ELECTRICAL SYSTEM - 32 BEDA WIRING DIAGRAM #044737 (OVERSPEED BOARD)

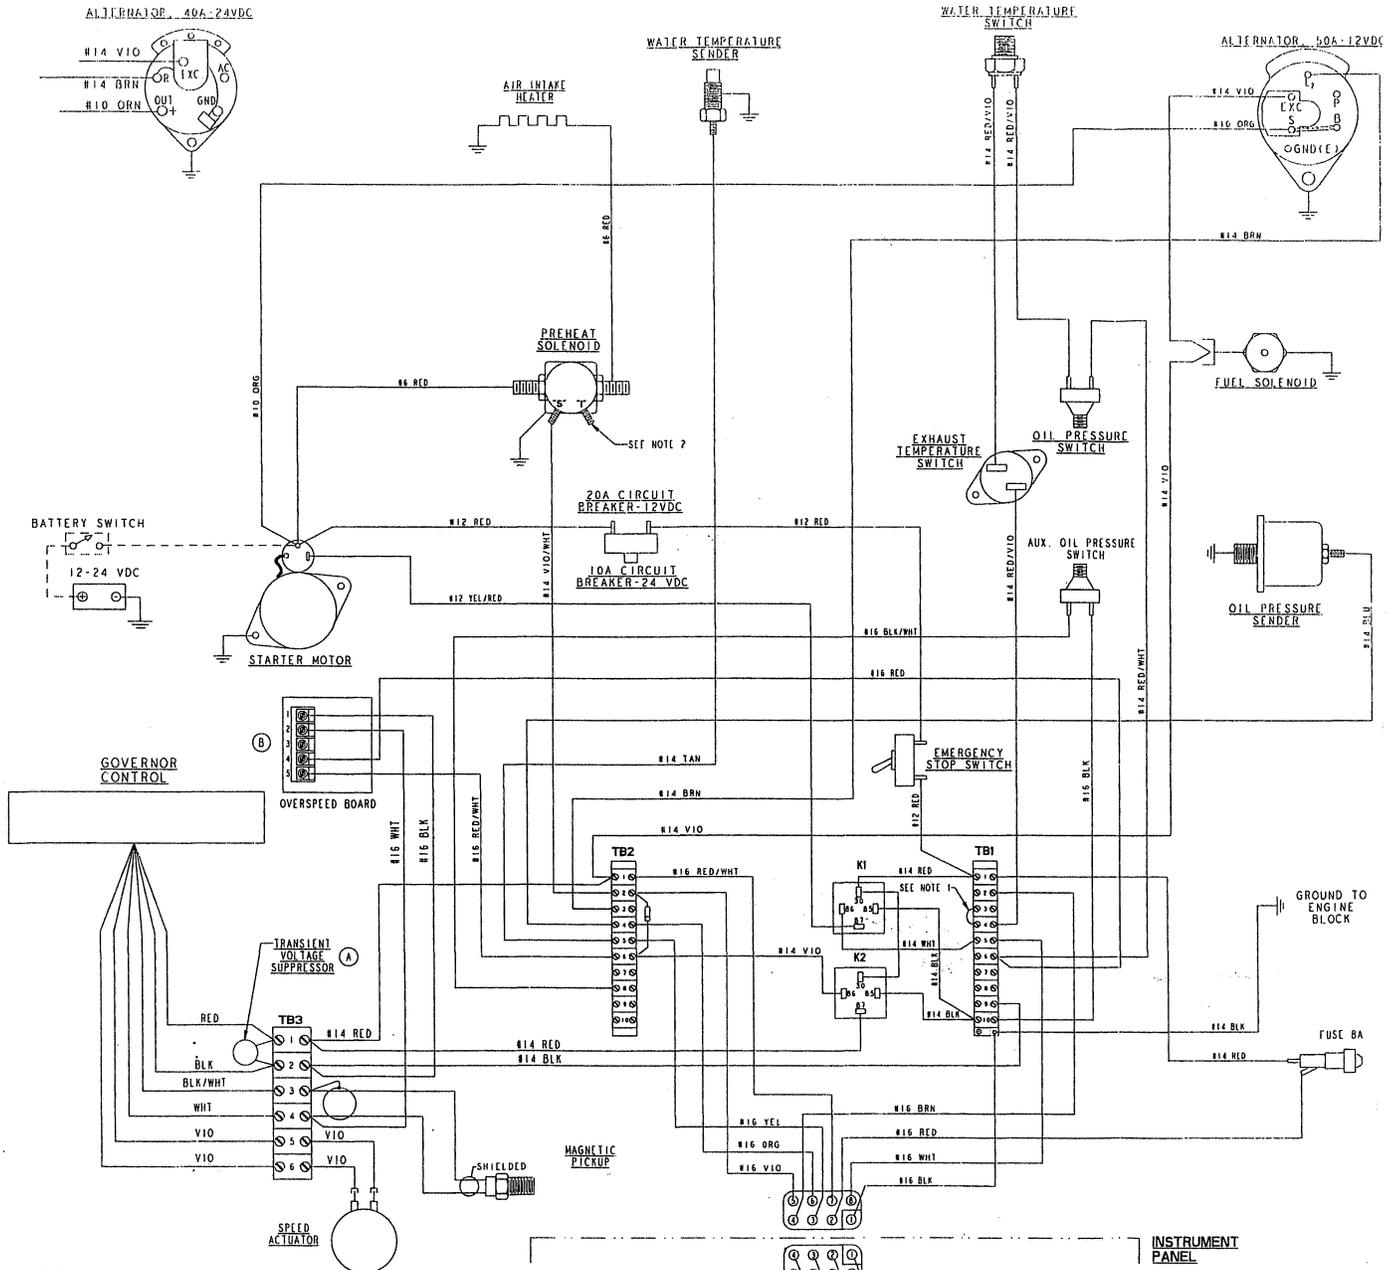

- NOTE:
1. REMOVE JUMPER WHEN CONNECTING A SECOND REMOTE PANEL.
  2. GROUND "1" TERMINAL OF PREHEAT SOLENOID ON 24V SYSTEM ONLY.

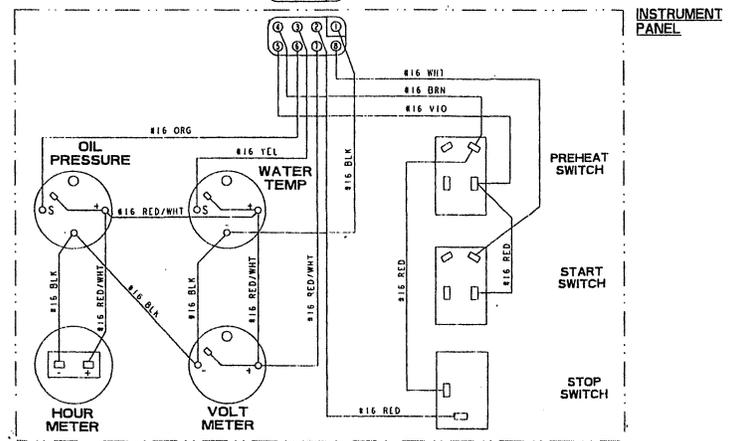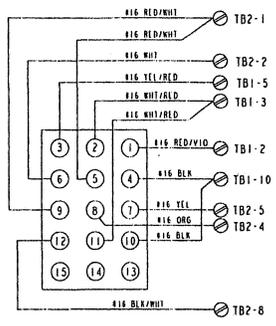

# DC ELECTRICAL SYSTEM - 32 BEDA WIRING SCHEMATIC #044737 (OVERSPEED BOARD)

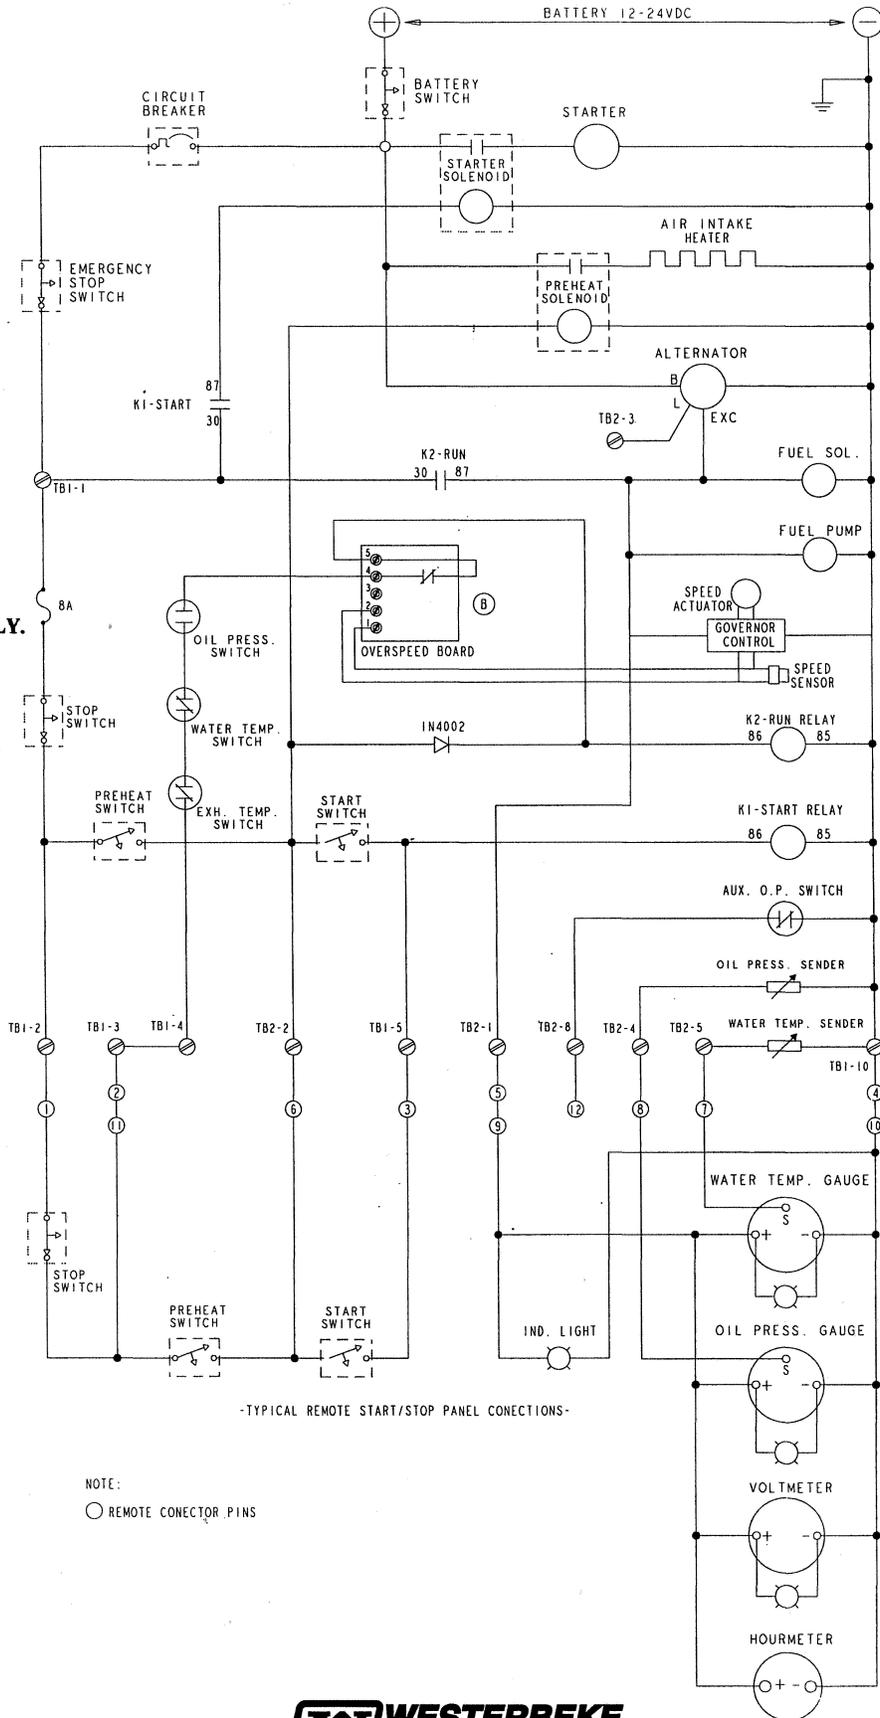

**Note: Overspeed Board**  
When troubleshooting this board.  
To by-pass for test purposes **ONLY**.  
Move connection #4 onto #5.

-TYPICAL REMOTE START/STOP PANEL CONNECTIONS-

NOTE:  
○ REMOTE CONNECTOR PINS

# ELECTRONIC GOVERNOR

## ELECTRONIC GOVERNING SYSTEM

The system is composed of three basic components:

1. Controller – Mounted inside the instrument panel box.
2. Sensor - Installed on the generator stator housing over the flywheel ring gear.
3. Actuator - Mounted at the front of the engine and attached with linkage to the throttle arm of the injection pump.




## Controller Adjustments

1. Speed. - This adjustment is used to raise or lower engine speed to the desired hertz.
2. Gain - This adjustment affects the reaction time of the actuator to the generator/engine load changes.

**NOTE:** A high gain adjustment can induce an oscillating of the actuator producing a hunting mode. In such cases, lessen the gain adjustment.

## Calibration

1. With no power to the governor (engine not running) adjust the GAIN potentiometer to 9:00 o'clock.
  2. Start the engine and adjust the speed by turning the SPEED potentiometer clockwise to desired speed.
- NOTE:** Controllers are factory adjusted to minimum rpm. However, for safety, one should be capable of disabling the engine if an overspeed should exist.
3. At no load, turn the GAIN potentiometer clockwise until the engine begins to hunt. If the engine does not hunt, physically upset the governor linkage.
  4. Turn the gain potentiometer counterclockwise until the engine runs stable.

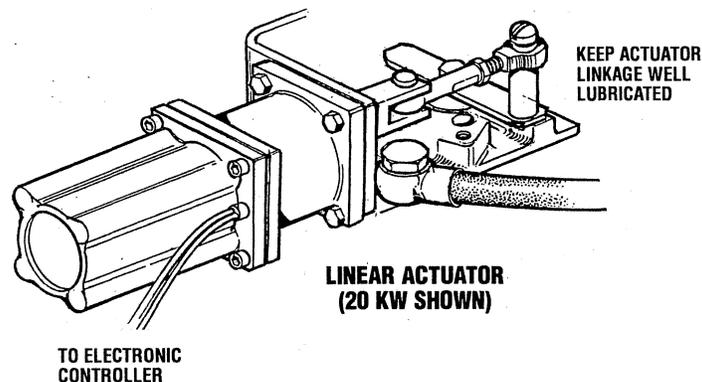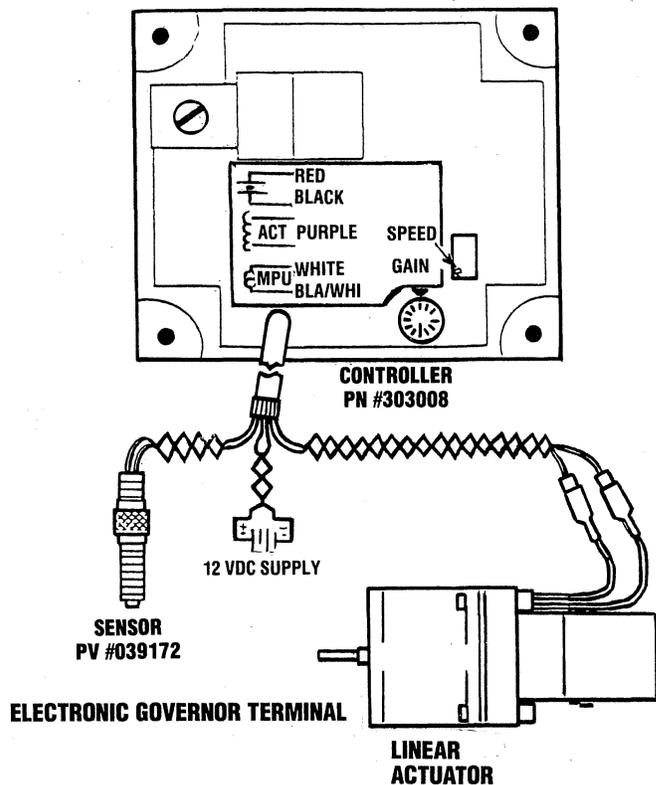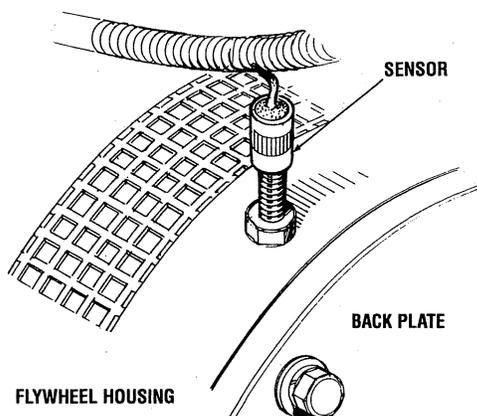

**NOTE:** A booklet "ELECTRONIC GOVERNORS" Analog Diesel Models. Is available in pdf form off our website: [www.westerbeke.com](http://www.westerbeke.com) under your specific model.

# TROUBLESHOOTING THE ELECTRONIC GOVERNOR

Problem	Probable Cause	Verification/Remedy
System appears dead (Engine runs at idle.)	<ol style="list-style-type: none"> <li>1. Low battery voltage at controller.</li> <li>2. Stuck linkage.</li> <li>3. No signal or weak signal from sensor. (Measure AC voltage from sensor while engine is running at idle. Voltage should be 2.5 volts or greater.</li> <li>4. Check Actuator – depress PREHEAT and check for battery voltage between negative black lead at terminal block.               <ol style="list-style-type: none"> <li>a. Purple lead to black.</li> <li>b. Second purple to black.</li> </ol> </li> <li>5. Perform the following check between terminals at the actuator and the negative DC lead at the controller terminal block. (Preheat depressed).               <ol style="list-style-type: none"> <li>a. Low voltage (1.20-2.0 VDC) at either actuator connection.</li> <li>b. Battery voltage at both actuator connections.</li> <li>c. Battery voltage at one actuator lead but not the other.</li> </ol> </li> </ol>	<ol style="list-style-type: none"> <li>1. Check wiring for cause. Check battery state of charge.</li> <li>2. Lubricate, free up linkage between controller and throttle arm.</li> <li>3. Check for improperly installed or damaged sensor in flywheel housing. Replace or adjust.</li> <li>4. Replace controller if battery voltage is not present at both leads.               <ol style="list-style-type: none"> <li>a. Broken actuator lead.</li> <li>b. Broken actuator lead.</li> <li>c. Replace the actuator.</li> </ol> </li> </ol>
Actuator fully extends when PREHEAT is depressed and stays extended.	<ol style="list-style-type: none"> <li>1. Check controller. Lift one of the purple actuator leads from the terminal block. Depress PREHEAT.               <ol style="list-style-type: none"> <li>a. Actuator fully extends.</li> <li>b. Actuator does not fully extend and connections.</li> </ol> </li> </ol> <p><b>NOTE:</b> Release PREHEAT and reconnect the purple lead.</p>	<ol style="list-style-type: none"> <li>a. Short in lead to actuator.</li> <li>b. Replace controller.</li> </ol>
Actuator hunts (oscillates) and engine running.	<ol style="list-style-type: none"> <li>1. Linkage between actuator and throttle binding.</li> <li>2. Improper adjustment of GAIN on controller.</li> <li>3. Inadequate DC power supply to controller, complete the following tests:                 Connect a DC voltmeter across the plus and negative leads at the controller terminal block.                 Lift both purple leads from the terminal block.                 Connect one purple lead to the C plus terminal and the other to the DC negative.                 Momentarily depress PREHEAT. The actuator should fully extend.             </li> <li>3a. Sensor positioned marginally too far away from flywheel teeth giving erratic signal voltage to controller.</li> </ol>	<ol style="list-style-type: none"> <li>1. Lubricate/free-up.</li> <li>2. Lessen GAIN adjustment (Recalibrate the Controller).</li> <li>3. If actuator does not fully extend, check the actuator leads. If the voltage is less than specified, check for loose or poor connections, low battery voltage, voltage drop in DC circuit due to remote panel installation and small wire sizes making connections.                 DC voltage registering on the meter should be:                12 VDC System – 9.6 VDC or higher                24 VDC System – 19.2 VDC or higher   <b>NOTE:</b> Reconnect actuator leads properly after making this test.             </li> <li>3a. Check the position of the sensor.</li> </ol>

# ENGINE ADJUSTMENTS

**NOTE:** WESTERBEKE recommends that the following engine adjustments be performed by a competent engine mechanic. The information below is provided to assist the mechanic.

## VALVE CLEARANCE ADJUSTMENT

**NOTE:** Retorque the cylinder head bolts before adjusting the engine's valves. See TORQUING THE CYLINDER HEAD BOLTS.

**CAUTION:** Adjust the valve clearance when the engine is cold. Valves are adjusted by cylinder in the firing order of the engine. Tighten the cylinder head bolts to the specified torque before adjusting the valves.

Pull off the air breather pipe from the rocker cover, and take off the rocker cover bolts and the rocker cover to expose the rocker shaft and valve assembly.


Position the No. 1 piston at Top Dead Center (TDC) on its compression stroke and adjust the # 1, 2, 3 and 6 valves as illustrated.

Position the No. 4 piston at TDC of its compression stroke and adjust the # 4, 5, 7 and 8 valves. The valves are numbered 1 to 8 from the front of the engine to the back.


Adjust each valve's clearance by inserting a 0.012 inch (0.3 mm) feeler gauge between the rocker arm and the valve stem. Make sure to adjust all valves to 0.012 inches (0.3 mm) while the engine is cold.

### VALVE ADJUSTMENT SEQUENCE

WHEN NO. 4 CYLINDER IS AT TOP DEAD CENTER

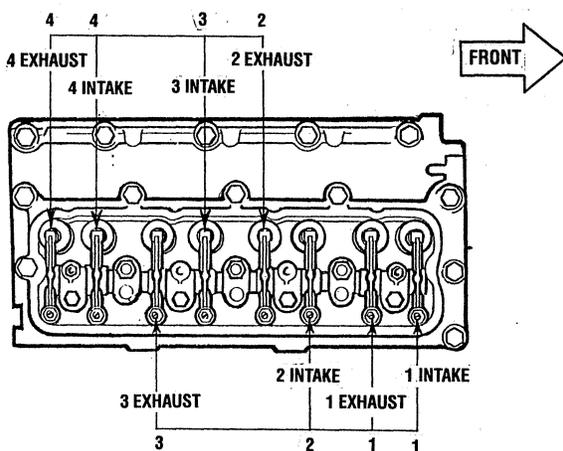

WHEN NO. 1 CYLINDER IS AT TOP DEAD CENTER

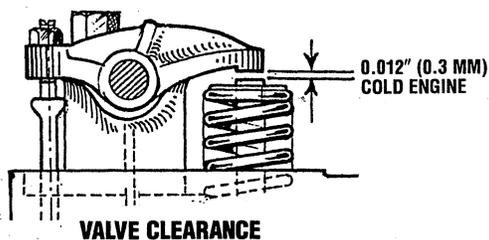

## DRIVE BELT ADJUSTMENT

For your safety, Westerbeke generator models come equipped with belt guards that cover over the belt(s) on the front of the engine. ("Out of sight - out of mind." The belt guard is NOT installed for that purpose.) Operators are advised that proper inspection, service, and maintenance is required.


Drive belts must be properly tensioned. Loose drive belts will not provide proper alternator charging and will eventually damage the alternator. Drive belts that are too tight will pull the alternator out of alignment and/or cause the alternator to wear out prematurely. Excessive drive belt tension can also cause rapid wear of the belt and reduce the service life of the fresh water pump's bearing. A slack belt or the presence of oil on the belt can cause belt slipping, resulting in high operating temperatures.

The drive belt is properly adjusted if the belt can be deflected no less than 3/8 inch (10mm) and no more than 1/2 inch (12mm) as the belt is depressed with the thumb at the mid-point between the two pulleys on the longest span of the belt. A spare belt or belts should always be carried on board.

**WARNING:** Never attempt to check or adjust the drive belt's tension while the engine is in operation.

### Adjusting Belt Tension


1. Remove the belt guard.
2. Loosen the alternator adjusting strap bolt and the base mounting bolt.
3. With the belt loose, inspect for wear, cracks, and frayed edges.
4. Pivot the alternator on the base mounting bolt to the left or right as required, to loosen or tighten.
5. Tighten the base mounting bolt and the adjusting strap bolt.
6. Operate the generator for about 5 minutes then shut down and recheck the belt tension.
7. Replace the guard.

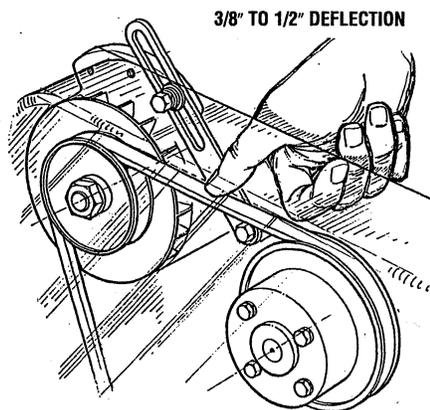

# ENGINE ADJUSTMENTS


## TORQUING CYLINDER HEAD BOLTS

Tighten the cylinder head bolts according to the sequence shown in the illustration below. Make sure the engine is cold when this is done, and loosen one head bolt one-half turn and then tighten it between 85 to 90 lb-ft. (11.8 to 12.5 kg/m) for the BED 20KW and 25KW. The 32 KW head bolts do NOT require retorquing.

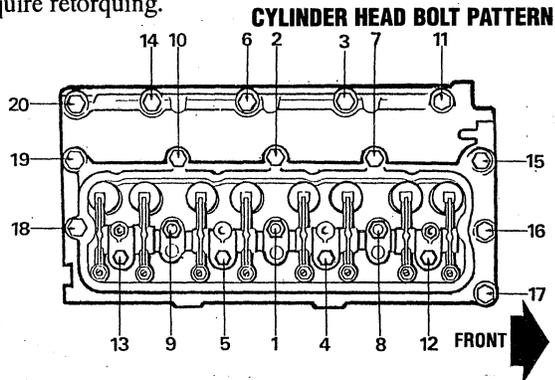

## ENGINE COMPRESSION

Check the compression pressure. To do this, warm the engine, remove all fuel injectors, or glow plugs, disconnect the fuel shut-off solenoid wire, and install a compression adapter in the injector hole or glow plug hole. Connect a compression tester on the adapter and crank the engine with the starter motor until the pressure reaches a maximum value. Repeat this process for each cylinder. Look for cylinders with dramatically (at least 20%) lower compression than the average of the others. Compression pressure should not differ by more than 42.7 psi (3.0 kg/cm<sup>2</sup>) at 200 rpm.

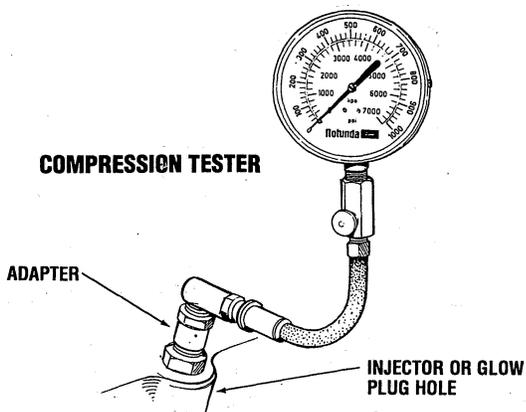


If a weak cylinder is flanked by healthy cylinders, the problem is either valve-or piston related. Check the valve clearances for the weak cylinder, adjust as needed and test again. If the cylinder is still low apply a small amount of oil into the cylinder to seal the rings and repeat the test. If compression comes up – the rings are faulty.

Abnormally high readings on all cylinders indicate heavy carbon accumulations, a condition that might be accompanied by high pressures and noise.

**NOTE:** In case of severe vibrations and detonation noise, have the injectors checked and overhauled by an authorized fuel injection service center. Poor fuel quality, contaminates and loss of positive fuel pressure to the injection pump will result in injector faults.

## TESTING FUEL INJECTORS


Remove the injectors and check injector spray pressure and spray pattern. Correct as needed.

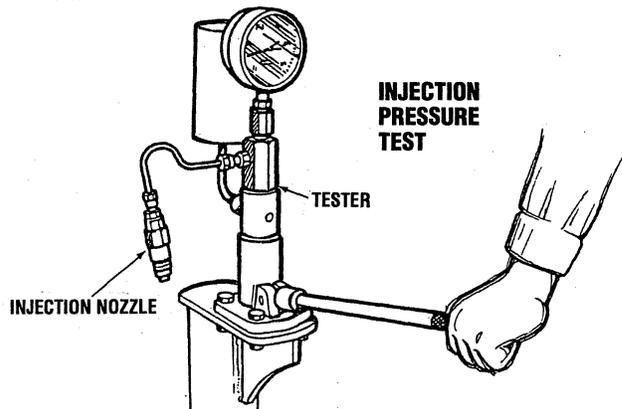

- Using the nozzle tester, check the spray pattern and injection starting pressure of nozzle and, if it exceeds the limit, adjust or replace the nozzle. When using nozzle tester, take the following precautions:

**CAUTION:** The spray injected from the nozzle is of such velocity that it may penetrate deeply into the skin of fingers and hands, destroying tissue. If it enters the bloodstream, it may cause blood poisoning.

- If the diesel fuel of the nozzle tester is stained, replace it. At the same time, clean or replace the fuel filter.
- Set the nozzle tester in a clean place where there is no dust or dirt.
- Mount the nozzle and nozzle holder on the nozzle tester.
- Operate the hand lever of nozzle tester several times to bleed the air in the nozzle line, then move the hand lever at intervals of one stroke per second while reading the injection starting pressure. Refer to the models Specification page for Injector Spray Pressure.

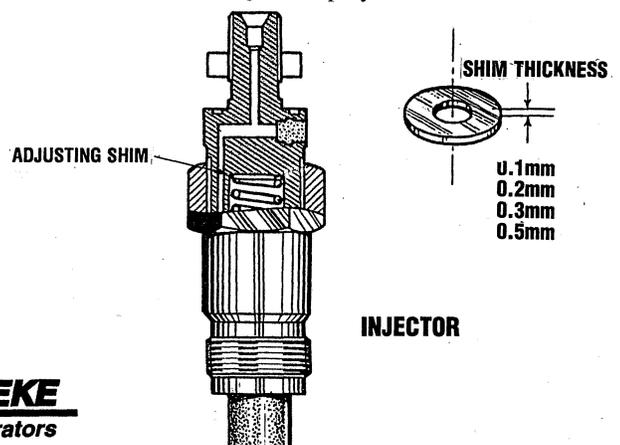

# ENGINE ADJUSTMENTS


If the pressure is different from the standard value, adjust to the specified pressure by increasing or decreasing the thickness of the adjusting shim.

The shim has 10 different thicknesses for every 0.05 mm (0.0020 in) from 1.0 mm (0.0393 in) to 1.95 mm (0.0768 in). As 0.05 mm (0.0020 in) is increased, approx. 5.0 kg/cm<sup>2</sup> (71.1 lb/in<sup>2</sup>) of injection pressure increases.

When replacing the shim, grip the retaining nut in a vise and remove the body with a wrench. Tighten the retaining nut to the specified torque.


## INSPECTING THE SPRAY PATTERN

1. Operate the hand lever of the nozzle tester at intervals of one stroke per second to check if the fuel is injected correctly in its axial direction. A nozzle is defective if it injects fuel in an oblique direction or in several separate strips. Also, a spray in the form of particles indicates a defect. These defects may sometimes be caused by clogging with dust and, therefore, all parts should be carefully cleaned before reassembly. (Care should be taken not to expose one's skin to this spray as it may penetrate the skin and cause infection.)

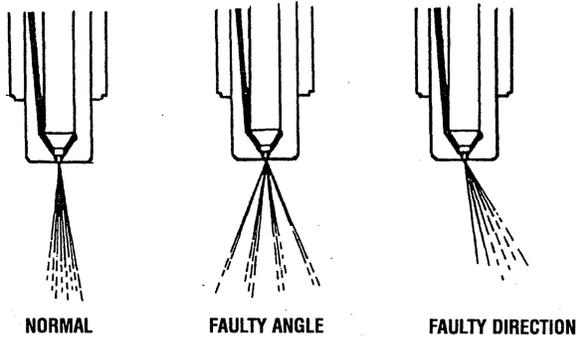

## CHATTERING TEST

2. Apply the pressure of 115 kg/cm<sup>2</sup> (1635 lb/in<sup>2</sup>) to nozzle by operating the hand lever, and check the drips from the nozzle tip. If it drips or has a large accumulation of fuel on the bottom, it is considered defective and should be replaced. A very small amount of fuel may sometimes remain on the tip of the nozzle; however, this does not indicate a defect.

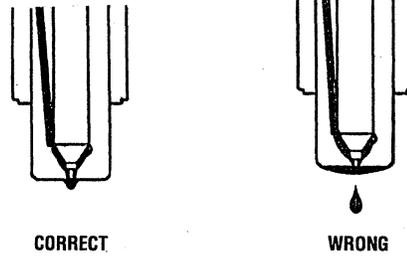

## AFTER DRIP TEST

# ENGINE TROUBLESHOOTING

The tables which follow indicate troubleshooting procedures based upon certain problem indicators, the probable causes of the problems, and the recommendations to overcome these problems.

**Note:** *The engine's electrical system is protected by a 20 amp manual reset circuit breaker located on a bracket at the rear of the engine. The preheat solenoid is close by, as is the emergency STOP switch, which may be mounted on the same bracket or on the back of the instrument panel, depending upon the generator model.*

Problem	Probable Cause	Verification/Remedy
Key switch on, PREHEAT switch depressed; no panel indications; fuel solenoid or electrical fuel pump	<ol style="list-style-type: none"> <li>1. Battery Switch not on.</li> <li>2. Emergency stop switch off.</li> <li>2. 20-Amp circuit breaker tripped.</li> <li>3. 10-Amp breaker tripped on preheat solenoid.</li> <li>4. Loose battery connections.</li> <li>5. Preheat solenoid not operating.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check switch and/or battery connections.</li> <li>2. Check emergency stop switch position.</li> <li>2. Reset breaker; if breaker trips again, check preheat solenoid circuit and check circuit for shorts to ground.</li> <li>3. Check voltage at and after breaker on preheat solenoid.</li> <li>4. Check (+) connection to starter solenoid and (-) connection to engine ground stud. Check battery cable connections.</li> <li>5. Check solenoid "S" terminal for voltage.</li> </ol>
START SWITCH DEPRESSED, no starter engagement.	<ol style="list-style-type: none"> <li>1. Connection to solenoid faulty.</li> <li>2. Faulty switch.</li> <li>3. Faulty solenoid.</li> <li>4. Loose battery connections.</li> <li>5. Low battery.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check connection.</li> <li>2. Check switch with ohmmeter.</li> <li>3. Check that 12 volts are present at the solenoid connection.</li> <li>4. Check battery connections.</li> <li>5. Check battery charge state.</li> </ol>
START switch is depressed; panel indications OK; starter solenoid OK fuel solenoid not functioning.	<ol style="list-style-type: none"> <li>1. Poor connections to fuel solenoid.</li> <li>2. Defective fuel solenoid.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check connections.</li> <li>2. Check that 12 volts are present at the (+) connection on the fuel run solenoid.</li> </ol>
Generator engine cranks, but does not start, fuel solenoid energized.	<ol style="list-style-type: none"> <li>1. Faulty fueling system.</li> <li>2. Preheat solenoid faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check that fuel valves are open. <ol style="list-style-type: none"> <li>1a. Switch to combine house and start batteries.</li> <li>1b. Replace batteries.</li> <li>2c. Check fuel lift pump.</li> </ol> </li> <li>2. Check solenoid.</li> </ol>
Engine can't be stopped.	<ol style="list-style-type: none"> <li>1. Faulty DC alternator.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove Exc. connection at alternator, repair alternator.</li> </ol>
Battery runs down.	<ol style="list-style-type: none"> <li>1. Oil Pressure switch.</li> <li>2. High resistance leak to ground.</li> <li>3. Low resistance leak.</li> <li>4. Poor battery connections.</li> <li>5. DC alternator not charging..</li> </ol>	<ol style="list-style-type: none"> <li>1. Observe if gauges and panel lights are activated when engine is not running. Test the oil pressure switch.</li> <li>2. Check wiring. Insert sensitive (0 - .25 amp) meter in battery lines. (Do not start engine.) Remove connections and replace after short is located.</li> <li>3. Check all wires for temperature rise to locate the fault.</li> <li>4. Check cable connections at battery for loose connections, corrosion.</li> <li>5. Check connections, check belt tension, test alternator. See <i>DC ELECTRICAL SYSTEM/ALTERNATOR</i>.</li> </ol>
Battery not charging	<ol style="list-style-type: none"> <li>1. DC charge circuit faulty.</li> <li>2. Alternator drive.</li> </ol>	<ol style="list-style-type: none"> <li>1. Perform D.C. voltage check of generator charging circuit. See <i>Testing the Battery Charging Circuit</i> in this manual.</li> <li>2. Check drive belt tension. Alternator should turn freely. Check for loose connections. Check output with voltmeter. Ensure 12 volts are present at the Exc. terminal.</li> </ol>
Generator engine stops.	<ol style="list-style-type: none"> <li>1. Fuel lift pump failure.</li> <li>2. Switches and/or wiring loose - or disconnected.</li> <li>3. Fuel starvation.</li> <li>4. 20 Amp circuit breaker tripping.</li> <li>5. Exhaust system is restricted.</li> <li>6. Water in fuel.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fuel lift pump should make a distinct ticking sound. Replace pump with spare.</li> <li>2. Inspect wiring for short circuits and loose connections. Inspect switches for proper operation.</li> <li>3. Check fuel supply, fuel valves, fuel lift pump.</li> <li>4. Check for high DC amperage draw during operation. Ensure breaker is not overly sensitive to heat which would cause tripping.</li> <li>5. Check for blockage, collapsed hose, carbon buildup at exhaust elbow.</li> <li>6. Pump water from fuel tank(s); change filters and bleed fuel system.</li> </ol>

# ENGINE TROUBLESHOOTING

Problem	Probable Cause	Verification/Remedy
Generator engine overheats/shuts down.	<ol style="list-style-type: none"> <li>1. Raw water not circulating.</li> <li>2. Coolant not circulating.</li> </ol>	<ol style="list-style-type: none"> <li>1. Raw water pump failure. Check impeller — replace.</li> <li>2. Obstruction at raw water intake or raw water filter.               <ol style="list-style-type: none"> <li>2a. Thermostat — remove and test in hot water. Replace thermostat.</li> <li>2b. Loss of coolant — check hoses, hose clamps, drain plug, etc. for leaks.</li> <li>2c. Broken or loose belts — tighten/replace.</li> <li>2d. Air leak in system; run engine and open the pressure cap to bleed air. Add coolant as needed.</li> </ol> </li> </ol>
Generator engine shuts down, Low oil pressure.	<ol style="list-style-type: none"> <li>1. Loss of oil.</li> <li>2. Oil pressure switch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check dipstick, look for oil leaks at oil filter and at oil drain hose connection.</li> <li>2. Replace oil pressure switch.</li> </ol>
Generator engine shuts down, High exhaust temperature.	<ol style="list-style-type: none"> <li>1. Exhaust too hot.</li> <li>2. High temperature switch opens at too low a temperature.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check raw water injection flow, look for exhaust obstruction.</li> <li>2. Check for satisfactory operation with switch bypassed, check with ohmmeter, replace if faulty.</li> </ol>
Exhaust smoking problems	<ol style="list-style-type: none"> <li>1. Blue smoke.</li> <li>2. White smoke.</li> <li>3. Black smoke.</li> </ol>	<ol style="list-style-type: none"> <li>1. Incorrect grade of engine oil.               <ol style="list-style-type: none"> <li>1a. Crankcase is overfilled with engine oil (oil is blowing out through the exhaust).</li> </ol> </li> <li>2. Engine is running cold.               <ol style="list-style-type: none"> <li>2a. Faulty injector or incorrect injector timing.</li> </ol> </li> <li>3. Improper grade of fuel.               <ol style="list-style-type: none"> <li>3a. Fuel burn incomplete due to high back pressure in exhaust or insufficient air for proper combustion (Check for restrictions in exhaust system; check air intake.).</li> <li>3b. Improperly timed injectors or valves or poor compression.</li> <li>3c. Lack of air — check air intake and air filter. Check for proper ventilation.</li> <li>3d. Overload.</li> </ol> </li> </ol>

## TROUBLESHOOTING WATER TEMPERATURE AND OIL PRESSURE GAUGES

If the gauge reading is other than what is normally indicated by the gauge when the instrument panel is energized, the first step is to check for 12 volts DC between the ignition (B+) and the Negative (B-) terminals of the gauge.

Assuming that there is 12 volts as required, leave the instrument panel energized (engine on) and perform the following steps:

1. Disconnect the sender wire at the gauge and see if the gauge reads zero, which is the normal reading for this situation.
2. Remove the electrical connection at the sender on the engine and ground it to the engine metal. The gauge should register full scale, which is the normal reading for this situation.

If both of the gauge tests are positive, the gauge is undoubtedly OK and the problem lies either with the conductor from the sender to the gauge or with the sender.

If either of the gauge tests are negative, the gauge is probably defective and should be replaced.

Assuming the gauge is OK, check the conductor from the sender to the sender terminal at the gauge for continuity.

Check that the engine block is connected to the ground. Some starters have isolated ground terminals and if the battery is connected to the starter (both plus and minus terminals), the ground side will not necessarily be connected to the block.

# GENERATOR INFORMATION

## USE OF ELECTRIC MOTORS

The power required to start an electric motor is considerably more than is required to keep it running after it is started. Some motors require much more current to start than others. Split-phase (AC) motors require more current to start, under similar circumstances, than other types. They are commonly used on easy-starting loads, such as washing machines, or where loads are applied after the motor is started, such as small power tools. Because they require 5 to 7 times as much current to start as to run, their use should be avoided, whenever possible, if the electric motor is to be driven by a small generator. Capacitor and repulsion-induction motors require from 2 to 4 times as much current to start as to run. The current required to start any motor varies with the load connected to it. An electric motor connected to an air compressor, for example, will require more current than a motor to which no load is connected.

In general, the current required to start 115-Volt motors connected to medium starting loads will be approximately as follows:

MOTOR SIZE (HP)	AMPS FOR RUNNING (AMPERES)	AMPS FOR STARTING (AMPERES)
1/6	3.2	6.4 to 22.4*
1/4	4.6	9.2 to 32.2*
1/3	5.2	10.4 to 72.8*
1/2	7.2	14.4 to 29.2*
3/4	10.2	20.4 to 40.8*
1	13	26 to 52

**\*NOTE:** In the above table the maximum Amps for Starting is more for some small motors than for larger ones. The reason for this is that the hardest starting types (split-phase) are not made in larger sizes.

Because the heavy surge of current needed for starting motors is required for only an instant, the generator will not be damaged if it can bring the motor up to speed in a few seconds. If difficulty is experienced in starting motors, turn off all other electrical loads and, if possible, reduce the load on the electric motor.

## Required Operating Speed

Run the generator first with no load applied, then at half the generator's capacity, and finally loaded to its full capacity as indicated on the generator's data plate. The output voltage should be checked periodically to ensure proper operation of the generating plant and the appliances it supplies. If an AC voltmeter or ammeter is not installed to monitor voltage and load, check it with a portable meter and amp probe.

**NOTE:** When the vessel in which the generator is installed contains AC equipment of 120 volts only, it is recommended that the generator's AC terminal block be configured to provide one 120 volt AC hot leg for the vessel's distribution panel. This will ensure good motor starting response from the generator.

## Generator Frequency Adjustment

Frequency is a direct result of engine/generator speed, as indicated by the following:

- When the generator is run at 1800 RPM, the AC voltage output frequency is 60 Hertz.
- When the generator is run at 1500 RPM, the AC voltage output frequency is 50 Hertz.

Therefore, to change the generator's frequency, the generator's drive engine's speed must be changed. Along with a reconfiguring of the AC output connections at the generator, a regulator board voltage output adjustment must also be made. See *ELECTRONIC GOVERNOR* in this manual.

## Generator Maintenance

- Maintaining reasonable cleanliness is important. Connections of terminal boards and rectifiers may become corroded, and insulation surfaces may start conducting if salts, dust, engine exhaust, carbon, etc. are allowed to build up. Clogged ventilation openings may cause excessive heating and reduced life of windings.
- For unusually severe conditions, thin rust-inhibiting petroleum-base coatings, should be sprayed or brushed over all surfaces to reduce rusting and corrosion. Typical materials suggested are Daubert Chemical Co. "Non-Rust AC-410" and Ashland "Tectyle 506" or equivalent.
- In addition to periodic cleaning, the generator should be inspected for (a) tightness of all connections, (b) evidence of overheated terminals and (c) loose or damaged wires.
- The drive discs on single bearing generators should be checked periodically if possible for tightness of screws and for any evidence of incipient cracking failure. Discs should not be allowed to become rusty because rust may accelerate cracking. The bolts which fasten the drive disc to the generator shaft must be hardened steel SAE grade 8, identified by 6 radial marks, one at each of the 6 corners of the head.
- The rear armature bearing is lubricated and sealed; no maintenance is required. However, if the bearing becomes noisy or rough-sounding, have it replaced.
- Examine bearing at periodic intervals. No side movement of shaft should be detected when force is applied. If side motion is detectable, bearings are wearing or wear on shaft of bearing socket outside bearing has occurred. Repair must be made quickly or major components will rub and cause major damage to generator.

# THE BE GENERATOR

## SINGLE AND THREE PHASE


### DESCRIPTION

This generator is a four-pole, brushless, self-excited generator which requires only the driving force of the engine to produce AC output. The copper and laminated iron in the exciter stator are responsible for the self-exciting feature of this generator. The magnetic field produced causes an AC voltage to be induced into the related exciter rotor windings during rotation. Diodes located in the exciter rotor rectify this voltage to DC and supply it to the windings of the rotating field. This creates an electromagnetic field which rotates through the windings of the main stator, inducing an AC voltage which is supplied to a load. An AC voltage is produced in the auxiliary windings of the main stator and is, in turn, supplied to a voltage regulator. The regulator produces a DC voltage to further excite the exciter stator windings, enabling the generator to produce a rated AC output. The voltage regulator senses AC voltage output and adjusts DC excitation to the exciter stator winding according to amperage load the generator is furnishing. To maintain a constant voltage output.

### CIRCUIT BREAKER


A circuit breaker is installed on all WESTERBEKE generators. This circuit breaker will automatically disconnect generator power in case of an electrical overload. The circuit breaker can be manually shut off when servicing the generator to ensure that no power is coming into the boat.

**NOTE:** This circuit breaker is available as a WESTERBEKE add-on kit for earlier model generators; contact your WESTERBEKE dealer.

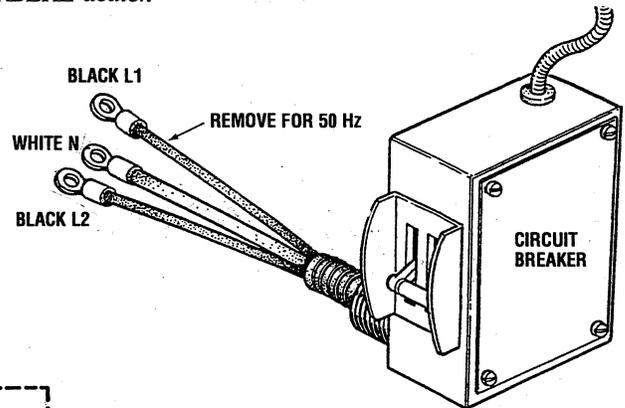

### INTERNAL WIRING SCHEMATIC

#### 3 PHASE TWELVE WIRE RECONNECTABLE

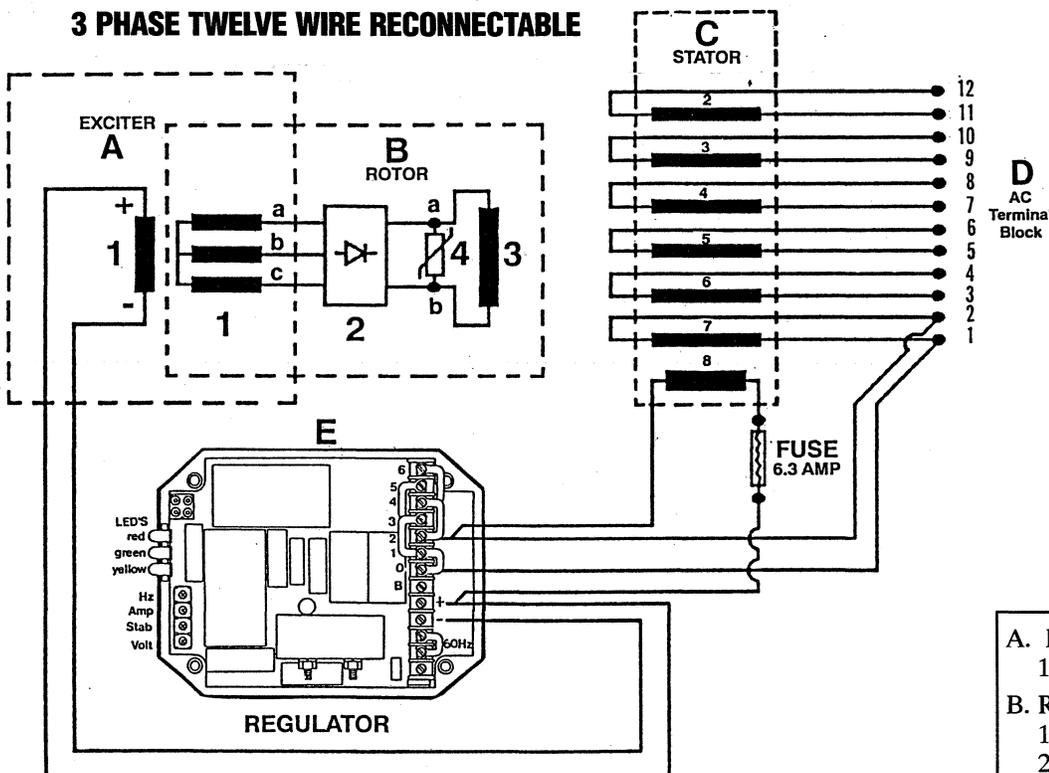

#### CIRCUIT BREAKER PART NUMBERS

20 KW - 60 Hz NO. 42701  
16 KW - 50 Hz NO. 42718)


25 KW - 60 Hz NO. 42702  
20 KW - 50 Hz NO. 42711)

32 KW - 60 Hz NO. 42703  
25 KW - 50 Hz NO. T D B)

- A. EXCITER
  - 1. Exciter Stator Windings
- B. ROTOR
  - 1. Auxiliary Windings a.b.c.
  - 2. Diodes
  - 3. Main Rotor Windings
  - 4. Pozi Resistor
- C. MAIN STATOR
  - 1. Auxiliary Windings
  - 2. - 7 Main Stator Windings
  - 3. Auxiliary Windings (AC to Regulator)
- D. AC TERMINAL BOARD
- E. REGULATOR


# INTERNAL WIRING SCHEMATICS

## SINGLE PHASE

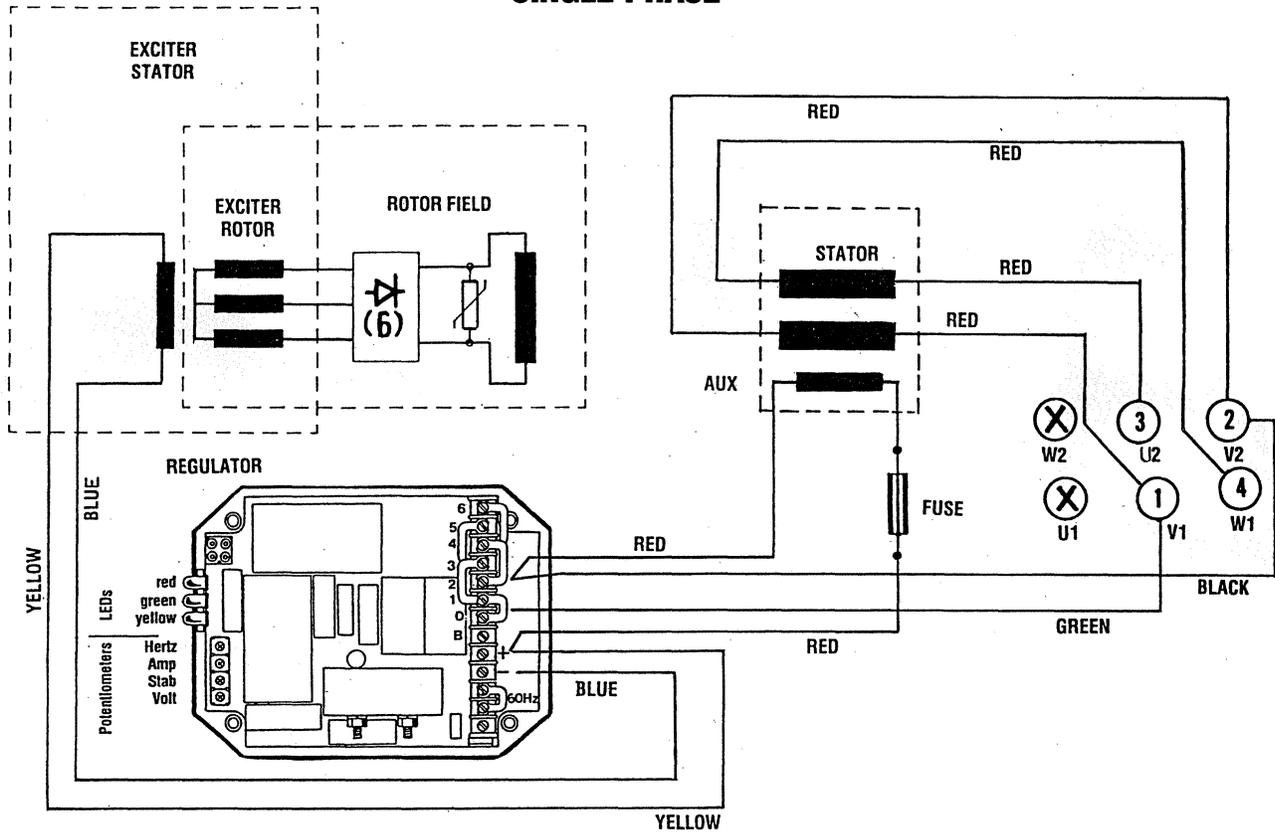

## THREE PHASE

### 6 WIRE RECONNECTABLE

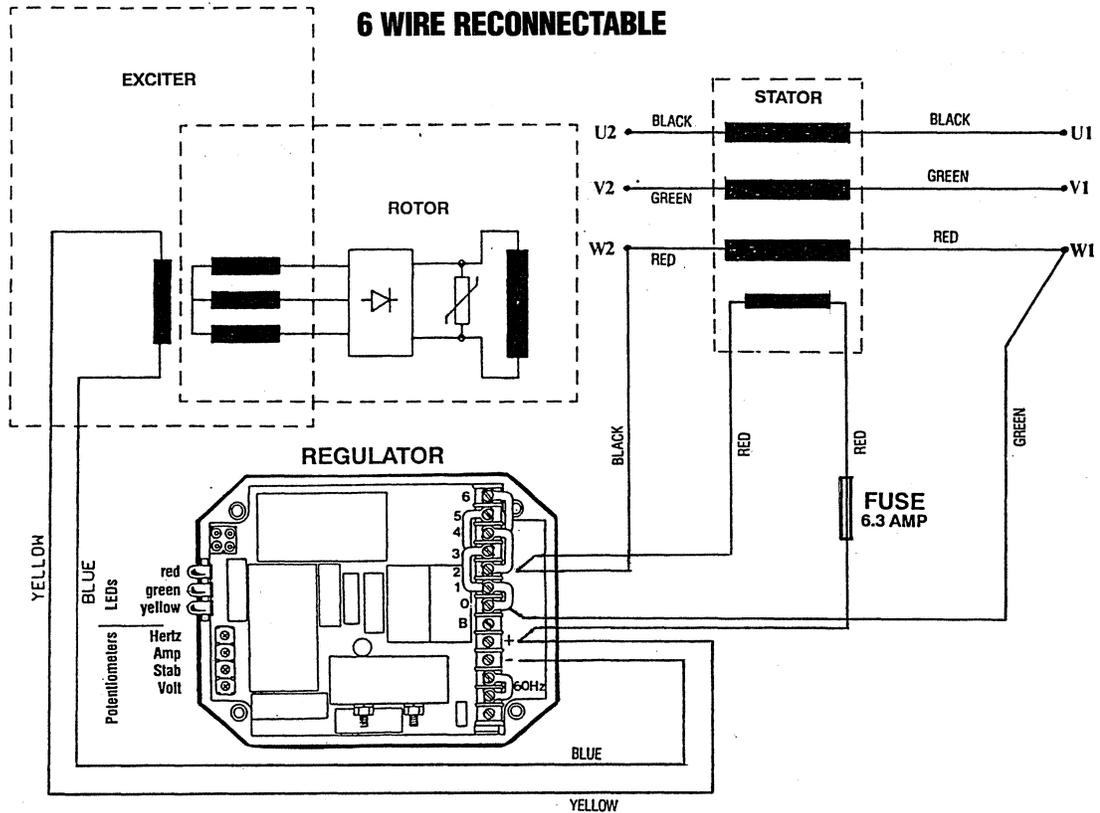

# GENERATOR AC VOLTAGE CONNECTIONS

## AC VOLTAGE CONNECTIONS



NOTE: The frame ground wire (white/green) must be properly positioned when changing the AC output configuration of the AC terminal block, use terminal ends for 1/4 inch studs that will accept multi strand copper wire sized for the amperage rating from the hot lead connection. The frame ground wire is white or white with a green strip. It connects between the neutral stud and the generator frame.

## Generator Frequency

1. Frequency is a direct result of engine/generator speed: 1800 rpm = 60 hertz; 1500 rpm = 50 hertz.
2. To change generator frequency, follow the steps below:  
Configure the AC terminal block for the desired voltage frequency as shown. Ensure that the case ground wire is connected to the correct terminal block neutral ground stud.

NOTE: The white/green ground wire may be removed in those installations where the AC circuit has a separate neutral and ground circuit. This will prevent the unit from being a ground source in the vessel.

## BE SINGLE PHASE

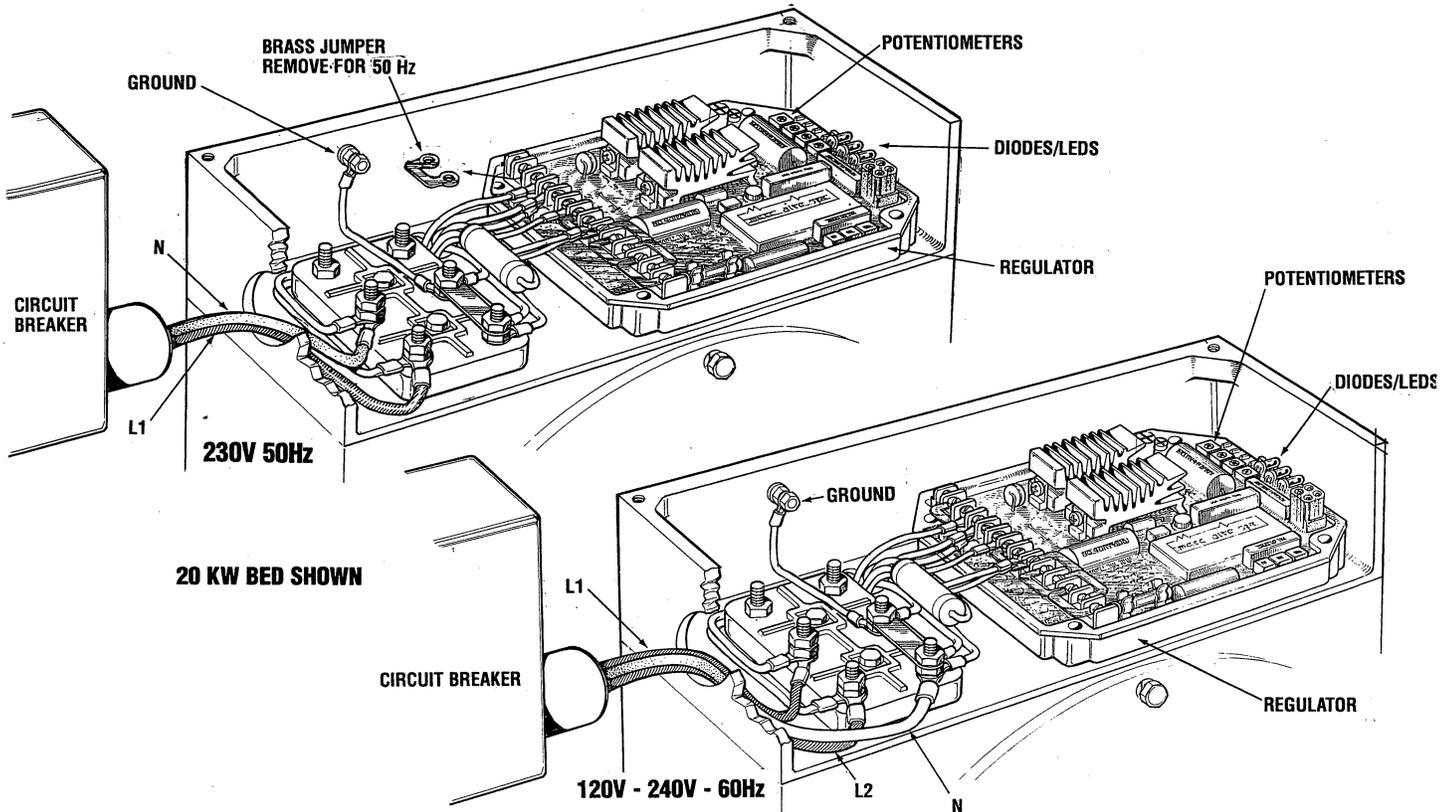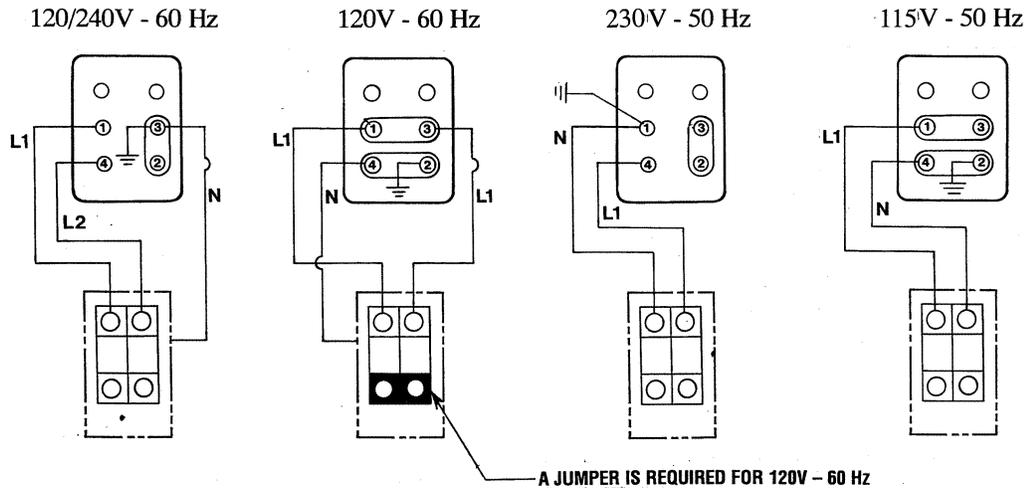


# GENERATOR AC VOLTAGE CONNECTIONS


## DESCRIPTION

The regulator is equipped with seven numbered terminals (0 to 6) and their related brass jumpers. The illustrations show connection points and jumpers for the 3 phase configuration of the generator. The sensing leads connect between pin #1 and pin #2 on the AC terminal block and connection #2 and #0 on the voltage regulator board.

**NOTE:** Series Delta requires the installation of a jumper on the regulator board between terminal B and 0.

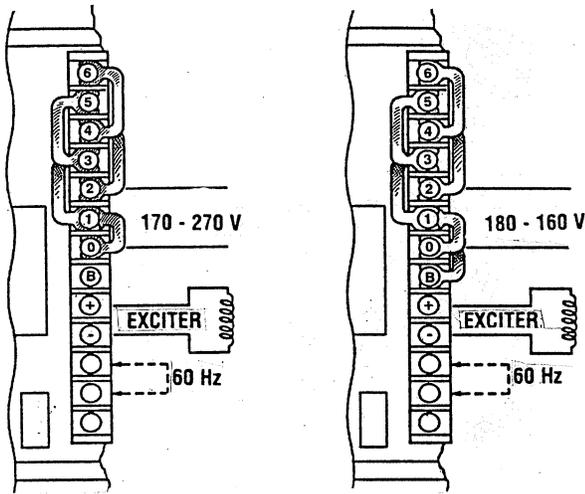


**3 PHASE VOLTAGE REGULATOR**

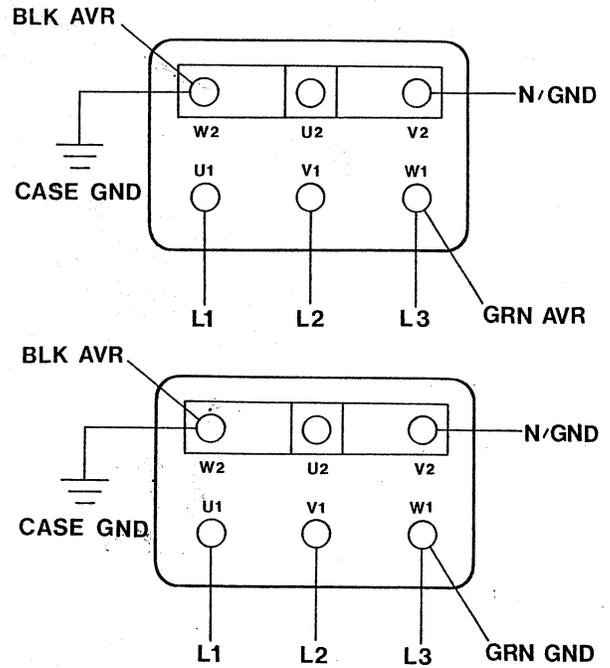


**BE THREE PHASE (SIX WIRE)**

### PARALLEL WYE (STAR)

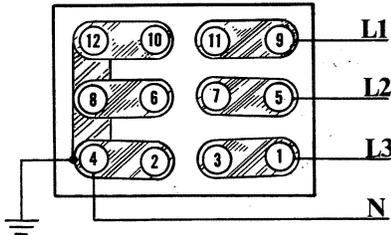


L-L - 208 VAC 3Ø 50 Hz  
 L-N - 120 VAC 1Ø 60 Hz  
 L-L - 190 VAC 3Ø 50 Hz  
 L-N - 110 VAC 1Ø 60 Hz

### SERIES WYE (STAR)

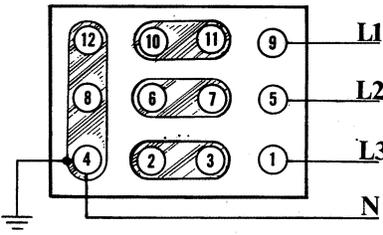

L-L - 450 VAC 3Ø 60 Hz  
 L-N - 265 VAC 1Ø 60 Hz  
 L-L - 380 VAC 3Ø 50 Hz  
 L-N - 230 VAC 1Ø 50 Hz

### SERIES DELTA

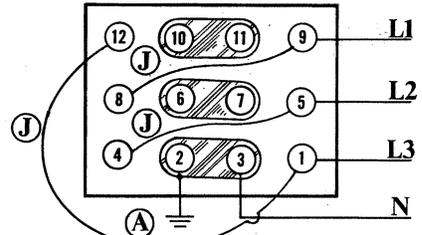

L-L - 240 VAC 3Ø 60 Hz  
 L2, L3-N - 120 VAC 1Ø 60 Hz  
 L-L - 230 VAC 3Ø 50 Hz  
 L2, L3-N - 115 VAC 1Ø 50 Hz

**BE THREE PHASE (TWELVE WIRE)**


**A. SERIES DELTA -** Note the repositioning of the ground lead from neutral to generator housing.

**J. Jumper using #10 AWG Wire.**

# VOLTAGE REGULATOR ADJUSTMENTS

## Description

The voltage regulator is an advanced design which ensures optimum AC alternator performance. It is equipped with complete protection circuitry to guard against operating conditions that could be detrimental to the AC alternator.

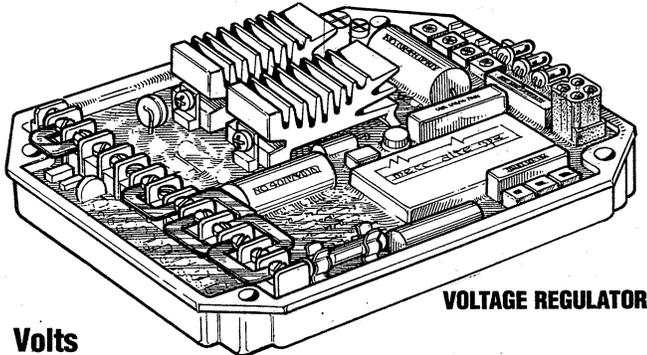

## Volts

This potentiometer is used to adjust output voltage. At proper engine operating speed the output voltage should be held at  $\pm 1\%$  from a no-load condition to a full rated generator output and from power factor 1.0 - 0.8 with engine drive speed variations up to -6%.

Prior to starting the engine, turn the VOLT and STAB trimmers (using a mini phillips screwdriver) fully in a counter clockwise (Minimum) direction until you feel them hit their stops.

Turn the AMP and HERTZ trimmers completely clockwise (Maximum) in the same manner.


With the alternator running at no-load, at normal speed, and with VOLT adjust at minimum, it is possible that output voltage will oscillate. Slowly rotate the VOLT adjust clockwise. The voltage output of the alternator will increase and stabilize. Increase the voltage to the desired value. In this situation, only the green LED will stay lit.

## Stability

This potentiometer permits variation of the regulator's response to generator load changes so as to limit overcompensation and obtain a minimum recovery time to the normal voltage output.

In order to adjust the regulator stability the alternator must be running at no-load and the output must be monitored.

Turn the STAB adjust slowly clockwise until the voltage starts to fluctuate. At this point rotate the STAB adjust counterclockwise until the voltage is stable within 1 or 2 tenths of a volt.

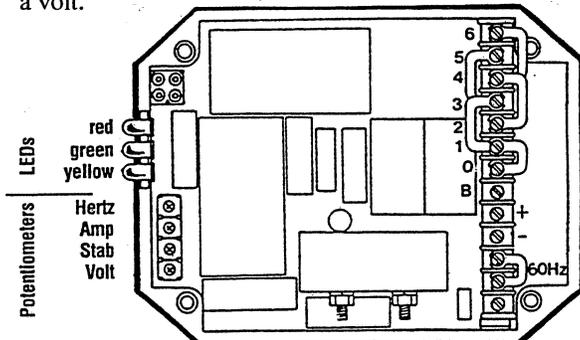

VOLTAGE REGULATOR DIAGRAM

## Amp-Hertz

These two adjustments are used in conjunction with the two protection circuits in the voltage regulator that are indicated by the illumination of a colored LED lights.

1. Delayed overload protection (yellow LED).
2. Low speed protection (red LED).

Both systems have an intervention threshold which can be adjusted using the respective potentiometer. Each of the two circuits are able to cause an adequate reduction in excitor voltage to safeguard the excitor windings and prevent their overheating.

The overload protection system has a delay which permits temporary overloading of the generator during times such as motor start-up or other similar load surge demands. The regulator also has a third LED (green), that glows during generator operation to indicate correct operation of the regulator with the generator.

## Setting the Overload Protection

In order to set the AMP overload protection, the alternator must be loaded to its full output rating.

1. Load the alternator to its rating, then decrease the speed of the engine by 10.10% (54 Hertz on 60 hertz units, 45 hertz on 50 hertz units).
2. Rotate the AMP adjustment counterclockwise until it hits its stop. Wait about 15-20 seconds after which the AC output of the alternator should drop and the yellow LED light should come on.
3. Slowly rotate the AMP adjustment clockwise until the output voltage increases to approximately 97% of the voltage output at the start of the adjustment. At this point the yellow LED light should come on.
4. Return to nominal speed, the yellow LED will turn off and the alternator voltage will rise to its normal value. Should this not happen, repeat the adjustment.

**NOTE:** When changing from 60 hertz to 50 hertz operation, remove the 60 hertz jumper bar from the regulator board.

## Setting the Underspeed Protection

**NOTE:** If the unit is operating at 60 Hertz ensure that the jumper strap is in place on the regulator board between the two 60 Hertz terminals. In order to adjust the underspeed setting, the alternator should be running at no-load.


1. To adjust the underspeed (low frequency) protection circuit, lower the engine speed at 90% of its normal running speed (54 hertz on 60 hertz units, 45 hertz on 50 hertz units).
2. Rotate the Hertz adjustment counterclockwise slowly until the alternator's AC output voltage starts to decrease and at the same time the red "LED" light comes on.
3. Increase the engine speed to its normal speed (frequency). The red "LED" light will go out and the AC voltage output will return to normal.

With the above adjustments made, the regulator should function normally.

# BE TROUBLESHOOTING


**NOTE:** AC GENERATOR TROUBLESHOOTING MUST BE PERFORMED WITH ENGINE OPERATING AT 60 HERTZ

FAULT	PROBABLE CAUSE	
No AC voltage output at no load.	<ol style="list-style-type: none"> <li>1. Short or open in the main stator winding.</li> <li>2. Shorted pozi-resistor on exciter rotor.</li> <li>3. Four or more shorted or open diodes on exciter rotor.</li> </ol>	<ol style="list-style-type: none"> <li>4. Short or open in exciter stator winding.</li> <li>5. Short or open in rotating field winding.</li> </ol>
Residual voltage produced at no load 15 - 20 volts AC.	<ol style="list-style-type: none"> <li>1. Blown 6 AMP buse fuse auxiliary circuit feed to AVR.</li> <li>2. Faulty voltage regulator.</li> </ol>	<ol style="list-style-type: none"> <li>3. Shorted or open main stator auxiliary winding.</li> </ol>
Low AC voltage output at no load 60 - 100 VAC.	<ol style="list-style-type: none"> <li>1. Open or shorted diodes in exciter rotor 1 to 3 diodes.</li> <li>2. Open or shorted exciter rotor winding.</li> </ol>	<ol style="list-style-type: none"> <li>3. Faulty voltage regulator.</li> </ol>
High AC output voltage 150 VAC or higher.	<ol style="list-style-type: none"> <li>1. Faulty voltage regulator.</li> </ol>	
Unstable voltage output.	<ol style="list-style-type: none"> <li>1. STB pod on regulator needs adjustment.</li> </ol>	<ol style="list-style-type: none"> <li>2. Faulty voltage regulator.</li> </ol>
AC voltage drop under load 60 - 100 volts AC.	<ol style="list-style-type: none"> <li>1. Diode(s) on exciter rotor breaking down when load is applied (inductive) 1-3 diodes.</li> </ol>	

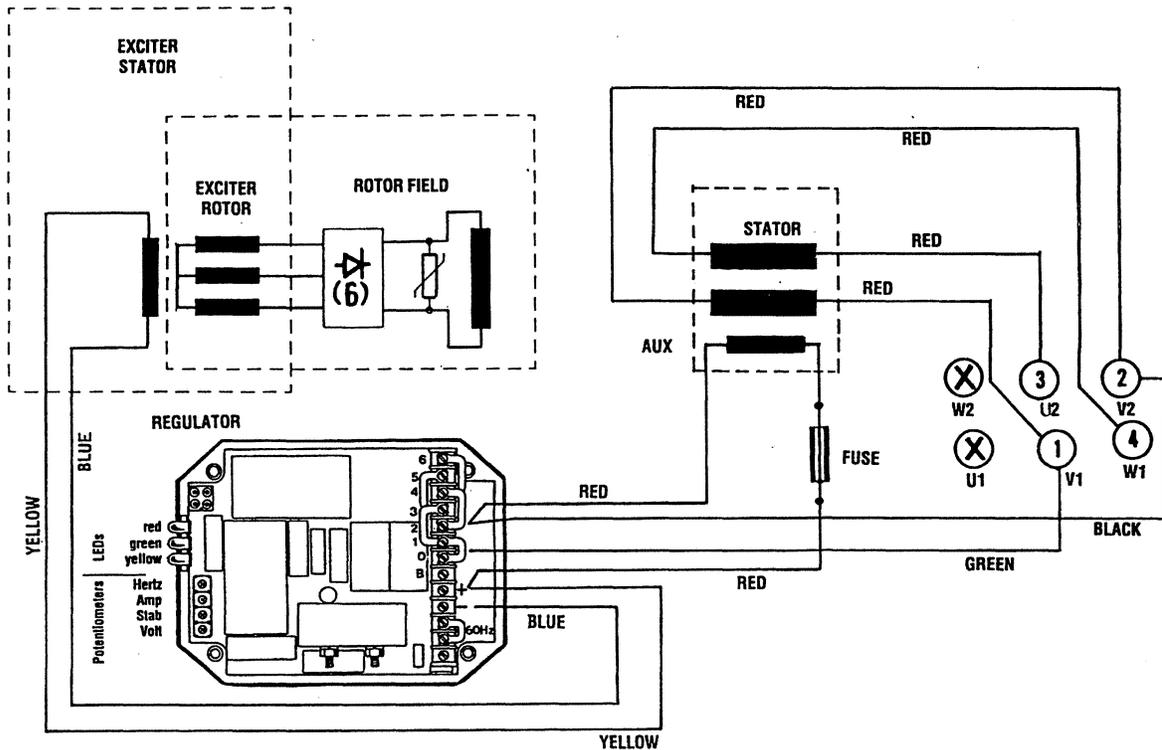

# SHORE POWER TRANSFER SWITCH

## SHORE POWER CONNECTIONS (60 HERTZ)

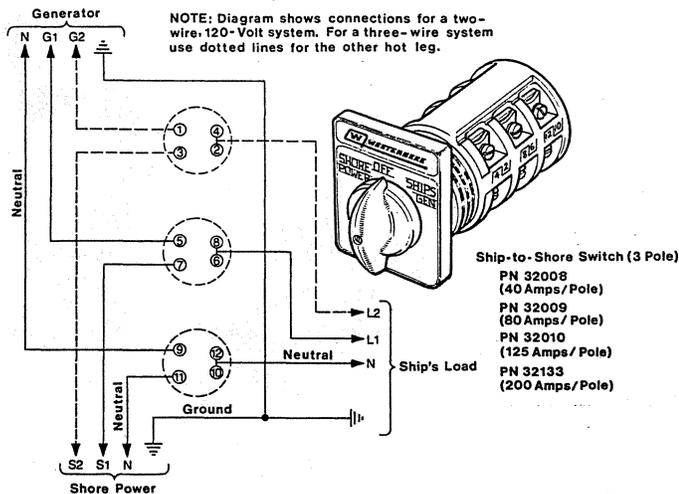


If the installer connects shore power to the vessel's AC circuit, this must be done by means of the Shore Power Transfer Switch. Set the transfer switch shown in the diagrams to the OFF position. This switch prevents simultaneous connection of shore power to generator output.

**CAUTION:** Damage to the generator can result if utility shore power and generator output are connected at the same time. This type of generator damage is not covered under the warranty; it is the installer's responsibility to make sure all AC connections are correct.

## 120 VOLT/60 HZ THREE WIRE CONFIGURATION

Notice the repositioning of the white wire ground load on the terminal block to the generator case.

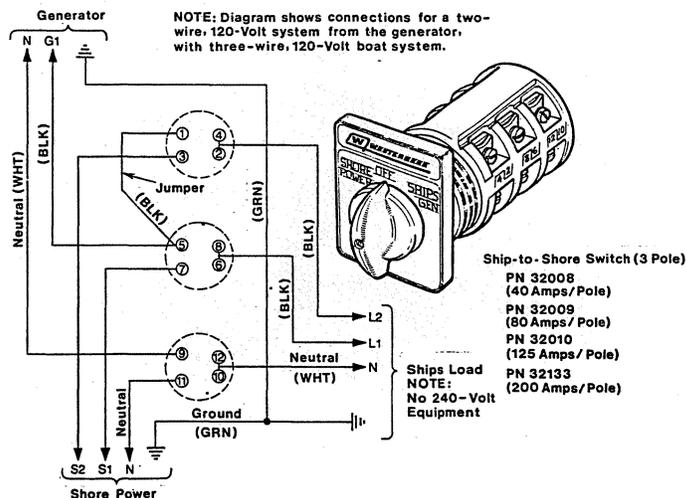

## Switching Shore Power to Generator Power

**CAUTION:** Heavy motor leads should be shut off before switching shore power to generator power or vice-versa because voltage surges induced by switching with heavy AC loads on the vessel being operated may cause damage to the exciter circuit components in the generator.

# LAY-UP & RECOMMISSIONING

## GENERAL

Many owners rely on their boatyards to prepare their craft, including engines and generators, for lay-up during the off-season or for long periods of inactivity. Others prefer to accomplish lay-up preparation themselves.

The procedures which follow will allow you to perform your own lay-up and recommissioning, or you may use them as a check list if others do the procedures.

These procedures should afford your engine protection during a lay-up and also help familiarize you with the maintenance needs of your engine.

If you have any questions regarding lay-up procedures, call your local servicing dealer; he will be more than willing to provide assistance.

## Propeller Shaft Coupling [Propulsion Engine]

The transmission and propeller half couplings should always be opened up and the bolts removed when the boat is hauled out of the water or moved from land to water, and during storage in the cradle. The flexibility of the boat often puts a severe strain on the propeller shaft or coupling or both, while the boat is taken out or put in the water. In some cases, the shaft has actually been bent by these strains. This does not apply to small boats that are hauled out of the water when not in use, unless they have been dry for a considerable period of time.

## Fresh Water Cooling Circuit [Propulsion Engine]

A 50-50 solution of antifreeze and distilled water is recommended for use in the coolant system at all times. This solution may require a higher concentration of antifreeze, depending on the area's winter climate. Check the solution to make sure the antifreeze protection is adequate.

Should more antifreeze be needed, drain an appropriate amount from the engine block and add a more concentrated mixture. Operate the engine to ensure a complete circulation and mixture of the antifreeze concentration throughout the cooling system. Now recheck the antifreeze solution's strength.

## Lubrication System

With the engine warm, drain all the engine oil from the oil sump. Remove and replace the oil filter and fill the sump with new oil. Use the correct grade of oil. Refer to the *ENGINE LUBRICATING OIL* pages in this manual for the oil changing procedure. Run the engine and check for proper oil pressure and make sure there are no leaks.

**CAUTION:** Do not leave the engine's old engine oil in the sump over the lay-up period. Lubricating oil and combustion deposits combine to produce harmful chemicals which can reduce the life of your engine's internal parts.

## Fuel System [Gasoline]

Top off your fuel tanks with *unleaded* gasoline of 89 octane or higher. A fuel conditioner such as *Sta-Bil* gasoline stabilizer should be added. Change the element in your gasoline/water separator and clean the metal bowl. Re-install and make certain there are no leaks. Clean up any spilled fuel.

## Fuel System [Diesel]

Top off your fuel tanks with No. 2D diesel fuel. Fuel additives should be added prior to topping off to ensure they mix with the fuel being added and fuel still in the tank. Additives, such as Bio-bor and Diesel Kleen + Cetane Boost should be added at this time to control bacteria growth and condition the fuel. Care should be taken that the additives used are compatible with the primary fuel filter/water separator used in the system. Change the element in your primary fuel filter/water separator clean the separator sediment bowl.

Change the fuel filter elements on the engine and bleed the fuel system, as needed. Start the engine and allow it to run for 5 – 10 minutes to make sure no air is left in the fuel system. Check for any leaks that may have been created in the fuel system during this servicing, correcting them as needed. Operating the engine for 5 – 10 minutes will help allow movement of the treated fuel through the injection equipment on the engine.

## Raw Water Cooling Circuit

Close the through-hull seacock. Remove the raw water intake hose from the seacock. Place the end of this hose into a five gallon bucket of clean fresh water. Before starting the engine, check the zinc anode found in the primary heat exchanger on the engine and clean or replace it as required, and also clean any zinc debris from inside the heat exchanger where the zinc anode is located. Clean the raw water strainer.

Start the engine and allow the raw water pump to draw the fresh water through the system. When the bucket is empty, stop the engine and refill the bucket with an antifreeze solution slightly stronger than needed for winter freeze protection in your area.

Start the engine and allow all of this mixture to be drawn through the raw water system. Once the bucket is empty, stop the engine. This antifreeze mixture should protect the raw water circuit from freezing during the winter lay-up, as well as providing corrosion protection.

Remove the impeller from your raw water pump (some antifreeze mixture will accompany it, so catch it in a bucket). Examine the impeller. Acquire a replacement, if needed, and a cover gasket. Do not replace the impeller (into the pump) until recommissioning, but replace the cover and gasket.

# LAY-UP & RECOMMISSIONING

## Starter Motor

Lubrication and cleaning of the starter drive pinion is advisable, if access to the starter permits its easy removal. Make sure the battery connections are shut off before attempting to remove the starter. Take care in properly replacing any electrical connections removed from the starter.

## Cylinder Lubrication [Diesel]

If you anticipate a long lay-up period (12 months or more) WESTERBEKE recommends removal of the glow plugs for access to the cylinders. Squirt some Marvel Mystery Oil into the cylinder walls. Rotate the engine crankshaft by hand two revolutions and re-install the glow plugs.

If your engine does not have glow plugs, the injectors will have to be removed. Be sure to have replacement sealing washers for the injectors and return fuel line as needed.

## Intake Manifold [Gasoline]

Clean the filter screen in the flame arrester, and place a clean cloth lightly soaked in lube oil around the flame arrester to block any opening. Also place an oil-soaked cloth in the through-hull exhaust port. Make a note to remove cloths prior to start-up!

## Cylinder Lubrication [Gasoline]

Remove the flame arrester and clean. Operate the engine and spray fogging oil into the intake stalling the engine. This will coat the intake, valves and cylinders with a protecting oil. Reinstall the flame arrester.

**NOTE:** At re-commissioning, remove the spark plugs and clean and gap them. Rotate the engine by hand two complete revolutions. Re-install the spark plugs and tighten securely and firmly attach the high tension leads.

## Batteries

If batteries are to be left on board during the lay-up period, make sure that they are fully charged, and will remain that way, to prevent them from freezing. If there is any doubt that the batteries will not remain fully charged, or that they will be subjected to severe environmental conditions, remove the batteries and store them in a warmer, more compatible environment.

**⚠ WARNING:** Lead acid batteries emit hydrogen, a highly-explosive gas, which can be ignited by electrical arcing or a lighted cigarette, cigar, or pipe. Do not smoke or allow an open flame near the battery being serviced. Shut off all electrical equipment in the vicinity to prevent electrical arcing during servicing.

## Transmission [Propulsion Engine]

Check or change the fluid in the transmission as required. Wipe off grime and grease and touch up any unpainted areas. Protect the coupling and the output flange with an anti-corrosion coating. Check that the transmission vent is open. For additional information, refer to the *TRANSMISSION SECTION*.

## Spare Parts

Lay-up time provides a good opportunity to inspect your Westerbeke engine to see if external items such as drive belts or coolant hoses need replacement. Check your basic spares kit and order items not on hand, or replace those items used during the lay-up, such as filters and zinc anodes. Refer to the *SPARE PARTS* section of this manual.

## Recommissioning

The recommissioning of your Westerbeke engine after a seasonal lay-up generally follows the same procedures as those described in the *PREPARATIONS FOR STARTING* section regarding preparation for starting and normal starts. However, some of the lay-up procedures will need to be counteracted before starting the engine.

1. Remove the oil-soaked cloths from the intake manifold.
2. Remove the raw water pump cover and gasket and discard the old gasket. Install the raw water pump impeller removed during lay-up (or a replacement, if required). Install the raw water pump cover with a new cover gasket.
3. Reinstall the batteries that were removed during the lay-up, and reconnect the battery cables, making sure the terminals are clean and that the connections are tight. Check to make sure that the batteries are fully charged.

**⚠ CAUTION:** Wear rubber gloves, a rubber apron, and eye protection when servicing batteries. Lead acid batteries emit hydrogen, a highly explosive gas, which can be ignited by electrical arcing or a lighted cigarette, cigar, or pipe. Do not smoke or allow an open flame near the battery being serviced. Shut off all electrical equipment in the vicinity to prevent electrical arcing during servicing.

4. Remove the spark plugs, wipe clean, re-gap, and install to proper tightness [gasoline].
5. Check the condition of the zinc anode in the raw water circuit and clean or replace the anode as needed. Note that it is not necessary to flush the antifreeze/fresh water solution from the raw water coolant system. When the engine is put into operation, the system will self-flush in a short period of time with no adverse affects. It is advisable, as either an end of season or recommissioning service, to inspect the area where the zinc is located in the heat exchanger and clear any and all zinc debris from that area.
6. Start the engine in accordance with procedures described in the *PREPARATIONS FOR STARTING* section of this manual.

# SPECIFICATIONS WESTERBEKE 20 KW BEDA GENERATOR

## SPECIFICATIONS

Engine Type	Diesel, four-cycle, four-cylinder, fresh water-cooled Vertical, in-line overhead valve mechanism (33 hp at 1800 rpm maximum).
Aspiration	Naturally aspirated.
Governor	Electronic Governing
Combustion Chamber	Swirl type
Bore & Stroke	3.50 x 4.0 inches (88.9 x 101.6 mm)
Piston Displacement	154 cubic inches (2.5 liters)
Firing Order	1 - 3 - 4 - 2
Direction of Rotation	Clockwise, when viewed from the front
Maximum Torque (at 1800 rpm)	117 lb-ft (16.18 kg-m)
Compression Ratio	21:1
Dimensions	Height: 28.50 inches (723.9 mm) Width: 22.00 inches (546.1 mm) Length: 45.79 inches (1163.3 mm)
Weight	943 lbs (431.7 kgs)
Fuel Consumption (approximate)	2.0 gph (7.57 lph) at full rated output
Inclination	Continuous 15° Temporary 20° (not to exceed 20 min.)
Generator Power Take off	30 Horsepower (maximum)

## TUNE-UP SPECIFICATIONS

Compression Pressure (Limit of difference between cylinders)	427 psi (30 kg/cm <sup>2</sup> ) at 200 rpm (47.2 psi (3.0 kg/cm <sup>2</sup> ))
Valve Timing	Intake Opens 17° BTDC Intake Closes 47° ABDC  Exhaust Opens 51° BBDC Exhaust Closes 13° ATDC
Valve Seat Angle	Intake 45° Exhaust 30°
Valve Clearance (engine cold)	Intake 0.012 inches (0.3 mm) Exhaust 0.012 inches (0.3 mm)
Engine Speed	1800 RPM 60 Hertz 1500 RPM 50 Hertz
Injector Pressure	1920 + 71-0 psi (135 + 5-0 kg/cm <sup>2</sup> )
Engine Timing	Static timed - drop valve method 0.205 ± .005 inches BTDC

## FUEL SYSTEM

General	Open flow, self priming - 1 bleed point
Fuel	No. 2D SAE J313, cetane rating of 45 or higher. Diesel fuel according to ASTM D975
Fuel Injection Pump	ZEXEL Model VE Distributor
Fuel Injection Timing	0° TDC (Top Dead Center)
Nozzle	Throttle type
Fuel Filter (on engine)	Spin-on type, full flow
Air cleaner	Metal screen type
Air Flow (engine combustion)	81.0 cfm (2.29 cmm)

## COOLING SYSTEM

General	Fresh water-cooled block, thermostatically-controlled with heat exchanger.
Operating Temperature	170 - 190° F (77 - 88° C)
Fresh Water Pump	Centrifugal type, metal impeller, belt-driven
Raw Water Pump	Positive displacement, rubber impeller, belt driven.
Raw Water Flow, at 1800 rpm	14.0 gpm (52.9 lpm) (measured before discharging into exhaust elbow).
System Capacity (fresh water)	11.5 qts (10.88 liters)

## LUBRICATION SYSTEM

General	Pressure fed system
Oil Filter	Full flow, paper element, spin-on type
Sump Capacity (not including filter)	6.5 U.S. qts (6.15 liters) plus filter/cooler assembly
Operating Oil Pressure (engine hot)	50-60 psi (3.5 - 4.2 kg/cm <sup>2</sup> )
Oil Grade	API Specification of CF, CF-4, CG-4, CH-4, CI-4 or better. SAE 10W-40 or 15W-40

# SPECIFICATIONS WESTERBEKE 20 KW BEDA GENERATOR

## ELECTRICAL SYSTEM

Starting Battery	12-Volt, (-) negative ground
Battery Capacity	400 - 600 Cold Cranking Amps (CCA)
DC Charging Alternator	51 Amp rated, belt-driven
Starter	12-Volt, Reduction Gear, 3 KW
Starting Aid	Glow plugs, sheathed type
DC No-Load Current	± 2% of rated Amps
DC Cranking Current	250 - 300 Amps (engine cold)

## AC GENERATOR (SINGLE PHASE)

General - Single Phase	Brushless, four-pole, revolving field Sealed lubricated single bearing design. Reconnectable single phase for 120/240 volts with solid state voltage regulator.
Voltage - Single Phase	120 or 120/240 Volts - 60 Hertz 230 Volts - 50 Hertz
Voltage regulation:	± 2% no load to full load.
Frequency regulation:	0.30 Hertz no load to full load.
Rating (Volts AC)	20 KW - 60 Hertz (1800 rpm) 120 Volts 166 Amps 120/240 Volts 166/83 Amps  16 KW - 50 Hertz (1500 rpm) 230 Volts 72.7 Amps

## AC GENERATOR (3 Phase)

General - 3 Phase	Brushless six pole, revolving field. Sealed lubricated single bearing design. 12 Lead reconnectable for low voltage WYE, high voltage Delta. Solid State voltage regulator with protection circuitry.	
20.0 KW - 60 Hertz		
16.0 KW - 50 Hertz		
Voltage - 3 Phase (60 Hertz)	Low voltage WYE	208 volts
	High voltage WYE	480 volts
	DELTA	240 volts
Voltage - 3 Phase (50 Hertz)	High voltage WYE	380 volts
	DELTA	240 volts
Amperage - 3 Phase (60 Hertz)	Low voltage WYE	70 Amps
	High voltage WYE	35 Amps
	DELTA	60 Amps
Amperage - 3 Phase (50 Hertz)	High voltage WYE	30.4 Amps
	DELTA	52.5 Amps

## GENERATOR COOLING

Air Requirements (60 Hertz at 1800 RPM)	425 cfm (12.74 cmm)
Note: Increase air supply 15% for 50 Hertz operation 1500 rpm	
Engine Combustion Air Requirements (60 Hertz at 1800 RPM)	81.0 cfm (2.29 cmm)

# SPECIFICATIONS WESTERBEKE 25 KW BED GENERATOR

## SPECIFICATIONS

Engine Type	Diesel, four-cycle, four-cylinder, fresh water-cooled, Vertical, in-line overhead valve mechanism (50 hp @ 1800 rpm maximum).	
Aspiration	Naturally aspirated.	
Governor	Electronic Governing	
Combustion Chamber	Swirl type	
Bore & Stroke	3.74 x 4.13 inches (95 x 105 mm)	
Piston Displacement	182 cubic inches (2.98 liters)	
Firing Order	1 - 3 - 4 - 2	
Direction of Rotation	Clockwise, when viewed from the front	
Maximum Torque (at 1800 rpm)	148 lb-ft (20.46 kg-m)	
Compression Ratio	21:1	
Dimensions	Height: 28.56 inches (726.4 mm)	Width: 23.30 inches (591.8 mm)
	Length: 49.90 inches (1140.5 mm)	
Weight	971 lbs (440 kgs)	
Fuel Consumption (approximate)	2.9 gph (10.9 lph) at full rated output	
Inclination	Continuous 15° Temporary 20° (not to exceed 20 min.)	
Generator Power Take-off	40 Horsepower (maximum)	

## TUNE-UP SPECIFICATIONS

Compression Pressure (Limit of difference between cylinders)	427 psi (30 kg/cm <sup>2</sup> ) at 200 rpm (47.2 psi (3.0 kg/cm <sup>2</sup> ))	
Valve Timing	Intake Opens 17° BTDC Intake Closes 47° ABDC  Exhaust Opens 51° BBDC Exhaust Closes 13° ATDC	
Valve Seat Angle	Intake 45° Exhaust 30°	
Valve Clearance (engine warm)	Intake 0.012 inches (0.3 mm) Exhaust 0.012 inches (0.3 mm)	
Injector Pressure	1920 + 71-0 psi (135 + 5-0 kg/cm <sup>2</sup> )	
Engine Timing	Static timed - drop valve method 0.205 ± .005 inches BTDC	
Engine Speed	1800 RPM - 60 Hertz 1500 RPM - 50 Hertz	

## FUEL SYSTEM

General	Open flow, self priming - 1 bleed point
Fuel	No. 2-D SAE J313, Cetane rating of 45 or higher. Diesel fuel according to ASTM D975
Fuel Injection Pump	ZEXEL Model VE Distributor
Fuel Injection Timing	0° TDC (Top Dead Center)
Nozzle	Throttle type
Fuel Filter (on engine)	Spin-on type, full flow
Air cleaner	Metal screen type-cleanable
Air Flow (engine combustion)	94.6 cfm (2.7 cmm)

## COOLING SYSTEM

General	Fresh water-cooled block, thermostatically-controlled with heat exchanger.
Operating Temperature	170 - 190° F (77 - 88° C)
Fresh Water Pump	Centrifugal type, metal impeller, belt-driven
Raw Water Pump	Positive displacement, rubber impeller, belt driven.
Raw Water Flow, at 1800 rpm	15.0 gpm (56.7 lpm) (measured before discharging into exhaust elbow).
System Capacity (coolant)	11.5 qts (10.88 liters)

## LUBRICATION SYSTEM

General	Pressure fed system
Oil Filter	Full flow, paper element, spin-on type
Sump Capacity (not including filter)	6.5 U.S. qts (6.15 liters) plus filter/cooler assembly
Operating Oil Pressure (engine hot)	50 - 60 psi (3.5 - 4.2 kg/cm <sup>2</sup> )
Oil Grade	API Specification of CF, CF-4, CG-4, CH-4, CI-4 or better. SAE 10W-40 or 15W-40

# SPECIFICATIONS WESTERBEKE 25 KW BEDA GENERATOR

## ELECTRICAL SYSTEM

Starting Battery	12-Volt, (-) negative ground
Battery Capacity	400 - 600 Cold Cranking Amps (CCA)
DC Charging Alternator	51 Amp rated, belt-driven
Starter	12-Volt, Reduction Gear
Starting Aid	Glow plugs, sheathed type
DC No-Load Current	± 2% of rated Amps
DC Cranking Current	250 - 300 Amps (engine cold)

## AC GENERATOR (SINGLE PHASE)

General - Single Phase	Brushless, four-pole, revolving field Sealed lubricated single bearing design. Reconnectable single phase for 120/240 volts with solid state voltage regulator.
Voltage - Single Phase	120 or 120/240 Volts - 60 Hertz 220 Volts - 50 Hertz
Voltage regulation:	± 2% no load to full load.
Frequency regulation:	.3 Hertz no load to full load.
Rating (Volts AC)	20 KW - 60 Hertz (1800 rpm) 120 Volts 208 Amps 120/240 Volts 208.109 Amps  20 KW - 50 Hertz (1500 rpm) 220 Volts 87 Amps

## AC GENERATOR (3 Phase)

General - 3 Phase	Brushless six pole, revolving field. Sealed lubricated single bearing design. 12 Lead reconnectable for low voltage WYE and for Delta. Solid State voltage regulator with protection circuitry.	
Voltage - 3 Phase (60 Hertz)	Low voltage WYE	208 volts
	High voltage WYE	480 volts
	DELTA	240 volts
Voltage - 3 Phase (50 Hertz)	High voltage WYE	380 volts
	DELTA	240 volts
Amperage - 3 Phase (60 Hertz)	Low voltage WYE	86.7 Amps
	High voltage WYE	37.6 Amps
	DELTA	75.2 Amps
Amperage - 3 Phase (50 Hertz)	High voltage WYE	38.0 Amps
	DELTA	65.6 Amps

## GENERATOR COOLING

Air Requirements (60 Hertz at 1800 RPM)	1.0 Power Factor 425 cfm (12.74 cmm)
Note: Increase air supply 15% for 50 Hertz operation 1500 rpm	
Engine Combustion Air Requirements (60 Hertz at 1800 RPM)	94.6 cfm (2.7 cmm)

# SPECIFICATIONS WESTERBEKE 32 KW BEDA GENERATOR

<b>SPECIFICATIONS</b>	
Engine Type	Diesel, four-cycle, four-cylinder, fresh water-cooled, Vertical, in-line overhead valve mechanism (46 hp at 1800 rpm maximum).
Aspiration	Naturally aspirated.
Governor	Electronic Governing
Combustion Chamber	Swirl type
Bore & Stroke	3.94 x 4.33 inches (100.1 x 110.0 mm)
Piston Displacement	210.8 cubic inches (3.5 liters)
Firing Order	1 - 3 - 4 - 2
Direction of Rotation	Clockwise, when viewed from the front
Maximum Torque (at 1800 rpm)	166 lb-ft (23 kg-m)
Compression Ratio	18:1
Dimensions	Height: 30.0 inches (762.0 mm) Width: 22.0 inches (558.8 mm) Length: 44.6 inches (113.3 mm)
Weight	1038 lbs (471.8 kgs)

<b>TUNE-UP SPECIFICATIONS</b>	
Compression Pressure (Limit of difference between cylinders)	427 psi (30 kg/cm <sup>2</sup> ) at 200 rpm 47.2 psi (3.0 kg/cm <sup>2</sup> )
Valve Timing	Intake Opens 19° BTDC Intake Closes 47° ABDC  Exhaust Opens 52° BBDC Exhaust Closes 14° ATDC
Engine Timing	Static timed - drop valve method 0.180 ± .005 inches BTDC
Injector Pressure	2417 - 2489 psi (170 - 175 kg/cm <sup>2</sup> )
Valve Seat Angle	Intake 45° Exhaust 30°
Valve Clearance (engine cold)	Intake 0.012 inches (0.3 mm) Exhaust 0.014 inches (0.35 mm)
Engine Speed	1800 RPM 60 Hertz 1500 RPM 50 Hertz

<b>FUEL SYSTEM</b>	
General	Open flow, self priming - 1 bleed point
Fuel	No. 2D SAE J313, cetane rating of 45 or higher. Diesel fuel according to ASTM D975
Fuel Injection Pump	ZEXEL Model PE (In-Line)
Fuel Injection Timing	12° BTDC
Nozzle	Orifice type
Fuel Filter (on engine)	Full Flow Replaceable
Air cleaner	Metal screen type - cleanable
Air Flow (engine combustion)	110 cfm (3.1 cmm)

<b>COOLING SYSTEM</b>	
General	Fresh water-cooled block, thermostatically-controlled with heat exchanger.
Operating Temperature	170 - 190° F (77 - 88° C)
Fresh Water Pump	Centrifugal type, metal impeller, belt-driven
Raw Water Pump	Positive displacement, rubber impeller, belt driven.
Raw Water Flow, at 1800 rpm	15.0 gpm (56.7 lpm) (measured before discharging into exhaust elbow).
System Capacity (fresh water)	8.5 qts (8.04 liters)

<b>LUBRICATION SYSTEM</b>	
General	Pressure fed system
Oil Filter	Full flow, paper element, spin-on type
Sump Capacity (not including filter)	6.3 U.S. qts (6.0 liters) plus filter/cooler assembly
Operating Oil Pressure (engine hot)	50-60 psi (3.5 - 4.2 kg/cm <sup>2</sup> )
Oil Grade	API Specification of CF, CF-4, CG-4, CH-4, CI-4 or better. SAE 10W-40 or 15W-40

# SPECIFICATIONS WESTERBEKE 32 KW BEDA GENERATOR

## ELECTRICAL SYSTEM

Starting Battery	12-Volt, (-) negative ground
Battery Capacity	600 - 900 Cold Cranking Amps (CCA)
DC Charging Alternator	51 Amp rated, belt-driven
Starter	12-Volt, 3 KW
Starting Aid	Glow plugs, sheathed type .1 - .2 ohm
DC No-Load Current	± 2% of rated Amps
DC Cranking Current	250 - 300 Amps (engine cold)

## AC GENERATOR (SINGLE PHASE)

General - Single Phase	Brushless, four-pole, revolving field Sealed lubricated single bearing design. Reconnectable single phase for 120/240 volts with solid state voltage regulator.
Voltage - Single Phase	120 or 120/240 Volts - 60 Hertz 220 Volts - 50 Hertz
Voltage regulation:	± 2% no load to full load.
Frequency regulation:	.3 Hertz no load to full load.
Rating (Volts AC)	32 KW - 60 Hertz (1800 rpm) 120 Volts 266 Amps 120/240 Volts 266/133 Amps  25 KW - 50 Hertz (1500 rpm) 220 Volts 108.7 Amps

## AC GENERATOR (3 Phase)



General - 3 Phase 20.0 KW - 60 Hertz 16.0 KW - 50 Hertz	Brushless six pole, revolving field. Sealed lubricated single bearing design. 12 Lead reconnectable for low voltage WYE and for Delta. Solid State voltage regulator with protection circuitry.	
Voltage - 3 Phase (60 Hertz)	Low voltage WYE	208 volts
	High voltage WYE	480 volts
	DELTA	240 volts
Voltage - 3 Phase (50 Hertz)	High voltage WYE	380 volts
	DELTA	220 volts
Amperage - 3 Phase (60 Hertz) .8 power factor	Low voltage WYE	111.0 Amps
	High voltage WYE	48.1 Amps
	DELTA	96.2 Amps
Amperage - 3 Phase (50 Hertz) .8 power factor	High voltage WYE	47.5 Amps
	DELTA	82.0 Amps

## GENERATOR COOLING

Air Requirements (60 Hertz at 1800 RPM)	1.0 power factor 500 cfm (15.0 cmm)
Note: Increase air supply 15% for 50 Hertz operation 1500 rpm	
Engine Combustion Air Requirements (60 Hertz at 1800 RPM)	110 cfm (3.1 cmm)



# WESTERBEKE BE GENERATOR 20KW

## PARTS IDENTIFICATION

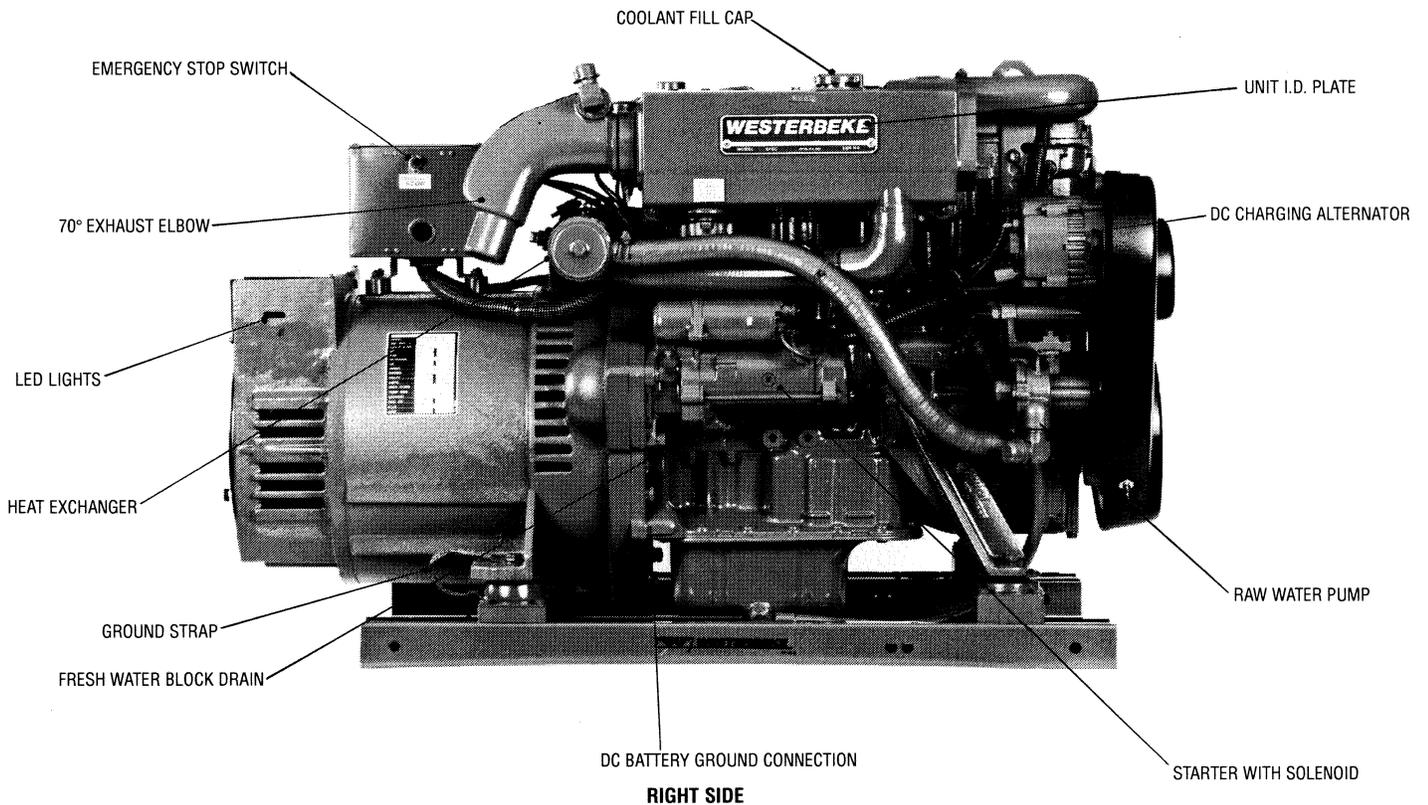
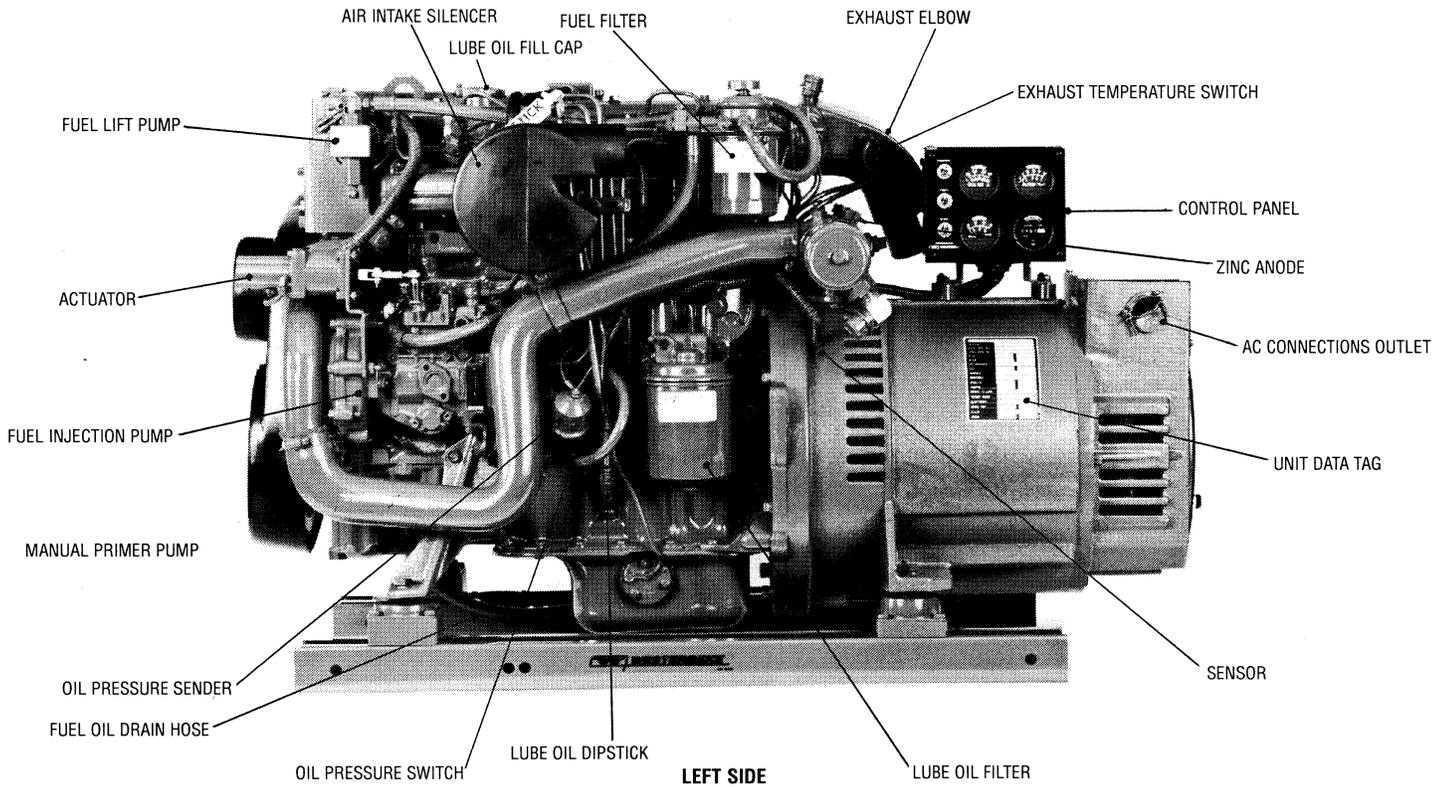


# WESTERBEKE BE GENERATOR 25KW

## PARTS IDENTIFICATION

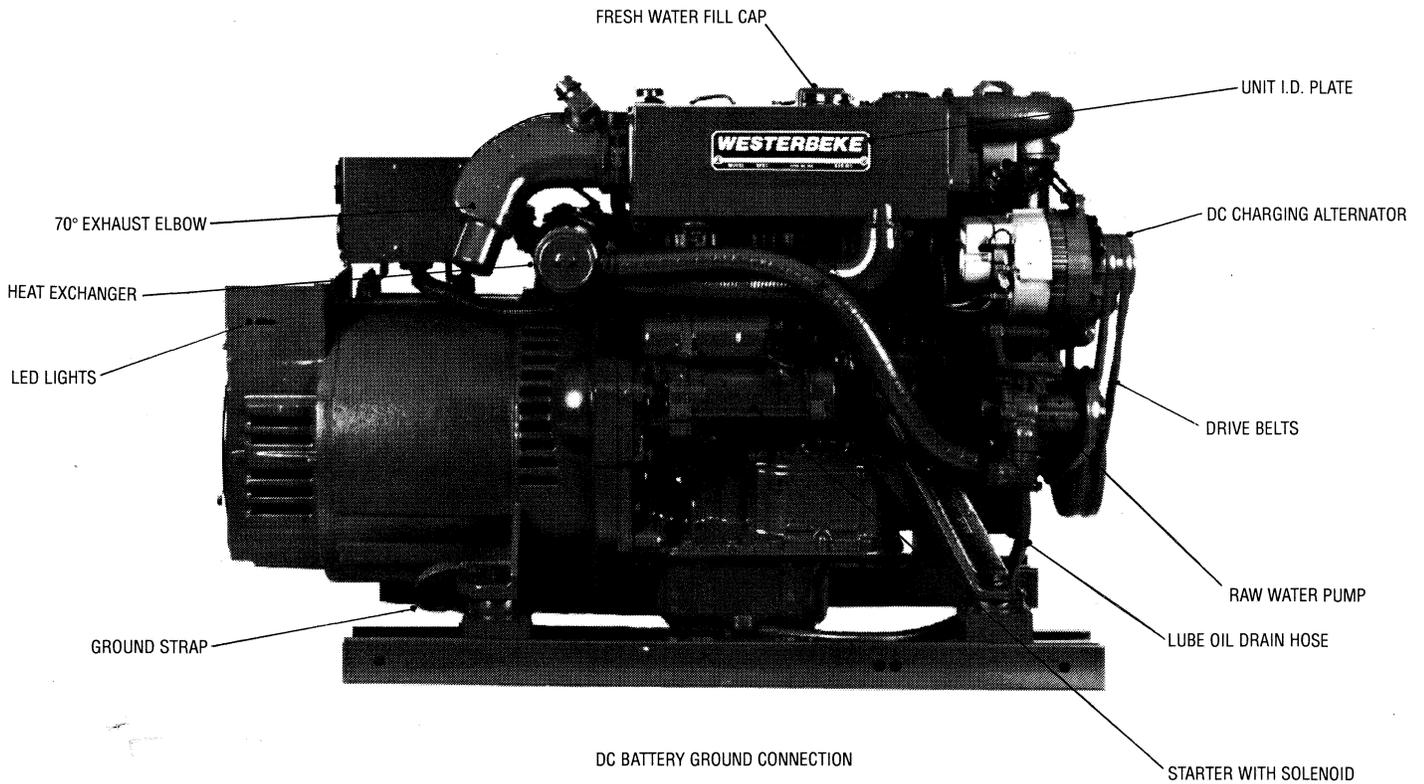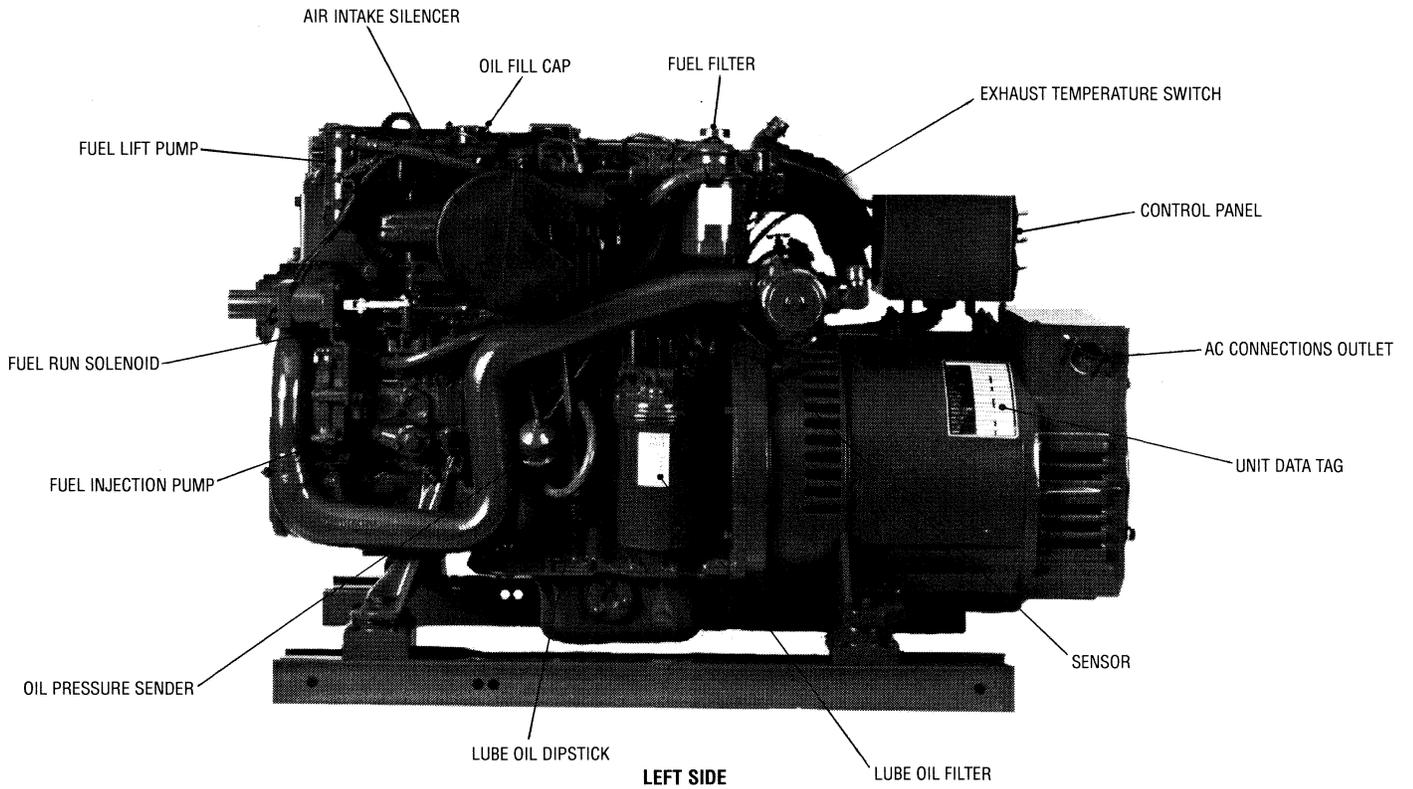

# 32.0BEDA PARTS IDENTIFICATION

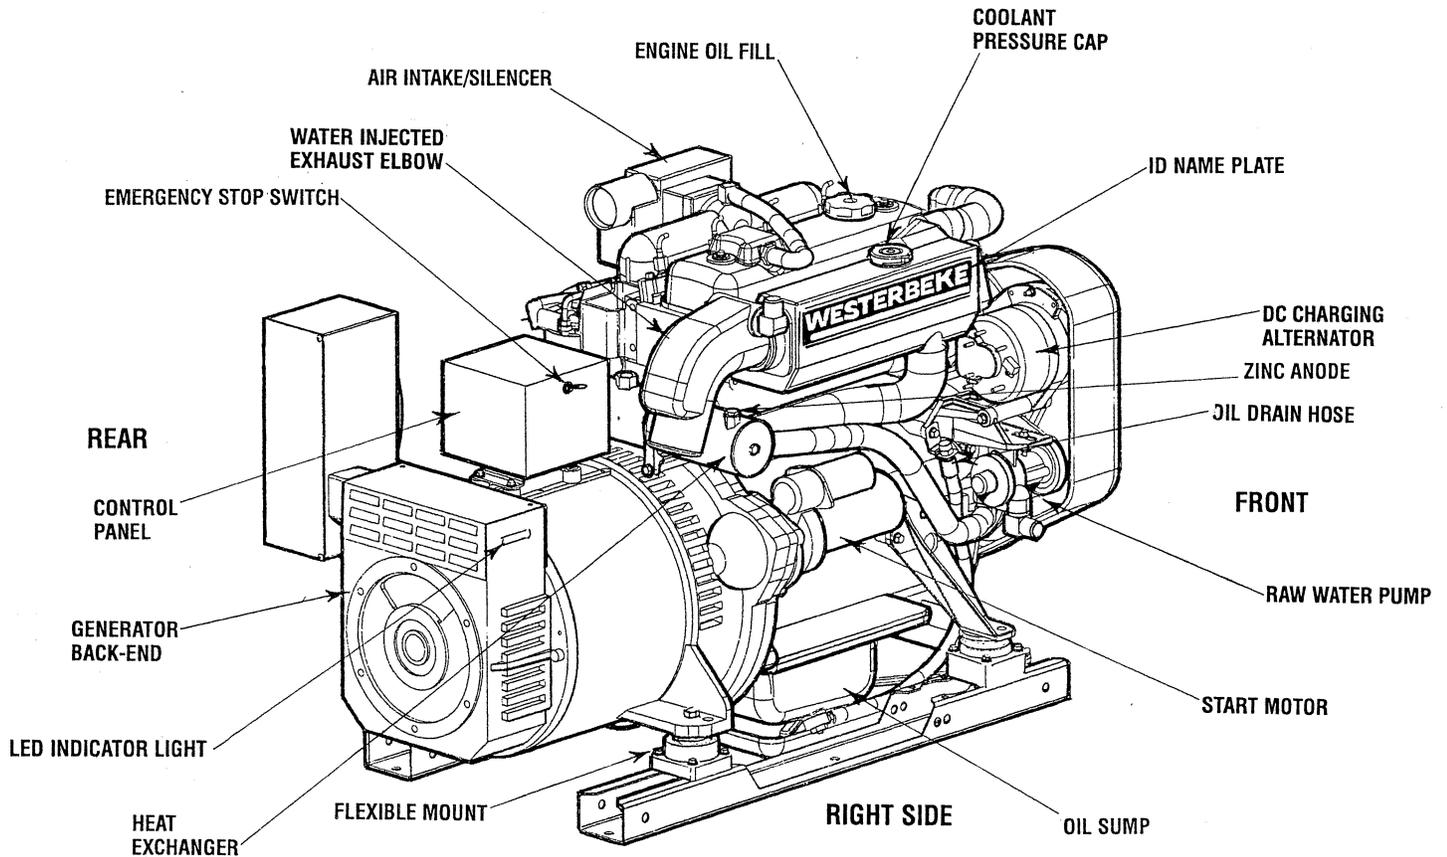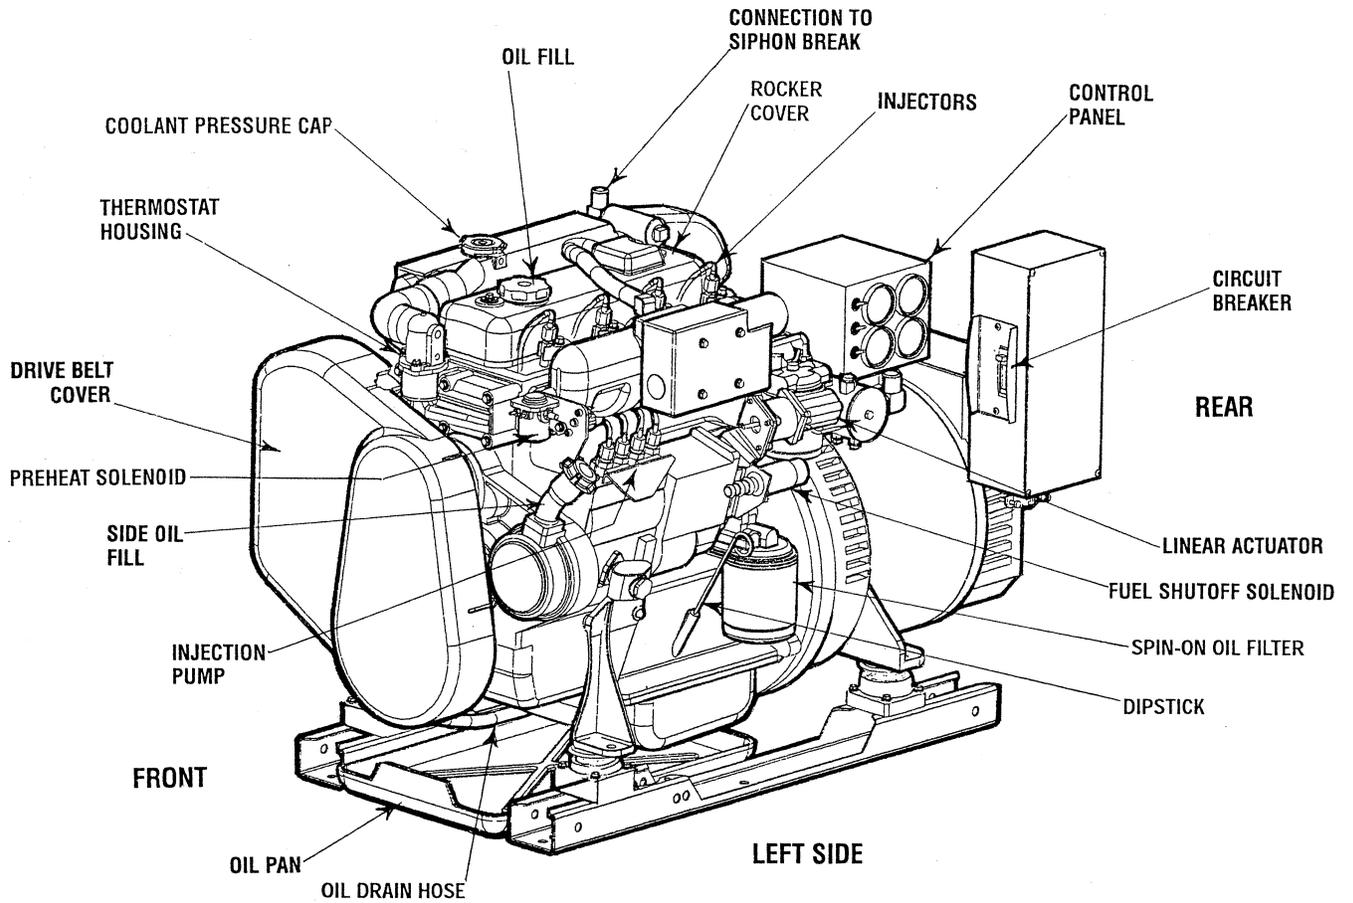

# TORQUE SPECIFICATIONS

lb-ft (m-Kg)

COMPONENT	BEDA 20.0 KW	BED 25.0 KW	BEDA 32.0 KW
Cylinder head bolts	85 – 89 (11.8 – 12.5)	85 – 89 (11.8 – 12.5)	(Do Not Torque)
Cylinder head cover	2 – 3 (0.3 – 0.45)	2 – 3 (0.3 – 0.45)	1.4 – 2.5 (0.2 – 0.35)
Connecting rod cap	59 – 65 (8.2 – 9.0)	59 – 65 (8.2 – 9.0)	59 – 65 (8.2 – 9.0)
Main bearing cap	80 – 85 (11.0 – 11.7)	80 – 85 (11.0 – 11.7)	72 – 77 (10.0 – 10.7)
Camshaft thrust plate	12 – 17 (1.6 – 2.4)	12 – 17 (1.6 – 2.4)	14 – 19 (1.9 – 2.6)
Idle Gear	16 – 23 (2.2 – 3.2)	16 – 23 (2.2 – 3.2)	14 – 19 (1.9 – 2.6)
Rocker arm assembly	80 – 85 (11.0 – 11.7)	80 – 85 (11.0 – 11.7)	14 – 19 (1.9 – 2.6)
Timing gear cover	12 – 17 (1.6 – 2.4)	12 – 17 (1.6 – 2.4)	14 – 19 (1.9 – 2.6)
Rear oil seal cap	11 – 15 (1.5 – 2.0)	11 – 15 (1.5 – 2.0)	14 – 19 (1.9 – 2.6)
Oil pan bolts	12 – 17 (1.6 – 2.4)	12 – 17 (1.6 – 2.4)	14 – 19 (1.9 – 2.6)
Oil pump pipe	6 – 9 (0.8 – 1.2)	6 – 9 (0.8 – 1.2)	5.8 – 8 (0.8 – 1.1)
Fresh water pump bolts	9 – 13 (1.2 – 1.8)	9 – 13 (1.2 – 1.8)	9 – 13 (1.2 – 1.8)
Crankshaft pulley nut	253 – 289 (35 – 40)	253 – 289 (35 – 40)	253 – 289 (35 – 40)
* Injector to head	43 – 51 (6.0 – 7.0)	12 – 17 (1.6 – 2.4)	12 – 17 (1.6 – 2.4)
Injection pipe flare nut	18 – 22 (2.5 – 3.0)	18 – 22 (2.5 – 3.0)	18 – 22 (2.5 – 3.0)
Intake manifold	12 – 17 (1.6 – 2.4)	12 – 17 (1.6 – 2.4)	14 – 19 (1.9 – 2.6)
Exhaust manifold	20 – 24 (2.7 – 3.3)	20 – 24 (2.7 – 3.3)	17 – 20 (2.3 – 2.7)
Back plate	24 – 35 (3.3 – 4.8)	24 – 35 (3.3 – 4.8)	28 – 38 (3.8 – 5.3)
Flywheel	112 – 118 (15.5 – 16.3)	112 – 118 (15.5 – 16.3)	130 – 145 (18 – 20)
Damper	14 – 20 (1.9 – 2.7)	14 – 20 (1.9 – 2.7)	16 – 24 (2.2 – 3.4)
Timing gear cover	12 – 17 (1.6 – 2.4)	12 – 17 (1.6 – 2.4)	14 – 19 (1.9 – 2.6)
Alternator bracket	27 – 38 (3.8 – 5.3)	27 – 38 (3.8 – 5.3)	27 – 38 (3.8 – 5.3)
Thermostat housing	6 – 8 (0.8 – 1.1)	6 – 8 (0.8 – 1.1)	5.8 – 8.0 (0.8 – 1.1)
Thrust plate	14 – 19 (1.9 – 2.6)	14 – 19 (1.9 – 2.6)	14 – 19 (1.9 – 2.6)
Oil pressure sender	9 – 13 (1.2 – 1.8)	9 – 13 (1.2 – 1.8)	9 – 13 (1.2 – 1.8)
Oil pressure switch	9 – 13 (1.2 – 1.8)	9 – 13 (1.2 – 1.8)	9 – 13 (1.2 – 1.8)
Engine mounts	23 – 34 (3.2 – 4.7)	23 – 34 (3.2 – 4.7)	23 – 34 (3.2 – 4.7)
Alternator bracket	27 – 38 (3.8 – 5.3)	27 – 38 (3.8 – 5.3)	27 – 38 (3.8 – 5.3)
Coolant temperature switch	18 – 29 (2.5 – 4.0)	18 – 29 (2.5 – 4.0)	18 – 29 (2.5 – 4.0)
Coolant temperature sender	18 – 29 (2.5 – 4.0)	18 – 29 (2.5 – 4.0)	18 – 29 (2.5 – 4.0)
Glow plug	7 – 11 (1.0 – 1.5)	7 – 11 (1.0 – 1.5)	NA
Camshaft gear	46 – 69 (6.4 – 9.5)	46 – 69 (6.4 – 9.5)	NA
Injection pump gear	29 – 52 (4.0 – 9.0)	29 – 52 (4.0 – 9.0)	29 – 52 (4.0 – 9.0)

\* BEDA 20 KW Generator uses an injector that is screwed into the head torque 43 – 51 lb-ft (6.0 – 7.0).

BED 25 KW and 32 KW Generators use injectors that are bolted to the head – torque value is 12 to 17 lb-ft (1.6 – 2.4) per bolt tightened evenly.

# STANDARD HARDWARE TORQUES

**NOTE:** Unless stated otherwise for a specific assembly, use the following torque values when tightening standard hardware.

Grade 4				Grade 7T, 8T and 8.8			
	Pitch	lb-ft	kg-m		Pitch	lb-ft	kg-m
6mm bolt head/nut	1	2.9-5.1	0.4-0.7	6mm bolt head/nut	1	5.8-8.7	0.8-1.2
8mm bolt head/nut	1.25	7.2-11.6	1.0-1.6	8mm bolt head/nut	1.25	14.5-21.7	2.0-3.0
10mm bolt head/nut	1.25	13.7-22.4	1.9-3.1	10mm bolt head/nut	1.25	28.9-39.8	4.0-5.5
10mm bolt head/nut	1.5	13.0-21.7	1.8-3.0	10mm bolt head/nut	1.5	26.8-37.6	3.7-5.2
12mm bolt head/nut	1.25 (ISO)	25.3-39.8	3.5-5.5	12mm bolt head/nut	1.25 (ISO)	54.2-75.9	7.5-10.5
12mm bolt head/nut	1.5	25.3-39.8	3.5-5.5	12mm bolt head/nut	1.5	50.6-65.1	7.0-9.0
12mm bolt head/nut	1.75	21.7-36.2	3.0-5.0	12mm bolt head/nut	1.75	43.4-61.5	6.0-8.5
13mm bolt head/nut	1.5	32.5-50.6	4.5-7.0	13mm bolt head/nut	1.5	57.9-86.8	8.0-12.0
14mm bolt head/nut	1.5	36.2-57.9	5.0-8.0	14mm bolt head/nut	1.5	72.3-108.5	10.0-15.0
14mm bolt head/nut	2	34.0-55.7	4.7-7.7	14mm bolt head/nut	2	68.7-101.3	9.5-14.0
16mm bolt head/nut	1.5	54.2-79.6	7.5-11.0	16mm bolt head/nut	1.5	108.5-166.4	15.0-23.0
16mm bolt head/nut	2	51.4-76.7	7.1-10.6	16mm bolt head/nut	2	101.3-159.1	14.0-22.0
Grade 6T				Grade 5 Cap Screw			
6mm bolt head/nut	1	4.3-6.5	0.6-0.9	1/4 UNC		9-11	1.2-1.5
8mm bolt head/nut	1.25	10.8-15.9	1.5-2.2	1/4 UNF		11-13	1.5-1.8
10mm bolt head/nut	1.25	21.7-32.5	3.0-4.5	5/16 UNC		18-20	2.5-2.8
10mm bolt head/nut	1.5	19.5-30.4	2.7-4.2	5/16 UNF		21-23	2.9-3.2
12mm bolt head/nut	1.25 (ISO)	36.2-57.9	5.0-8.0	3/8 UNC		28-33	3.7-4.6
12mm bolt head/nut	1.5	36.2-50.6	5.0-7.0	3/8 UNF		30-35	4.1-4.8
12mm bolt head/nut	1.75	34.7-49.2	4.8-6.8	7/16 UNC		44-49	6.1-6.8
				7/16 UNF		50-55	6.9-7.6
				1/2 UNC		68-73	9.4-10.1
				1/2 UNF		73-80	10.1-11.1

## GENERAL SCREWS

BOLT DIA.	BOLT HEAD MARK		
	4	7	10
M6	0.3 - 0.5	0.8 - 1.0	1.0 - 1.3
M8	1.0 - 1.3	1.5 - 2.2	2.5 - 3.5
M10	1.8 - 2.5	3.0 - 4.2	5.0 - 7.0
M12	3.0 - 4.2	5.5 - 7.5	9.5 - 12.0
M14	5.0 - 7.0	8.0 - 11.0	16.0 - 19.0

## SEALANTS

PARTS REQUIRING SEALANT	SURFACES REQUIRING SEALANT (where to mount sealant coated parts)	SEALANT
Taper screw 1/2 "	Thread portion (Gear case)	Liquid Teflon
Taper screw 1/4 "	Thread portion (Cylinder block right side, pump cover)	Liquid Teflon
Taper screw 1/8 "	Thread portion (Cylinder head rear surface)	Liquid Teflon
Water drain plug	Thread portion (Cylinder block right side, rear middle portion)	Liquid Teflon
Oil pressure switch	Thread portion (Cylinder block right side surface)	Liquid Teflon
Side seal	Periphery (Main bearing caps No. 1 and No. 5)	Permatex #6B
Bearing cap No. 1	Contact surface with cylinder block	Permatex #6B

# METRIC CONVERSIONS

## INCHES TO MILLIMETERS

## MILLIMETERS TO INCHES

Inches	mm	Inches	mm	mm	Inches	mm	Inches
1	25.40	15	381.00	1	0.0394	15	0.5906
2	50.80	20	508.00	2	0.0787	20	0.7874
3	76.20	25	635.00	3	0.1181	25	0.9843
4	101.60	30	762.00	4	0.1575	30	1.1811
5	127.00	35	889.00	5	0.1969	35	1.3780
10	254.00	40	1016.00	10	0.3937	40	1.5748

10 MILLIMETERS = 1CENTIMETER, 100 CENTIMETERS = 1 METER = 39.37 INCHES (3.3 FEET)

## INCHES TO METERS

## METERS TO INCHES

Inches	Meters	Inches	Meters	Meters	Inches	Meters	Inches
1	0.0254	7	0.1778	0.1	3.937	0.7	27.559
2	0.0508	8	0.2032	0.2	7.874	0.8	31.496
3	0.0762	9	0.2286	0.3	11.811	0.9	35.433
4	0.1016	10	0.2540	0.4	15.748	1.0	39.370
5	0.1270	11	0.2794	0.5	19.685	1.1	43.307
6	0.1524	12	0.3048	0.6	23.622	1.2	47.244

TO CONVERT METERS TO CENTIMETERS, MOVE DECIMAL POINT TWO PLACES TO THE RIGHT

## YARDS TO METERS

## METERS TO YARDS

Yards	Meters	Yards	Meters	Meters	Yards	Meters	Yards
1	0.91440	6	5.48640	1	1.09361	6	6.56168
2	1.82880	7	6.40080	2	2.18723	7	7.65529
3	2.74320	8	7.31520	3	3.28084	8	8.74891
4	3.65760	9	8.22960	4	4.37445	9	9.84252
5	4.57200	10	9.14400	5	5.46807	10	10.93614

MOVE DECIMAL POINT FOR HIGHER VALUES — e.g. 6,000 METERS = 6,561.68 YARDS

## POUNDS TO KILOGRAMS

## KILOGRAMS TO POUNDS

lb	kg	lb	kg	kg	lb	kg	lb
1	0.454	6	2.722	1	2.205	6	13.228
2	0.907	7	3.175	2	4.409	7	15.432
3	1.361	8	3.629	3	6.614	8	17.637
4	1.814	9	4.082	4	8.818	9	19.842
5	2.268	10	4.536	5	11.023	10	22.046

## GALLONS TO LITERS

## LITERS TO GALLONS


Gallons	Liters	Gallons	Liters	Liters	Gallons	Liters	Gallons
1	3.79	10	37.86	1	0.26	60	15.66
2	7.57	20	75.71	2	0.53	90	23.77
3	11.36	30	113.57	5	1.32	120	31.32
4	15.14	40	151.42	10	2.64	150	39.62
5	18.93	50	189.28	20	5.28	180	47.54

## PINTS TO LITERS

## LITERS TO PINTS


Pints	Liters	Pints	Liters	Liters	Pints	Liters	Pints
1	0.47	6	2.84	1	2.11	6	12.68
2	0.95	7	3.31	2	4.23	7	14.79
3	1.42	8	3.79	3	6.34	8	16.91
4	1.89	9	4.26	4	8.45	9	19.02
5	2.37	10	4.73	5	10.57	10	21.13

## TEMPERATURE

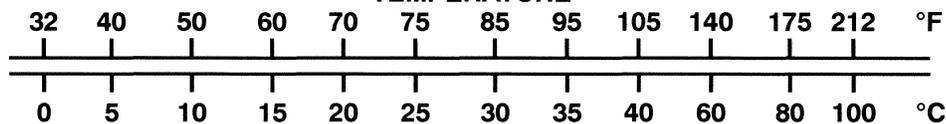


# SUGGESTED SPARE PARTS


## Carry Only Genuine Westerbeke Spare Parts

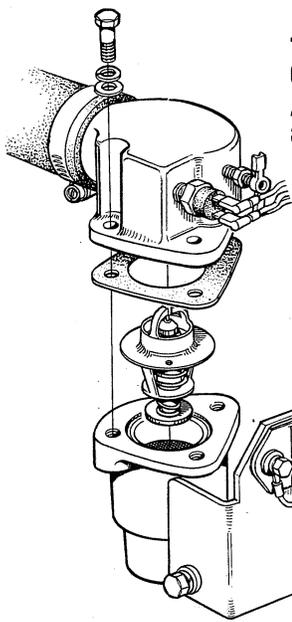


**Thermostat and Gasket**  
Always carry a spare set.

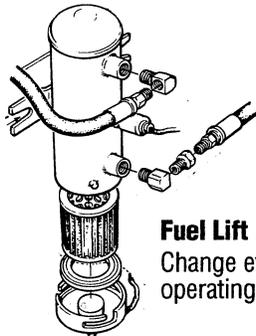

**Fuel Lift Pump Filter**  
Change every 250 operating hours.


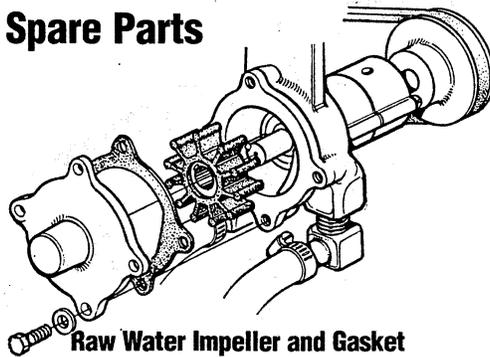


**Raw Water Impeller and Gasket**  
Check every 250 operating hours, always have a spare set on-board.

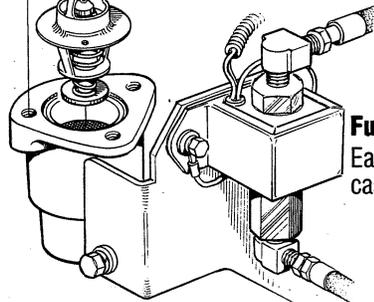


**Fuel Lift Pump**  
Easy to replace in case of a failure.

**Zinc Anodes**  
Check often, they are eaten up quickly in tropical waters and at marinas, carry several spares.

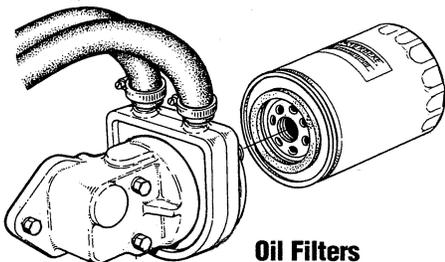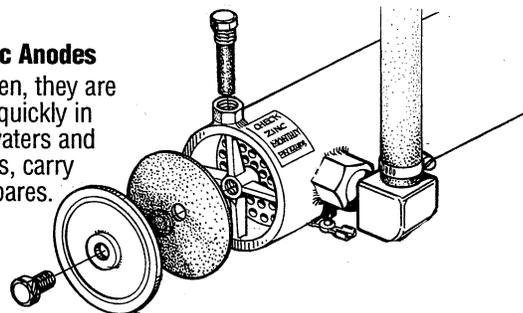

**Oil Filters**

Replace with every oil change at every 100 operating hours. Keep extras on-board.

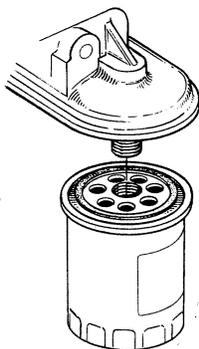

**Heat Exchanger End Gasket**  
Clean out and inspect gasket at least once a year.




**Fuel Hardware Kit**

Fuel line banjo fittings, washers etc. to fix a leak.




**Drive Belts**

Inspect often, look for cracking & fraying. If using a dual sheave alternator buy matched pair belts.

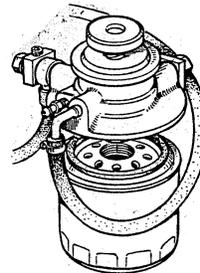

**Fuel Filters**

Carry several on-board, use only genuine Westerbeke filters. Change every 250 operating hours.

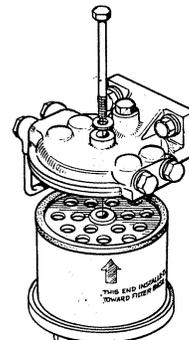


## SPARE PARTS KITS

WESTERBEKE also offers two Spare Parts Kits, each packaged in a rugged hinged toolbox. Kit "A" includes the basic spares. Kit "B" is for more extensive off-shore cruising.

### A Kit

- Impeller Kit
- Heat Exchanger Gasket
- Fuel Filter with Gasket
- Oil Filter
- Drive Belt
- Zinc Anodes
- Fuel Lift Pump Filter

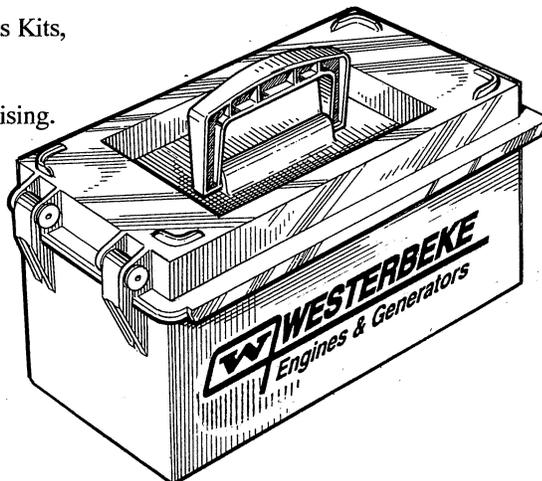

### B Kit

- Impeller Kit
- Water Pump Repair Kit
- Thermostat Kit
- Zinc Anodes
- Complete Gasket Kit
- Heat Exchanger Gasket
- Injector
- Fuel Filter with Gasket
- Oil Filter
- Drive Belt
- Fuel Lift Pump Filter





